

PQMII Power Quality Meter Instruction Manual

Software Revision: 2.2x

Manual P/N: 1601-0118-AF

Manual Order Code: GEK-106435P



GE Digital Energy

650 Markland Street, Markham, Ontario

Canada L6C 0M1

Tel: +1 905 927 7070 Fax: +1 905 927 5098

Internet: <http://www.gedigitalenergy.com>



GE Digital Energy's Quality
Management System is registered to
ISO9001:2008
QMI # 005094

© 2013 GE Multilin Incorporated. All rights reserved.

GE Digital Energy PQMII Power Quality Meter instruction manual for revision 2.2x.

PQMII Power Quality Meter, is a registered trademark of GE Multilin Inc.

The contents of this manual are the property of Multilin Inc. This documentation is furnished on license and may not be reproduced in whole or in part without the permission of GE Digital Energy. This manual is for informational use only and is subject to change without notice.

Part numbers contained in this manual are subject to change without notice, and should therefore be verified by GE Digital Energy before ordering.

Part number: 1601-0118-AF (January 2013)

Table of Contents

1: OVERVIEW	INTRODUCTION TO THE PQMII 1-1
	DESCRIPTION 1-1
	FEATURE HIGHLIGHTS 1-2
	APPLICATIONS OF THE PQMII 1-2
	STANDARD FEATURES 1-5
	METERING 1-5
	ALARMS 1-5
	COMMUNICATIONS 1-5
	FUTURE EXPANSION 1-5
	OPEN ARCHITECTURE 1-6
	OPTIONAL FEATURES 1-7
	TRANSDUCER INPUT/OUTPUTS 1-7
	CONTROL OPTION 1-7
	POWER ANALYSIS OPTION 1-8
	ENERVISTA PQMII SETUP SOFTWARE 1-12
	OVERVIEW 1-12
	ORDER CODES 1-13
	ORDER CODE TABLE 1-13
	MODIFICATIONS 1-13
	ACCESSORIES 1-13
	CONTROL POWER 1-14
	SPECIFICATIONS 1-15
	INPUTS/OUTPUTS 1-15
	TRACE MEMORY TRIGGER 1-16
	SAMPLING MODES 1-16
	OUTPUT RELAYS 1-16
	METERING 1-17
	MONITORING 1-17
	SYSTEM 1-19
	TESTING AND APPROVALS 1-19
	PHYSICAL 1-21
2: INSTALLATION	PHYSICAL CONFIGURATION 2-1
	MOUNTING 2-1
	PRODUCT IDENTIFICATION 2-2
	MANUAL AND FIRMWARE REVISIONS 2-2
	ELECTRICAL CONFIGURATION 2-3
	EXTERNAL CONNECTIONS 2-3
	WIRING DIAGRAMS 2-5
	3-WIRE SYSTEM USING TWO CTs 2-12
	CONTROL POWER 2-13
	VT INPUTS 2-13
	CT INPUTS 2-13
	OUTPUT RELAYS 2-14
	SWITCH INPUTS (OPTIONAL) 2-14
	ANALOG OUTPUTS (OPTIONAL) 2-16
	ANALOG INPUT (OPTIONAL) 2-17

RS485 SERIAL PORTS	2-17
RS232 FRONT PANEL PORT	2-19
DIELECTRIC STRENGTH TESTING	2-19

3: OPERATION	FRONT PANEL AND DISPLAY	3-1
	FRONT PANEL	3-1
	DISPLAY	3-1
	LED INDICATORS	3-2
	DESCRIPTION	3-2
	STATUS	3-2
	COMMUNICATE	3-2
	RELAYS	3-3
	KEYPAD	3-4
	DESCRIPTION	3-4
	MENU KEY	3-4
	ESCAPE KEY	3-4
	ENTER KEY	3-4
	RESET KEY	3-4
	MESSAGE KEYS	3-5
	VALUE KEYS	3-6
	DATA ENTRY METHODS	3-6
	SETPOINT ACCESS SECURITY	3-7
	DEFAULT MESSAGES	3-8
	DESCRIPTION	3-8
	ADDING A DEFAULT MESSAGE	3-8
	DELETING A DEFAULT MESSAGE	3-8
	DEFAULT MESSAGE SEQUENCE	3-9

4: SOFTWARE	INTRODUCTION	4-1
	OVERVIEW	4-1
	HARDWARE	4-2
	INSTALLING THE ENERVISTA PQMII SETUP SOFTWARE	4-3
	CONFIGURING SERIAL COMMUNICATIONS	4-7
	DESCRIPTION	4-7
	UPGRADING FIRMWARE	4-8
	DESCRIPTION	4-8
	SAVING SETPOINTS TO A FILE	4-8
	LOADING NEW FIRMWARE	4-8
	LOADING SAVED SETPOINTS	4-10
	USING THE ENERVISTA PQMII SETUP SOFTWARE	4-11
	ENTERING SETPOINTS	4-11
	VIEWING ACTUAL VALUES	4-12
	SETPOINT FILES	4-12
	GETTING HELP	4-12
	POWER ANALYSIS	4-13
	WAVEFORM CAPTURE	4-13
	HARMONIC ANALYSIS	4-13
	TRACE MEMORY	4-14
	DATA LOGGER	4-16
	VOLTAGE DISTURBANCE RECORDER	4-18
	USING ENERVISTA VIEWPOINT WITH THE PQMII	4-21
	PLUG AND PLAY EXAMPLE	4-21

5: SETPOINTS	INTRODUCTION	5-1
	SETPOINT ENTRY METHODS	5-1
	SETPOINTS MAIN MENU	5-2
	S1 PQMII SETUP	5-5
	DESCRIPTION	5-5
	PREFERENCES	5-5
	SETPOINT ACCESS	5-6
	SERIAL PORTS	5-7
	DNP 3.0 CONFIGURATION	5-8
	CLOCK	5-9
	CALCULATION PARAMETERS	5-10
	CLEAR DATA	5-12
	EVENT RECORDER	5-13
	TRACE MEMORY	5-14
	PROGRAMMABLE MESSAGE	5-17
	PRODUCT OPTIONS	5-18
	S2 SYSTEM SETUP	5-19
	CURRENT AND VOLTAGE CONFIGURATION	5-19
	ANALOG OUTPUTS	5-21
	ANALOG INPUT	5-25
	SWITCH INPUTS	5-27
	PULSE OUTPUT	5-28
	PULSE INPUT	5-29
	DATA LOGGER	5-30
	VOLTAGE DISTURBANCE	5-30
	S3 OUTPUT RELAYS	5-32
	DESCRIPTION	5-32
	ALARM RELAY	5-32
	AUXILIARY RELAYS	5-32
	S4 ALARMS/CONTROL	5-34
	CURRENT/VOLTAGE ALARMS	5-34
	HARMONIC DISTORTION	5-39
	FREQUENCY	5-40
	POWER ALARMS	5-41
	POWER FACTOR	5-43
	DEMAND ALARMS	5-46
	PULSE INPUT	5-48
	TIME	5-49
	MISCELLANEOUS ALARMS	5-50
	S5 TESTING	5-51
	TEST RELAYS AND LEDs	5-51
	CURRENT/VOLTAGE	5-51
	ANALOG OUTPUTS	5-52
	ANALOG INPUT	5-53
	SWITCH INPUTS	5-53
	FACTORY USE ONLY	5-54
6: MONITORING	ACTUAL VALUES VIEWING	6-1
	DESCRIPTION	6-1
	ACTUAL VALUES MENU	6-2
	A1 METERING	6-4
	CURRENT METERING	6-4

VOLTAGE METERING	6-6
PHASORS	6-8
POWER METERING	6-8
ENERGY METERING	6-12
DEMAND METERING	6-14
FREQUENCY METERING	6-15
PULSE INPUT COUNTERS	6-16
ANALOG INPUT	6-17
A2 STATUS	6-18
ALARMS	6-18
SWITCH STATUS	6-20
CLOCK	6-21
PROGRAMMABLE MESSAGE	6-21
A3 POWER ANALYSIS	6-22
POWER QUALITY	6-22
THD	6-22
DATA LOGGER	6-24
EVENT RECORDER	6-24
VOLTAGE DISTURBANCE	6-28
A4 PRODUCT INFO	6-30
SOFTWARE VERSIONS	6-30
MODEL INFORMATION	6-30

7: APPLICATIONS

EVENT RECORDER	7-1
LIST OF EVENTS	7-1
ACCESS TO EVENT RECORDER INFORMATION	7-6
INTERFACING USING HYPERTERMINAL	7-8
UPGRADING FIRMWARE	7-8
CYCLING POWER	7-8
HYPERTERMINAL	7-8
PHASOR IMPLEMENTATION	7-11
THEORY OF PHASOR IMPLEMENTATION	7-11
TRIGGERED TRACE MEMORY	7-13
DESCRIPTION	7-13
PULSE OUTPUT	7-14
PULSE OUTPUT CONSIDERATIONS	7-14
CONNECTING TO AN END RECEIVER USING KYZ TERMINALS	7-14
DATA LOGGER IMPLEMENTATION	7-16
DATA LOGGER STRUCTURE	7-16
MODES OF OPERATION	7-17
ACCESSING DATA LOG INFORMATION	7-17
INTERPRETING DATA LOG INFORMATION	7-17
DATA LOG PARAMETERS	7-20
READING LONG INTEGERS FROM THE MEMORY MAP	7-21
DESCRIPTION	7-21
EXAMPLE	7-21
PULSE INPUT APPLICATION	7-23
DESCRIPTION	7-23
PQMII PULSE INPUT(S) WITH A PULSE INITIATOR USING KYZ TERMINALS	7-23
PULSE TOTALIZER APPLICATION	7-24
DESCRIPTION	7-24
TOTALIZING ENERGY FROM MULTIPLE METERING LOCATIONS	7-24

8: WARRANTY	GE MULTILIN DEVICE WARRANTY	8-1
	WARRANTY STATEMENT	8-1

APPENDIX	MOD 506: CAPACITOR BANK SWITCHING	A-1
	DESCRIPTION	A-1
	SETPOINTS	A-1
	ACTUAL VALUES	A-3
	CONDITIONS REQUIRED TO ENERGIZE A STEP	A-4
	ADDITIONS TO MODBUS MEMORY MAP	A-5
	REVISION HISTORY	A-7
	RELEASE DATES	A-7
	RELEASE NOTES	A-7

INDEX



PQMII Power Quality Meter

Chapter 1: Overview

Introduction to the PQMII

Description

The GE Multilin PQMII Power Quality Meter is an ideal choice for continuous monitoring of a single or three-phase system. It provides metering for current, voltage, real power, reactive power, apparent power, energy use, cost of power, power factor, and frequency. Programmable setpoints and four assignable output relays allow control functions to be added for specific applications. This includes basic alarm on over/under current or voltage, unbalance, demand-based load shedding, and capacitor power factor correction control. More complex control is possible using the four switch inputs; these can also be used for status information such as breaker open/closed and flow information.

As a data gathering device for plant automation systems that integrate process, instrument, and electrical requirements, all monitored values are available via one of two RS485 communication ports running the Modbus protocol. If analog values are required for direct interface to a PLC, any of the monitored values can output as a 4 to 20 mA (or 0 to 1 mA) signal to replace up to four (4) separate transducers. A third RS232 communication port connects to a PC from the front panel for simultaneous access of information by other plant personnel.

With increasing use of electronic loads such as computers, ballasts, and variable frequency drives, the quality of the power system is important. With the harmonic analysis option, any phase current or voltage can be displayed and the harmonic content calculated. Knowledge of the harmonic distribution allows action to be taken to prevent overheated transformers, motors, capacitors, neutral wires, and nuisance breaker trips. Redistribution of system loading can also be determined. The PQMII can also provide waveform and data printouts to assist in problem diagnosis.

Feature Highlights

- Monitoring: A, V, VA, W, var, kWh, kvarh, kVAh, PF, Hz
- Demand metering: W, var, A, VA
- Setpoints for alarm or control from most measured values, including: unbalance, frequency, power factor, voltage, and current
- four (4) output relays / four (4) switch inputs for flexible control configuration
- four (4) isolated analog outputs replace transducers for PLC interface
- one 4 to 20 mA analog input
- Modbus communications
- Three COM ports (two rear RS485 ports and one front RS232 port) for access by process, electrical, maintenance, and instrument personnel
- Harmonic analysis for power quality review and problem correction
- 40-character display and keypad for local programming
- No-charge EnerVista PQMII Setup Software
- Simulation mode for testing and training
- Compact design for panel mount
- AC/DC control power

Applications of the PQMII

- Metering of distribution feeders, transformers, generators, capacitor banks, and motors
- Medium and low voltage three-phase systems
- Commercial, industrial, utility
- Flexible control for demand load shedding, power factor, etc.
- Power quality analysis
- System debugging

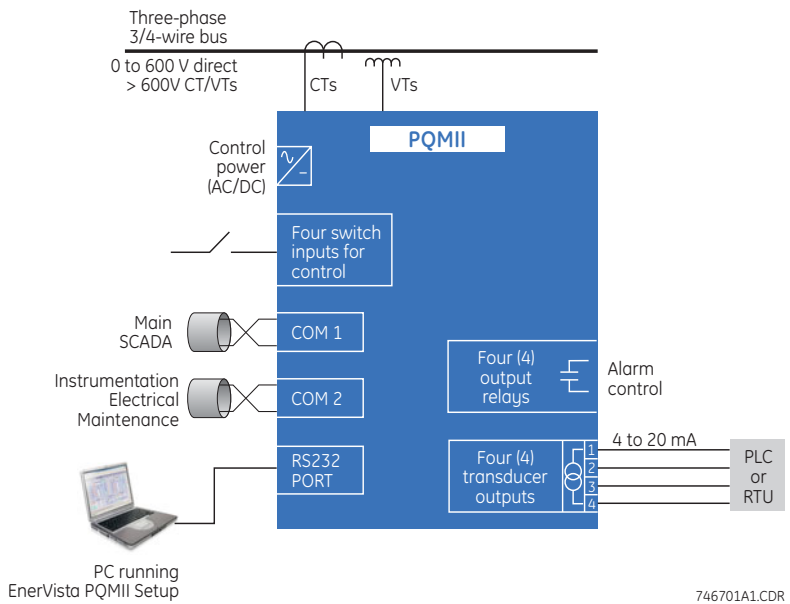


FIGURE 1-1: Single Line Diagram

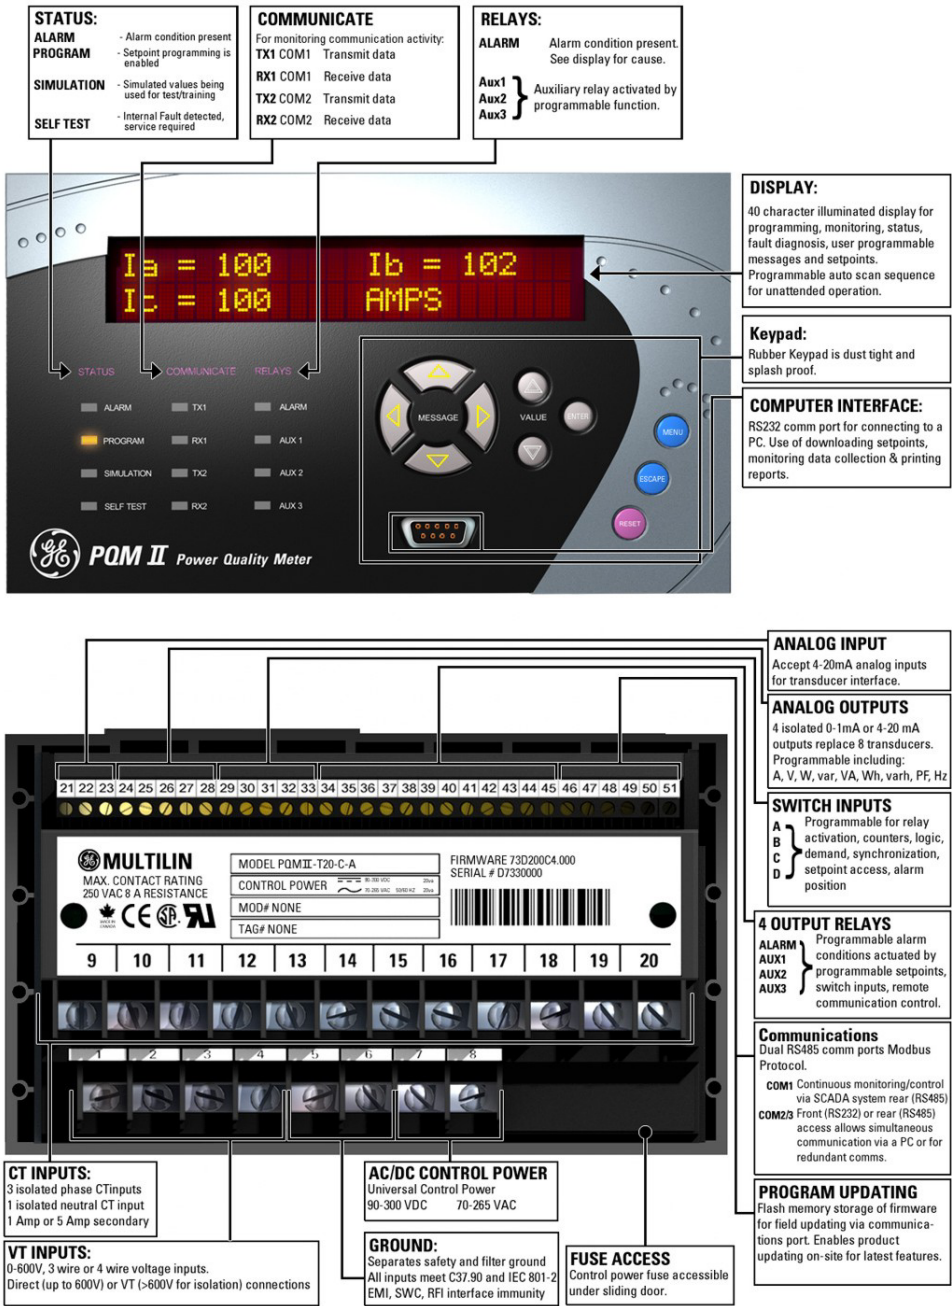


FIGURE 1-2: Feature Highlights

Standard Features

Metering

True RMS monitoring of Ia, Ib, Ic, In, Van, Vbn, Vcn, Vab, Vbc, Vca, voltage/current unbalance, power factor, line frequency, watts, vars, VA, Wh, varh, VAh, and demand readings for A, W, vars, and VA. Maximum and minimum values of measured quantities are recorded and are date and time stamped.

A 40-character liquid crystal display is used for programming setpoints and monitoring values and status.

Alarms

Alarm conditions can be set up for all measured quantities. These include overcurrent, undercurrent, neutral current, current unbalance, voltage unbalance, phase reversal, overfrequency, underfrequency, power factor, switch inputs, etc. The alarm messages are displayed in a simple and easy to understand English format.

Communications

The PQMII is equipped with one standard RS485 port utilizing the Modbus or DNP protocols. This can be used to integrate process, instrumentation, and electrical requirements in a plant automation system by connecting several PQMII meters together to a DCS or SCADA system. A PC running the EnerVista PQMII Setup Software can change system setpoints and monitor values, status, and alarms. Continuous monitoring minimizes process downtime by immediately identifying potential problems due to faults or changes from growth.

The PQMII also includes a front RS232 port which can be used for the following tasks:

- data monitoring
- problem diagnosis
- viewing event records
- trending
- printing settings and/or actual values
- loading new firmware into the PQMII

Future Expansion

Flash memory is used to store firmware within the PQMII. This allows future product upgrades to be loaded via the serial port.



FIGURE 1-3: Downloading Product Enhancements via the Serial Port

Open Architecture

PQMII units can initially be used as standalone meters. Their open architecture allows connection to other Modbus compatible devices on the same communication link. These can be integrated in a complete plant-wide system for overall process monitoring and control.

Optional Features

Transducer Input/Outputs

Four isolated 4 to 20 mA (or 0 to 1 mA depending on the installed option) analog outputs are provided that can replace up to eight transducers. The outputs can be assigned to any measured parameters for direct interface to a PLC.

One 4 to 20 mA analog input is provided to accept a transducer output for displaying information such as temperature or water level.

An additional rear RS485 communication port is provided for simultaneous monitoring by process, instrument, electrical, or maintenance personnel.

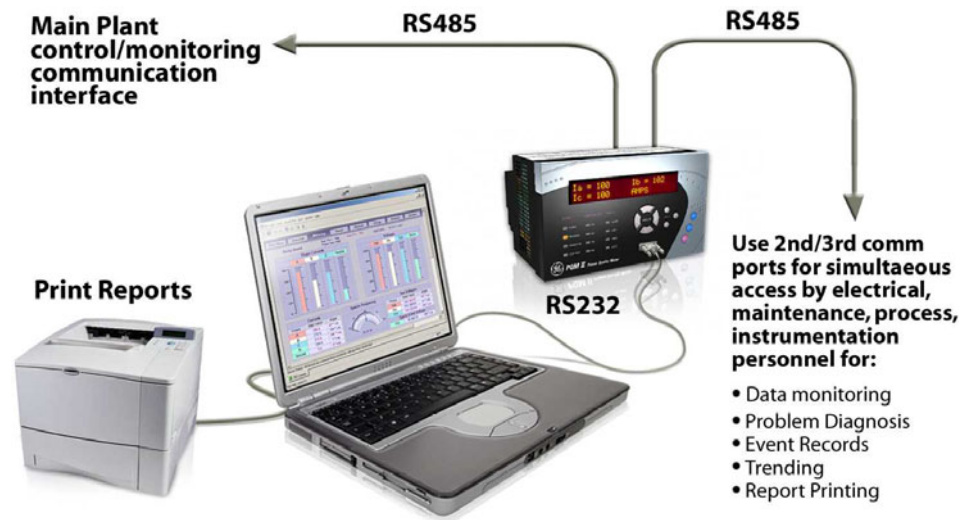


FIGURE 1-4: Additional Communication Port

Control Option

An additional three dry-contact form "C" output relays and four dry-contact switch inputs are provided. These additional relays can be combined with setpoints and inputs/outputs for control applications. Possibilities include:

- undercurrent alarm warnings for pump protection
- overvoltage/undervoltage for generators
- unbalance alarm warnings to protect rotating machines
- dual level power factor for capacitor bank switching
- underfrequency/demand output for load shedding resulting in power cost saving
- kWh, kvarh and kVAh pulse output for PLC interface
- Pulse input for totalizing quantities such as kWh, kvarh, kVAh, etc.

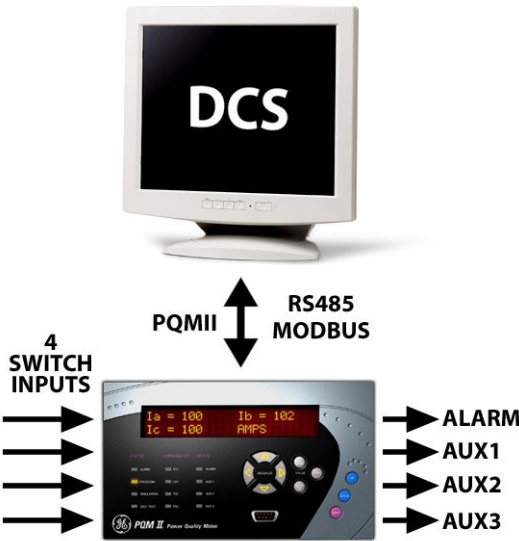


FIGURE 1-5: Switch Inputs and Outputs Relays

Power Analysis Option

Non-linear loads (such as variable speed drives, computers, and electronic ballasts) can cause unwanted harmonics that may lead to nuisance breaker tripping, telephone interference, and transformer, capacitor or motor overheating. For fault diagnostics such as detecting undersized neutral wiring, assessing the need for harmonic rated transformers, or judging the effectiveness of harmonic filters, details of the harmonic spectrum are useful and available with the power analysis option.

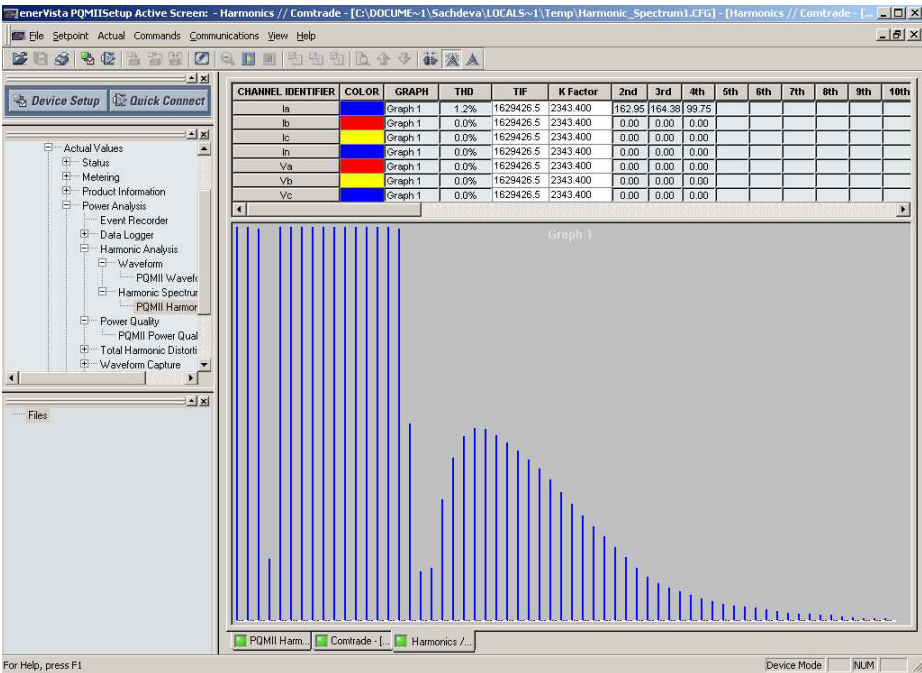


FIGURE 1-6: Harmonic Spectrum

Voltage and current waveforms can be captured and displayed on a PC with the EnerVista PQMII Setup Software or EnerVista Viewpoint. Distorted peaks or notches from SCR switching provide clues for taking corrective action.

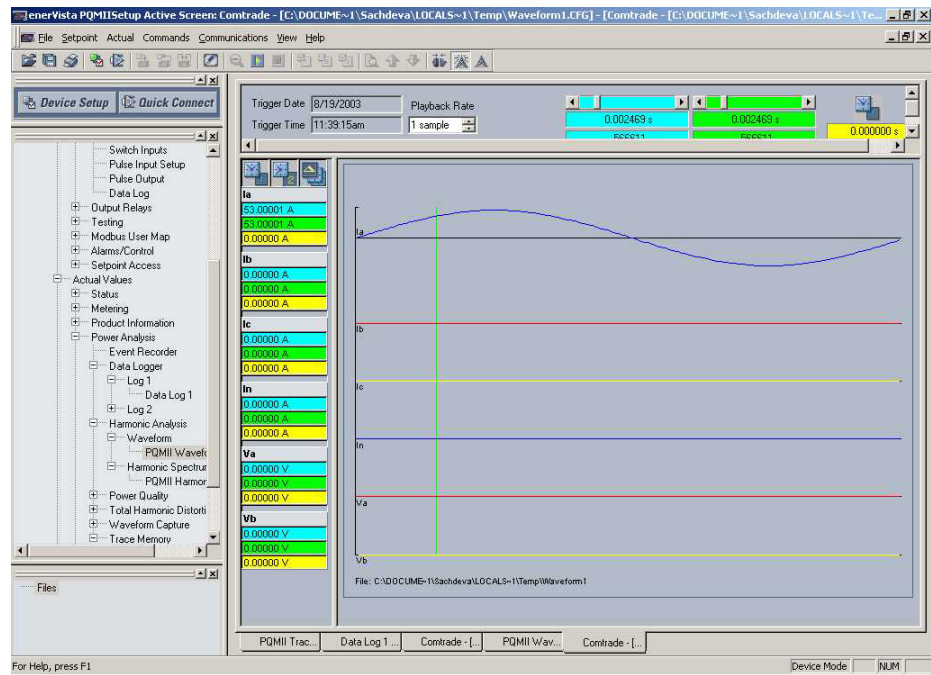


FIGURE 1-7: Captured Waveform

Alarms, triggers, and input/output events can be stored in a 150-event record and time/date stamped by the internal clock. This is useful for diagnosing problems and system activity. The event record is available through serial communication. Minimum and maximum values are also continuously updated and time/date stamped.

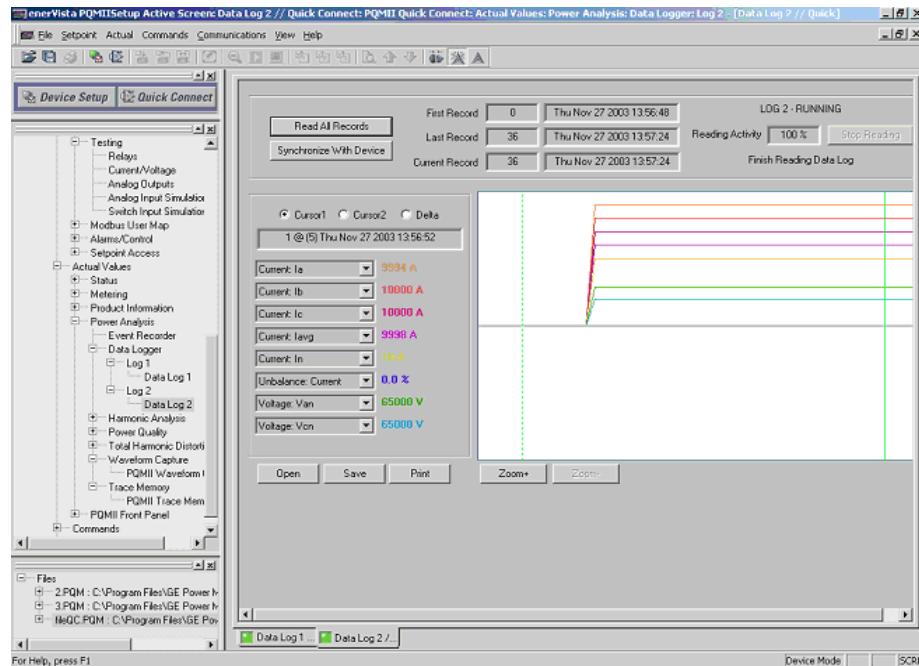


FIGURE 1–8: Data Logger

Routine event logs of all measured quantities can be created, saved to a file, and/or printed.

For additional information on waveform sampling and analysis features, see *Power Analysis* on page 4–13.

The power analysis option also provides a Trace Memory feature. This feature can be used to record specified parameters based on the user defined triggers.

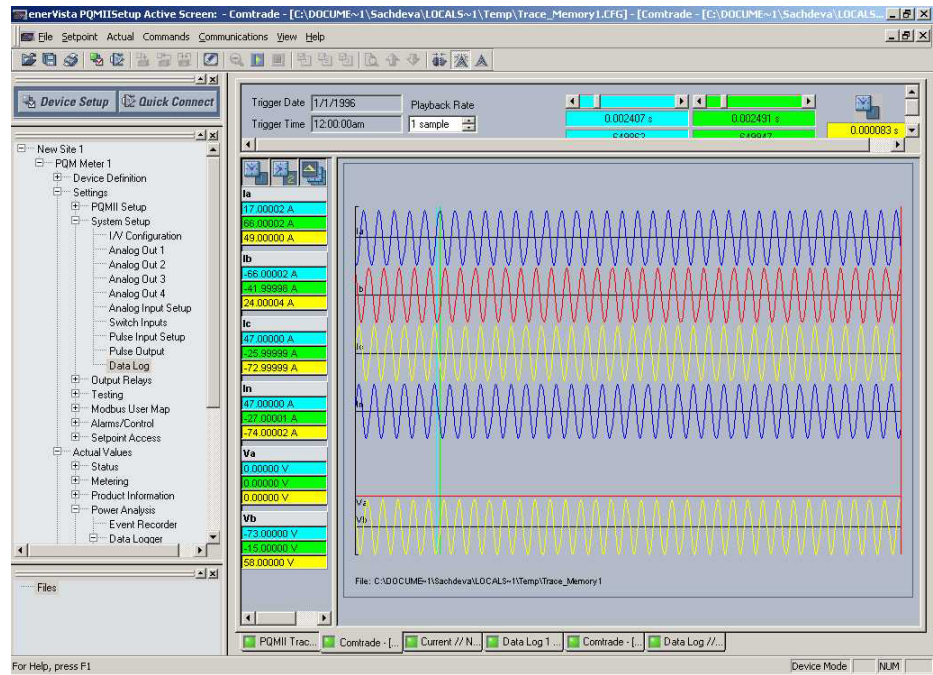


FIGURE 1–9: Trace Memory Capture

EnerVista PQMII Setup Software

Overview

All data continuously gathered by the PQMII can be transferred to a third party software program for display, control, or analysis through the communications interface. The EnerVista PQMII Setup Software allows the user to view and manipulate this data and assists in programming the PQMII. Some of the tasks that can be executed using the EnerVista PQMII Setup Software package include:

- reading metered data
- monitoring system status
- changing PQMII setpoints on-line
- saving setpoints to a file and downloading into any PQMII
- capturing and displaying voltage and current waveforms for analysis
- recording demand profiles for various measured quantities
- troubleshooting communication problems with a built in debugger
- printing graphs, charts, setpoints, and actual values

The EnerVista PQMII Setup Software is fully described in *Software* on page 4–1.

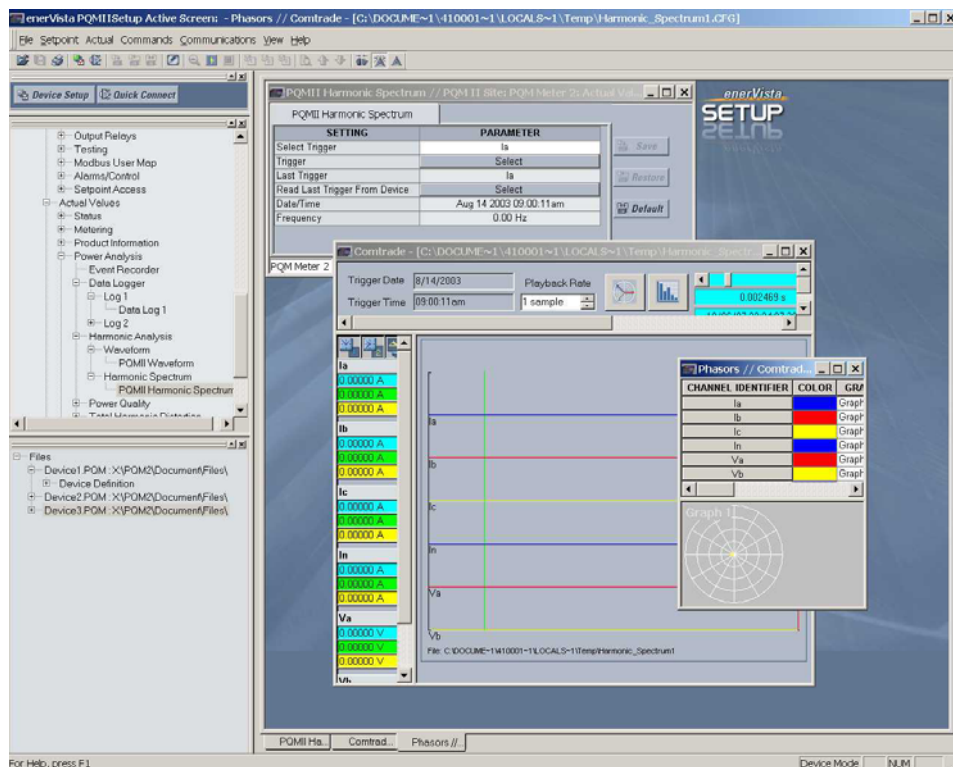


FIGURE 1-10: EnerVista PQMII Setup Software Main Window

Order Codes

Order Code Table

The order code for all options is: **PQMII-T20-C-A**

Table 1: Order Codes

	PQMII	*	*	*	
Basic Unit	PQMII	-	-	-	Basic unit with display, all current/voltage/power measurements, one (1) RS485 communication port, one (1) RS232 communication port
Transducer Option		T20	-	-	Four (4) isolated analog outputs, 0-20 mA and 4-20 mA assignable to all measured parameters, 4-20 mA analog input, 2nd RS485 communication port
		T1	-	-	Four (4) isolated analog outputs, 0-1 mA assignable to all measured parameters, 4-20 mA analog input, 2nd RS485 communication port
Control Option			C	-	Three (3) additional programmable output relays (for a total of 4), 4 programmable switch inputs
Power Analysis Option				A	Harmonic analysis, triggered trace memory, waveform capture, event recorder, data logger, voltage disturbance recorder*

* The voltage disturbance recorder is only available with the 25 MHz processor.

Modifications

Consult the factory for any additional modification costs):

- MOD 501: 20 to 60 V DC / 20 to 48 V AC Control Power
- MOD 504: Removable Terminal Blocks
- MOD 506: 4-Step Capacitor Bank Switching (Available with Option "C" only)
- MOD 525: Harsh Environments Conformal Coating.

Accessories

Consult the factory for any additional accessory costs:

- EnerVista PQMII Setup Software (included with the PQMII; also available at <http://www.enerVista.com>)
- RS232 to RS485 converter (required to connect a PC to the PQMII RS485 ports)
- GE MultiNET RS485 serial-to-Ethernet converter (required for connection to an Ethernet network)
- RS485 terminating network, the SCI Terminator Assembly, Part #1810-0106, is recommended.

Control Power

- 90 to 300 V DC / 70 to 265 V AC standard
- 20 to 60 V DC / 20 to 48 V AC (MOD 501)

Specifications

Specifications are subject to change without notice.

Inputs/Outputs

CURRENT INPUTS

Conversion:	true RMS, 64 samples/cycle
CT Input:	1 A and 5 A secondary
Burden:	0.2 VA
Overload:	20 × CT for 1 sec. 100 × CT for 0.2 sec.
Range:	1 to 150% of CT primary
Full Scale:	150% of CT primary
Frequency:	up to 32nd harmonic
Accuracy:	±0.2% of full scale at <1.20 × CT

VOLTAGE INPUTS

Conversion: true RMS, 64 samples/cycle
VT pri./sec.: 120 to 72000 : 69 to 240, or Direct
VT Ratio: 1:1 to 3500:1

Burden: 2.2 M Ω
 Input Range: 40 to 600 V AC
 Full scale:
 for VT input \leq 150 V AC: 150 V AC
 for VT input $>$ 150 V AC: 600 V AC
 Frequency: up to 32nd harmonic
 Accuracy: \pm 0.2% of full scale

SWITCH INPUTS

Type: dry contacts
 Resistance: 1000 Ω max ON resistance
 Output: 24 V DC at 2 mA (pulsed)
 Duration: 100 ms minimum

ANALOG OUTPUT (0–1 MA)

Max. load: 2400 Ω
 Max. output: 1.1 mA
 Accuracy: \pm 1% of full-scale reading
 Isolation: \pm 36 V DC isolated, active source

ANALOG OUTPUT (4–20 MA)

Max. load: 600 Ω
 Max. output: 21 mA
 Accuracy: \pm 1% of full-scale reading
 Isolation: \pm 36 V DC isolated, active source

PULSE OUTPUT

Parameters: +kWh, -kWh, +kvarh, -kvarh, kVAh
 Interval: 1 to 65000 in steps of 1
 Pulse width: 100 to 2000 ms in steps of 10
 Minimum pulse interval: 500 ms
 Accuracy: \pm 10 ms

PULSE INPUT

Max. inputs: 4
 Min. pulse width: 150 ms
 Min. off time: 200 ms

Trace Memory Trigger

TRACE MEMORY TRIGGER

Input: 2 data cycles (current, voltage)
 Time delay: 0 to 30 cycles
 Current input full scale: 150% of CT primary
 Voltage input full scale: 600 V AC

TRIGGER LEVEL PICKUP ACCURACY

Overcurrent: \pm 2% of full scale
 Overvoltage: \pm 2% of full scale
 Undervoltage: \pm 3% of full scale

Sampling Modes

METERED VALUES

Samples per cycle: 64
 Inputs sampled at a time: all
 Duration: 2 cycles

TRACE MEMORY

Samples per cycle: 16
Inputs sampled at a time: all
Duration:..... continuous

HARMONIC SPECTRUM

Samples per cycle: 256
Inputs sampled at a time: 1
Duration:..... 1 cycle

VOLTAGE DISTURBANCE RECORDER

Samples per half-cycle:8
Inputs sampled:all measured voltages
Duration:0.5 cycles to 1 minute

Output Relays

MAKE/CARRY

Continuous:..... 5 A
0.1 second:..... 30 A

BREAK

Resistive:.....	5 A at 30 V DC, 125/250 V AC
	0.5 A at 125 V DC
	0.3 A at 250 V DC
Inductive (L/R = 7 ms):	5 A at 30 V DC, 125/250 V AC
	0.25 A at 125 V DC
	0.15 A at 250 V DC

Metering

MEASURED VALUES ACCURACY (SPECIFIED FOR 0 TO 40°C)

Voltage:	±0.2% of full-scale
Current:	±0.2% of full-scale
Voltage unbalance:	±1% of full-scale
Current unbalance:	±1% of full-scale
kW:	±0.4% of full scale
kvar:	±0.4% of full scale
kVA:	±0.4% of full scale
kWh:	±0.4% of full scale
kvarh:	±0.4% of full scale
kVAh:	±0.4% of full scale
Power factor:	±1% of full-scale
Frequency:	±0.02 Hz
kW demand:	±0.4% of full-scale
kvar demand:	±0.4% of full-scale
kVA demand:	±0.4% of full-scale
Current demand:	±0.4% of full-scale
Current THD:	±2.0% of full-scale
Voltage THD:	±2.0% of full-scale
Crest factor:	±0.4% of full-scale

MEASURED VALUES RANGE

Voltage:..... 20 to 100% of VT
Current:..... 1 to 150% of CT

Voltage unbalance:	0 to 100%
Current unbalance:	0 to 100%
Real power:.....	0 to $\pm 999,999.99$ kW
Reactive power:	0 to $\pm 999,999.99$ kvar
Apparent power:	0 to 999,999.99 kVA
Real energy:.....	2^{32} kWh
Reactive energy:	2^{32} kvarh
Apparent energy:	2^{32} kVAh
Power factor:	0.00 to ± 1.00
Frequency:	20.00 to 70.00 Hz
kw demand:.....	0 to $\pm 999,999.99$ kW
kvar demand:.....	0 to $\pm 999,999.99$ kvar
kVA demand:.....	0 to 999,999.99 kVA
Current demand:	0 to 7500 A
THD (current and voltage):	0.0 to 100.0%
Crest factor:.....	1 to 9.99

Monitoring

UNDERVOLTAGE MONITORING

Req'd voltage:	>20 V applied in all phases
Pickup:.....	0.50 to $0.99 \times VT$ in steps of 0.01
Dropout:	103% of pickup
Time delay:	0.5 to 600.0 s in steps of 0.5
Phases:.....	Any 1 / Any 2 / All 3 (programmable) have to be \leq pickup to operate
Accuracy:.....	per voltage input
Timing accuracy:	-0 / +1 sec.

OVERVOLTAGE MONITORING

Pickup:.....	1.01 to $1.25 \times VT$ in steps of 0.01
Dropout:	97% of pickup
Time delay:	0.5 to 600.0 s in steps of 0.5
Phases:.....	Any 1 / Any 2 / All 3 (programmable) must be \geq pickup to operate
Accuracy:.....	Per voltage input
Timing accuracy:	-0 / +1 sec.

UNDERFREQUENCY MONITORING

Req'd voltage:	>30 V applied in phase A
Pickup:.....	20.00 to 70.00 Hz in steps of 0.01
Dropout:	Pickup + 0.03 Hz
Time delay:	0.1 to 10.0 s in steps of 0.1
Accuracy:.....	0.02 Hz
Timing accuracy:	± 100 ms

OVERFREQUENCY MONITORING

Req'd voltage:	>30 V applied in phase A
Pickup:.....	20.00 to 70.00 Hz in steps of 0.01
Dropout:	Pickup - 0.03 Hz
Time delay:	0.0 to 10.0 s in steps of 0.1
Accuracy:.....	0.02 Hz
Timing accuracy:	± 100 ms

POWER FACTOR MONITORING

Req'd voltage: >20 V applied in phase A
Pickup: 0.50 lag to 0.50 lead step 0.01
Dropout: 0.50 lag to 0.50 lead step 0.01
Time delay: 0.5 to 600.0 s in steps of 0.5
Timing accuracy: -0.5/+1 sec.

DEMAND MONITORING

Measured values: Phase A/B/C/N Current (A)
 3 ϕ Real Power (kW)
 3 ϕ Reactive Power (kvar)
 3 ϕ Apparent Power (kVA)

Measurement type (programmable):
 Thermal Exponential, 90% response time: 5 to 60 min. in steps of 1
 Block interval: 5 to 60 min. in steps of 1
 Rolling Demand Time Interval: 5 to 60 min. in steps of 1
 Pickup: 10 to 7500 A in steps of 1
 1 to 65000 kW in steps of 1
 1 to 65000 kvar in steps of 1
 1 to 65000 kVA in steps of 1

VOLTAGE DISTURBANCE RECORDER

Required voltage: >20 V or 10% (whichever is greater) applied in each measured phase

Minimum nominal voltage: 60 V

Phases recorded: all three phases recorded independently

Conversion: true RMS, 8 samples/half-cycle

Sag:

Pickup level: 0.20 to $0.90 \times V_T$ in steps of 0.01

Dropout level: pickup + 10% of nominal

Swell:

Pickup level: 1.01 to $1.50 \times V_T$ in steps of 0.01

Dropout level: pickup – 10% of nominal

System

COMMUNICATIONS

COM1/2:	RS485 2-wire, half duplex, isolated
COM3:	RS232 9-pin
Baud rate:	1200 to 19200
Protocols:	Modbus [®] RTU; DNP 3.0
Functions:	Read/write setpoints, read actual values, execute commands, read device status loopback test

CLOCK

Accuracy: ± 1 min. / 30 days at $25 \pm 5^\circ\text{C}$
Resolution: 1 sec.

CONTROL POWER

Input:..... 90 to 300 V DC or 70 to 265 V AC at 50/60 Hz
Power:..... nominal 10 VA, max. 20 VA
Holdup:..... 100 ms typical (at 120 V AC / 125 V DC)



It is recommended that the PQMII be powered up at least once per year to avoid deterioration of the electrolytic capacitors in the power supply.

FUSE TYPE/RATING

5 × 20mm, 2.5 A, 250V

Slow blow, High breaking capacity

Testing and Approvals

TYPE TESTS

TEST	REFERENCE STANDARD	TEST LEVEL
Dielectric voltage withstand	EN60255-5	2300-3700VAC
Impulse voltage withstand	EN60255-5	5KV
Insulation resistance	EN60255-5	500VDC >100mohm
Damped Oscillatory	IEC61000-4-18/IEC60255-22-1	2.5KV CM, 1KV DM
Electrostatic Discharge	EN61000-4-2/IEC60255-22-2	Level II
RF immunity	EN61000-4-3/IEC60255-22-3	10V/m 80-1Ghz
Fast Transient Disturbance	EN61000-4-4/IEC60255-22-4	Class A and B
Surge Immunity	EN61000-4-5/IEC60255-22-5	4Kv, 2KV
Conducted RF Immunity	EN61000-4-6/IEC60255-22-6	10Vrms
Radiated & Conducted Emissions	CISPR11 /CISPR22/ IEC60255-25	Class A
Sinusoidal Vibration	IEC60255-21-1	Class 1
Shock & Bump	IEC60255-21-2	Class 1
Power magnetic Immunity	IEC61000-4-8	Level 4
Pulse Magnetic Immunity	IEC61000-4-9	Level 4
Voltage Dip & interruption	IEC61000-4-11	0,40,70,% dips,250/300cycle interrupts
Ingress Protection	IEC60529	IP40 front, IP20 Back
Environmental (Cold)	IEC60068-2-1	-10C 16 hrs
Environmental (Dry heat)	IEC60068-2-2	70C 16hrs
Relative Humidity Cyclic	IEC60068-2-30	6day variant 2
EFT	IEEE/ANSI C37.90.1	4KV, 2.5Khz
Damped Oscillatory	IEEE/ANSI C37.90.1	2.5KV,1Mhz
Altitude:	2000m (max)	
Pollution Degree:	II	
Overvoltage Category:	II	
Ingress protection:	IP40 Front, IP20 back	

APPROVALS

	Applicable Council Directive	According to
CE compliance	Low voltage directive	EN60255-5
	EMC Directive	EN61000-6-2
North America	cULus e83849 NKCR/7	UL508
		UL1053
		C22.2.No 14
ISO	Manufactured under a registered quality program	ISO9001

ENVIRONMENTAL

Ambient temperatures:	
Operating range:	-10C to 60C
Humidity:	Operating up to 95% (non condensing) @ 55C (As per IEC60068-2-30 Variant 2, 6days)
Ventillation:	No special ventilation required as long as ambient temperature remains within specifications. Ventilation may be required in enclosures exposed to direct sunlight.
Cleaning:	May be cleaned with a damp cloth.

PRODUCTION TESTS

Dielectric Strength: 2200 VAC for 1 second (as per UL & CE)

Physical**PACKAGING**

Shipping box: 8½" × 6" × 6" (L × H × D)
21.5cm × 15.2cm × 15.2 cm



Digital Energy



PQMII Power Quality Meter

Chapter 2: Installation

Physical Configuration

Mounting

Physical dimensions and required cutout dimensions for the PQMII are shown below. Once the cutout and mounting holes are made in the panel, use the eight #6 self-tapping screws provided to secure the PQMII. Mount the unit on a panel or switchgear door to allow operator access to the keypad and indicators.

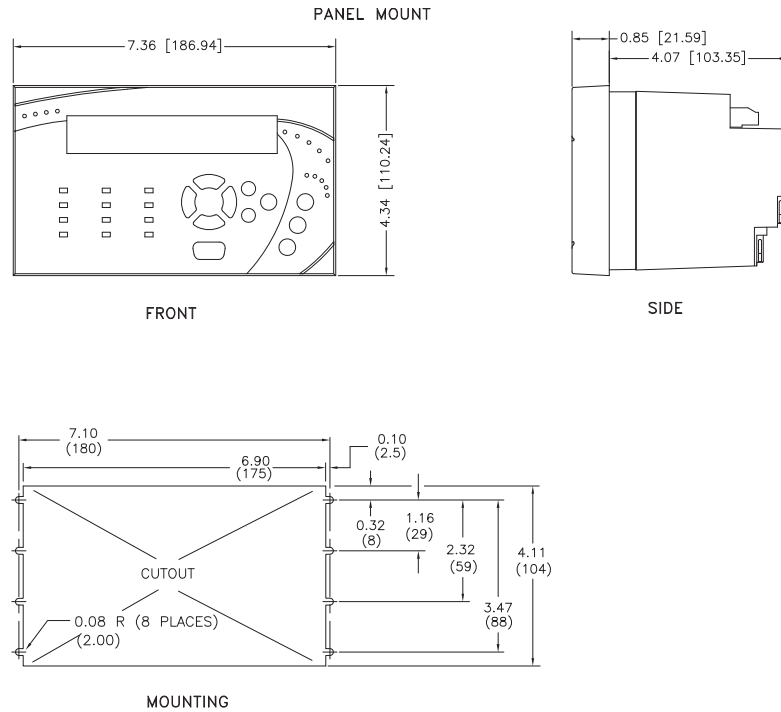


FIGURE 2-1: Physical Dimensions

Product Identification

Product attributes vary according to the configuration and options selected on the customer order. Before applying power to the PQMII, examine the label on the back and ensure the correct options are installed.

The following section explains the information included on the label shown below:




 PQM II			MODEL NO.: PQMII-T20-C-A				VERSION: 100.000				
MAXIMUM CONTACT RATING 250 VAC 10A RESISTIVE 1/4HP 250VAC 1/2HP 125VAC 			CONTROL VOLTAGE: 90-300VDC 20VA 70-265VAC 50/60HZ 20VA				SERIAL No.: C7360001 				
			CUSTOMER TAG No.: 1234-567-89								
9	10	11	12	13	14	15	16	17	18	19	20

FIGURE 2-2: Product Label

- **Model No:** Shows the PQMII configuration. The model number for a basic panel mount PQMII is "PQMII". T20, C, and A appear in the model number only if the Transducer, Control, or Power Analysis options are installed.
- **Supply Voltage:** Indicates the power supply input configuration installed in the PQMII. The PQMII shown in this example can accept any AC 50/60Hz voltage from 70 to 265 V AC or DC voltage from 90 to 300 V DC.
- **Tag#:** An optional identification number specified by the customer.
- **Mod#:** Indicates if any unique features have been installed for special customer orders. This number should be available when contacting GE Multilin for technical support.
- **Version:** An internal GE Multilin number that should be available when contacting us for technical support.
- **Serial No.:** Indicates the serial number in numeric and barcode formats. Record this number when contacting GE Multilin for technical support.

Manual and Firmware Revisions

Each instruction manual revision corresponds to a particular firmware revision. The manual revision is located on the title page as part of the manual part number (the format is 1601-nnnn-revision). The firmware revision is located on that same page, just above the manual part number, and is also loaded in the PQMII, where it can be viewed by scrolling to the **A4 PRODUCT INFO** ⇒ **SOFTWARE VERSIONS** ⇒ **MAIN PROGRAM VERSION** message.

When using the instruction manual to determine PQMII features and settings, ensure that the instruction manual revision corresponds to the firmware revision installed in the PQMII.

Electrical Configuration

External Connections

Signal wiring is to Terminals 21 to 51. These terminals accommodate wires sizes up to 12 gauge. Please note that the maximum torque that can be applied to terminals 21 to 51 is 0.5 Nm (or 4.4 in ·lb.). CT, VT, and control power connections are made using Terminals 1 to 20. These #8 screw ring terminals accept wire sizes as large as 8 gauge. Consult the wiring diagrams for suggested wiring. A minimal configuration includes connections for control power, phase CTs/VTs, and the alarm relay; other features can be wired as required. Considerations for wiring each feature are given in the sections that follow.

Table 1: PQMII External Connections

Terminal	Description	Terminal	Description
VT / Control Power Row (1 to 8)		25	Analog out 4+
1	V1 Voltage input	26	Analog out 3+
2	V2 Voltage input	27	Analog out 2+
3	V3 Voltage input	28	Analog out 1+

Table 1: PQMII External Connections

Terminal	Description
4	Vn Voltage input
5	Filter ground
6	Safety ground
7	Control neutral (-)
8	Control live (+)
CT Row (9 to 20)	
9	Phase A CT 5A
10	Phase A CT 1A
11	Phase A CT COM
12	Phase B CT 5A
13	Phase B CT 1A
14	Phase B CT COM
15	Phase C CT 5A
16	Phase C CT 1A
17	Phase C CT COM
18	Neutral CT 5A
19	Neutral CT 1A
20	Neutral CT COM
Signal Upper Row (21 to 51)	
21	Analog shield
22	Analog in -
23	Analog in +
24	Analog out com

Terminal	Description
29	Switch 4 input
30	Switch 3 input
31	Switch 2 input
32	Switch 1 input
33	+24 V DC switch com
34	Aux3 relay NC
35	Aux3 relay COM
36	Aux3 relay NO
37	Aux2 relay NC
38	Aux2 relay COM
39	Aux2 relay NO
40	Aux1 relay NC
41	Aux1 relay COM
42	Aux1 relay NO
43	Alarm relay NC
44	Alarm relay COM
45	Alarm relay NO
46	Comm 1 COM
47	Comm 1 -
48	Comm 1 +
49	Comm 2 COM
50	Comm 2 -
51	Comm 2 +

Wiring Diagrams

This wiring diagram below shows the typical 4-wire wye connection which will cover any voltage range. Select the **S2 SYSTEM SETUP** ⇒ **CURRENT/VOLTAGE CONFIGURATION** ⇒ **VT WIRING**: “4 Wire Wye (3 VTs)” setpoint

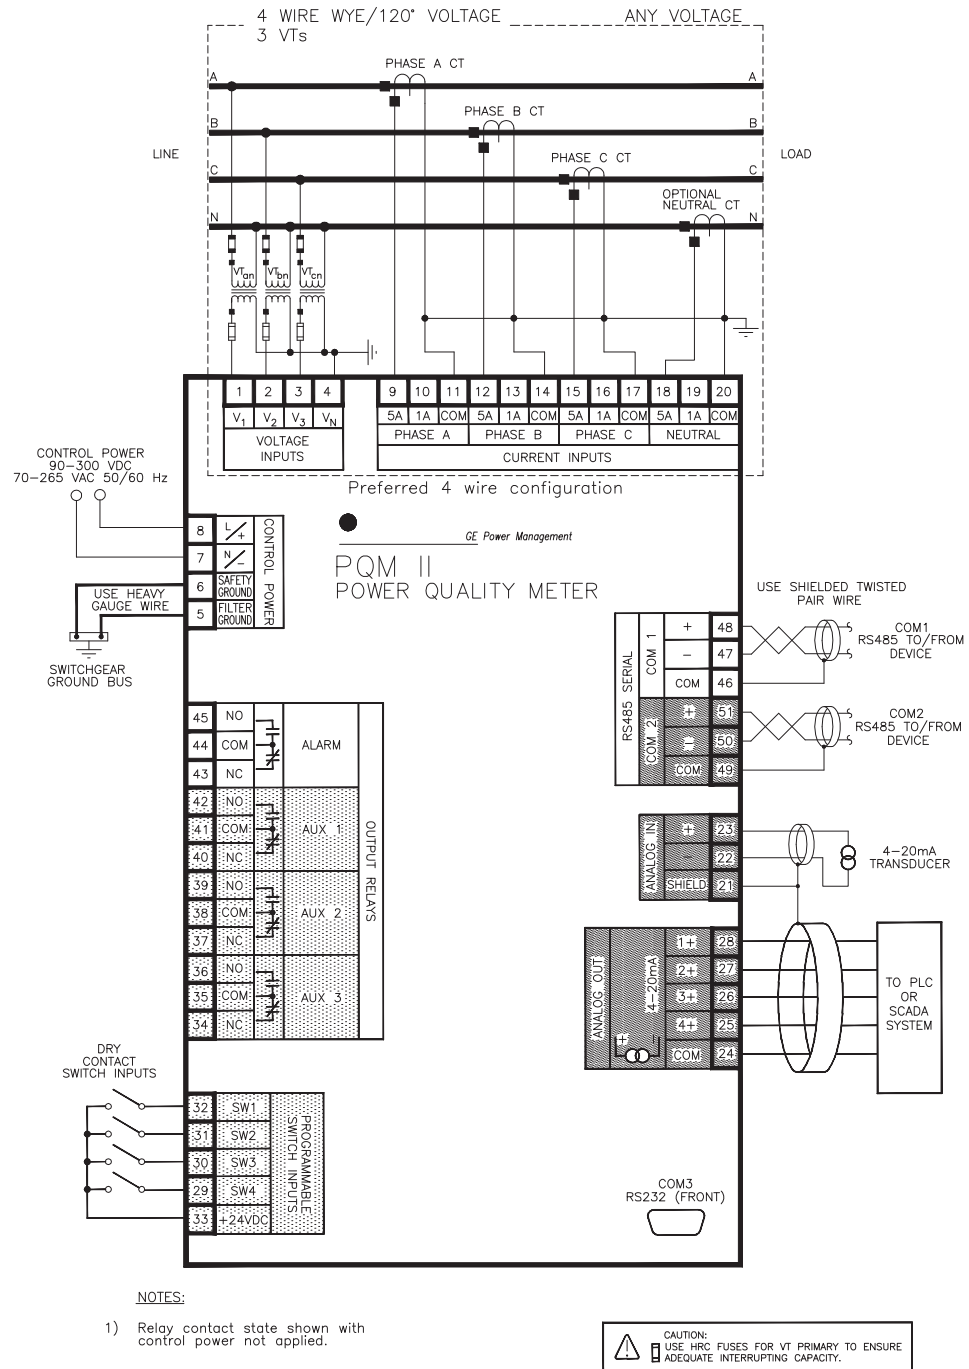


FIGURE 2-3: Wiring Diagram 4-wire Wye (3 VTs)

The 2½ element 4-wire wye connection can be used for situations where cost or size restrictions limit the number of VTs to two. With this connection, Phase Vbn voltage is calculated using the two existing voltages. Select the **S2 SYSTEM SETUP** ⇒ **CURRENT/VOLTAGE CONFIGURATION** ⇒ **VT WIRING**: “4 WIRE WYE (2 VTs)” setpoint.

This wiring configuration will only provide accurate power measurements if the voltages are balanced.

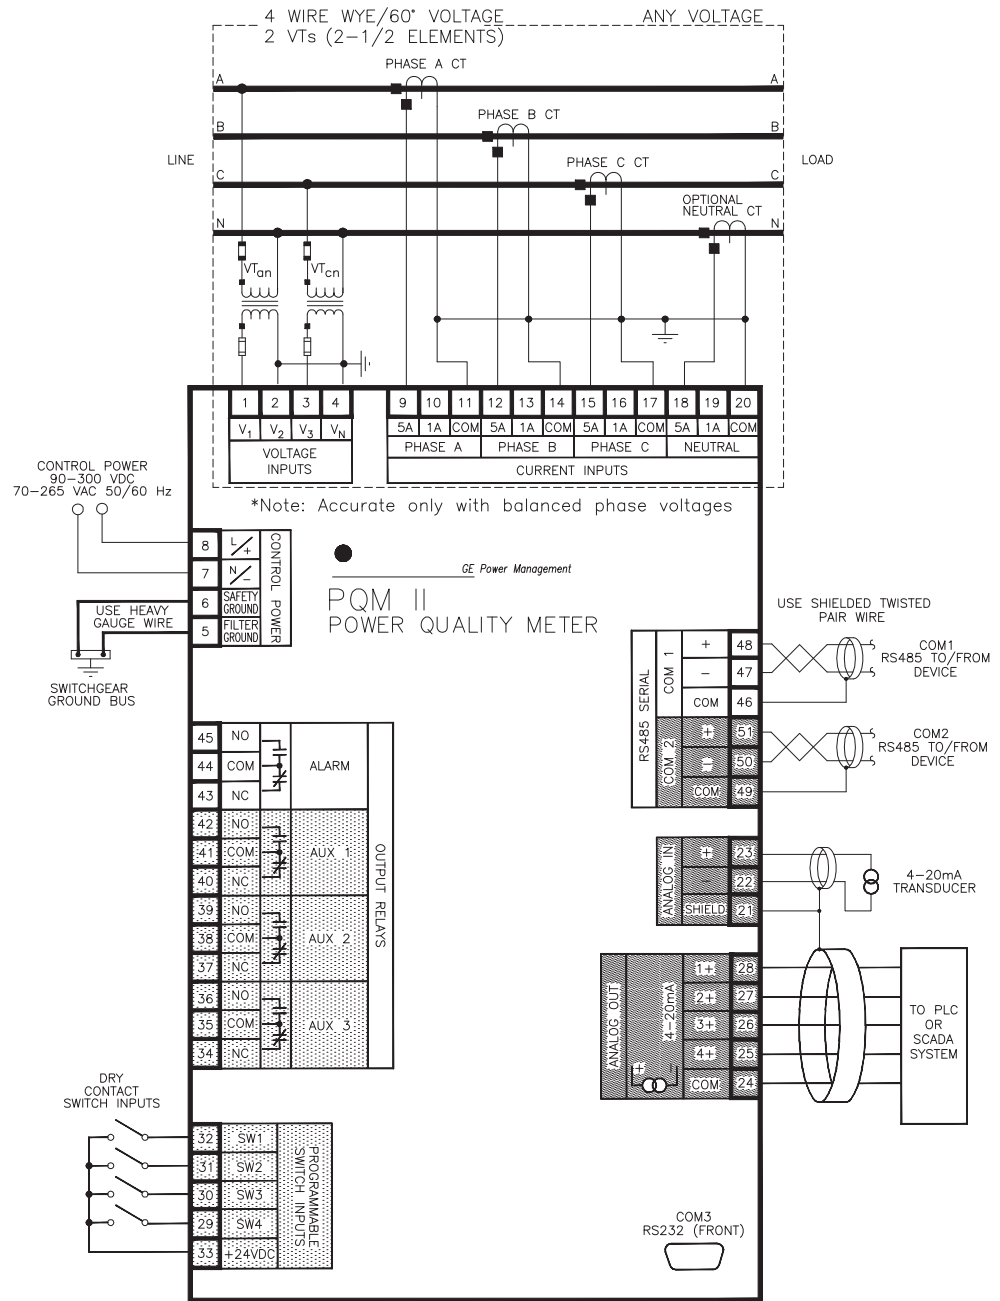


FIGURE 2-4: Wiring Diagram 4-wire Wye (2 VTs)

Four-wire systems with voltages 347 V L-N or less can be directly connected to the PQMII without VTs. Select the **S2 SYSTEM SETUP** ⇒ **CURRENT/VOLTAGE CONFIGURATION** ⇒ **VT WIRING**: “4 WIRE WYE DIRECT” setpoint.

The PQMII voltage inputs should be directly connected using HRC fuses rated at 2 A to ensure adequate interrupting capacity.

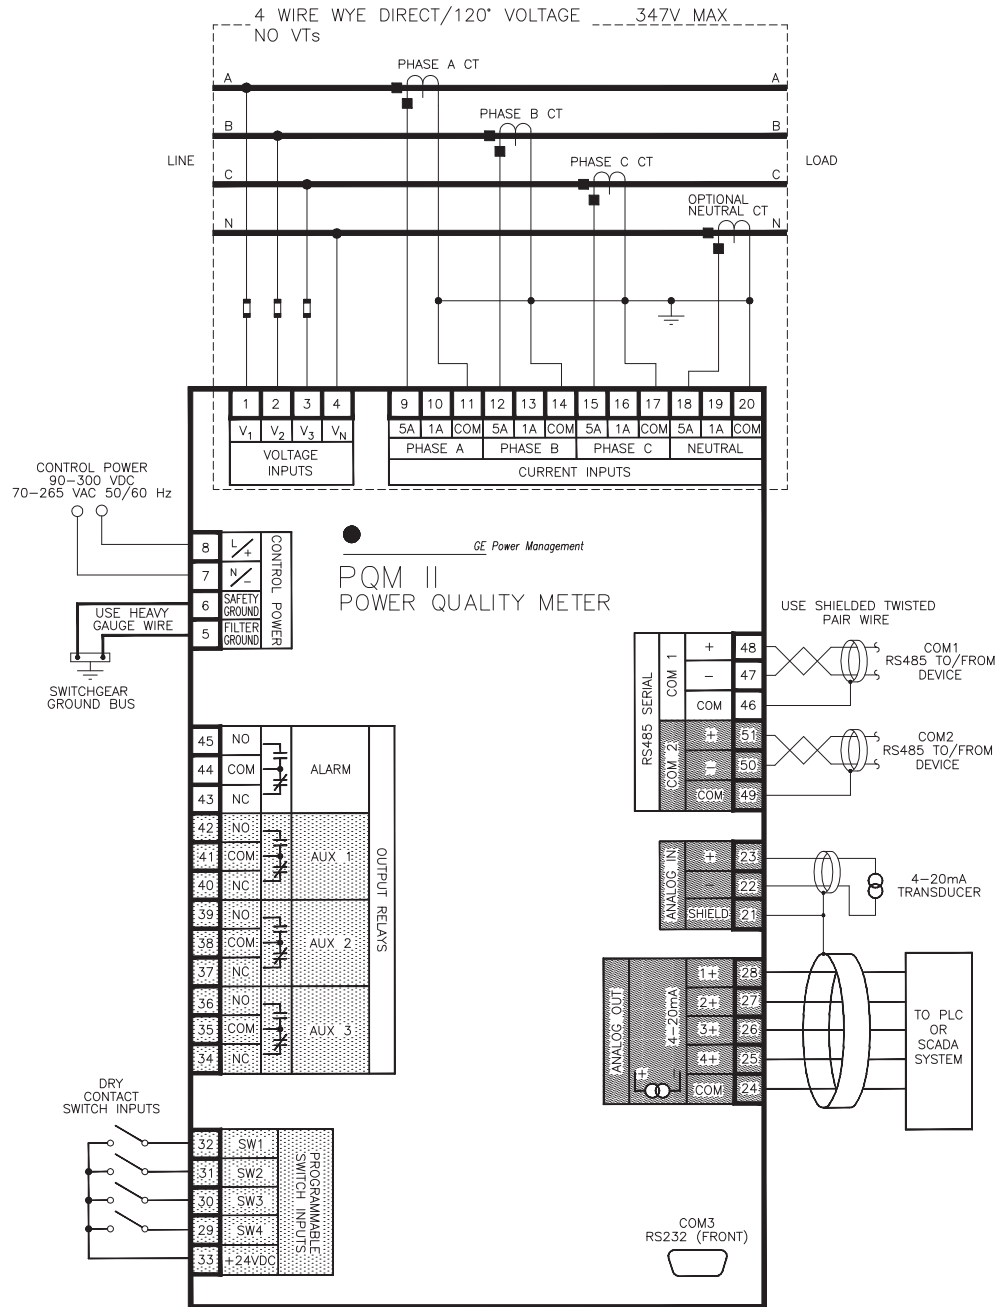


FIGURE 2-5: Wiring Diagram 4-wire Wye Direct (No VTs)

This diagram shows the typical 3-wire delta connection which will cover any voltage range. Select the **S2 SYSTEM SETUP** ⇒ **↓ CURRENT/VOLTAGE CONFIGURATION** ⇒ **↓ VT WIRING**: “3 WIRE DELTA (2 VTs)” setpoint.


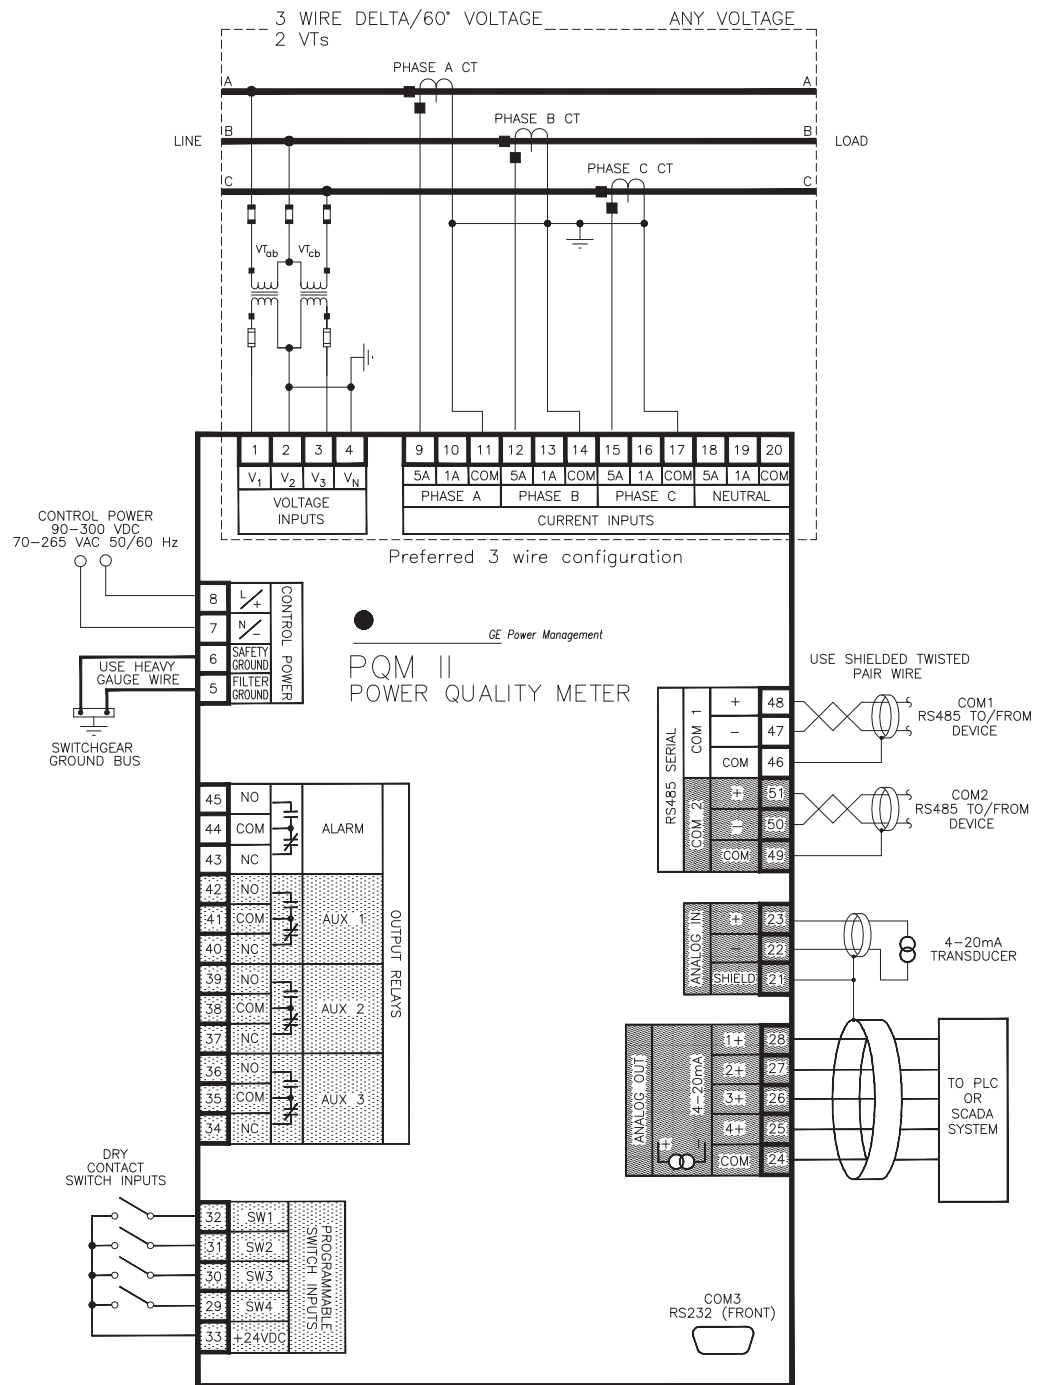


FIGURE 2-6: Wiring Diagram 3-wire Delta (2 VTs)

Three-wire systems with voltages 600 V (L-L) or less can be directly connected to the PQMII without VTs. Select the **S2 SYSTEM SETUP** ⇒ **↓ CURRENT/VOLTAGE CONFIGURATION** ⇒ **↓ VT WIRING: “3 WIRE DIRECT”** setpoint.

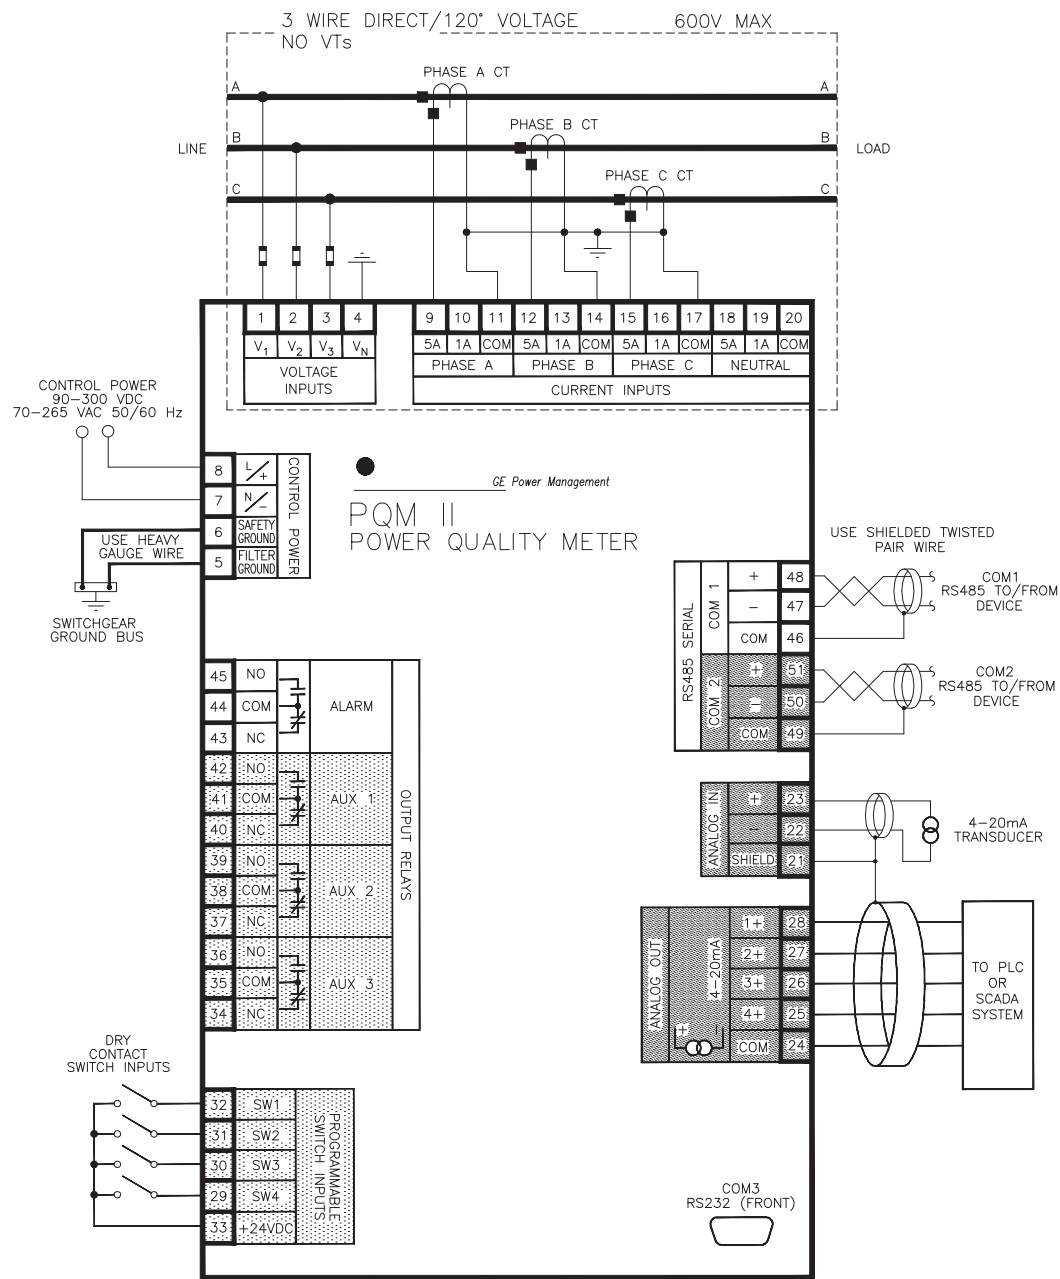The PQMII voltage inputs should be directly connected using HRC fuses rated at 2 amps to ensure adequate interrupting capacity.



NOTES:

- 1) Relay contact state shown with control power not applied.




Transducer Option

Control Option

746755A1.DWG

FIGURE 2-7: Wiring Diagram 3-wire Direct (No VTs)

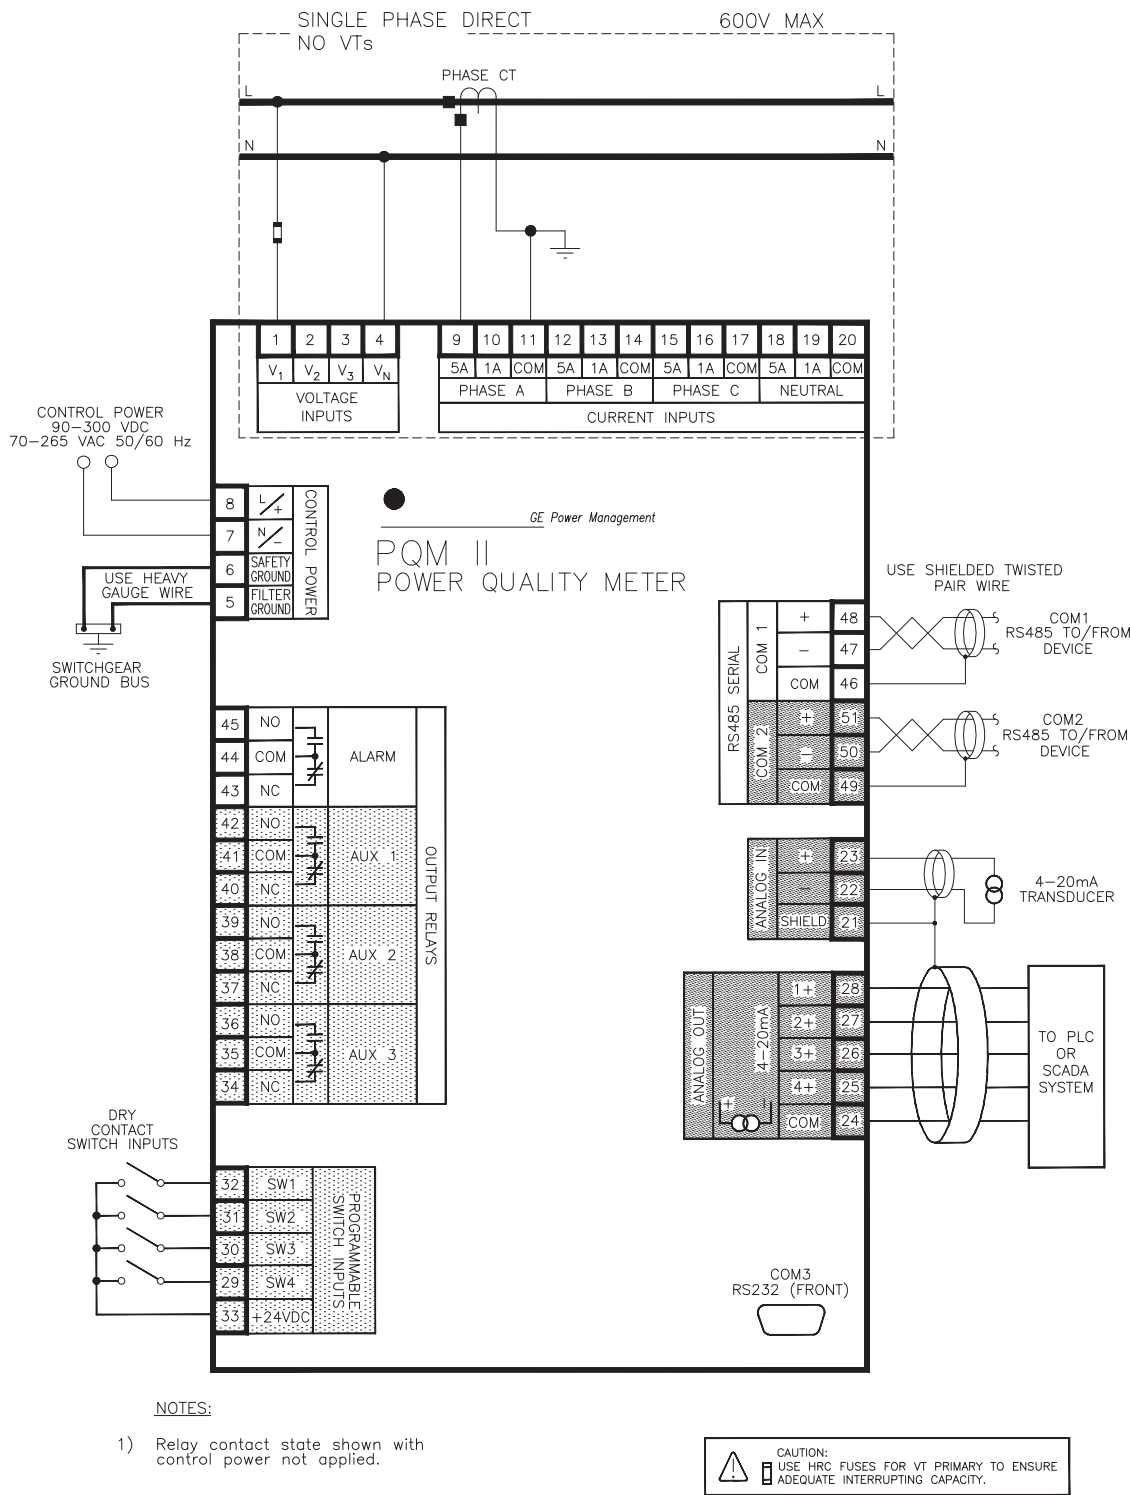For a single-phase connection, connect current and voltage to the phase A inputs only. All other inputs are ignored. Select the **S2 SYSTEM SETUP** ⇨ **CURRENT/VOLTAGE CONFIGURATION** ⇨ **VT WIRING**: “SINGLE PHASE” setpoint.



746756A1.DWG

FIGURE 2-8: Single Phase Connection

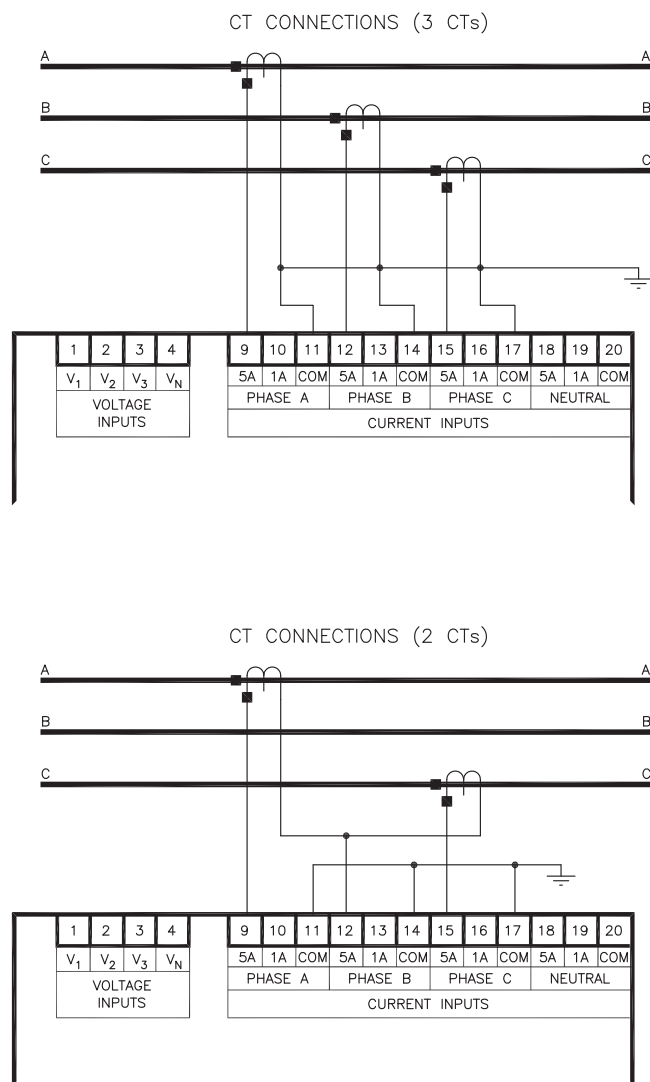
3-wire System using Two CTs

The figure below shows two methods for connecting CTs to the PQMII for a 3-wire system. The top drawing shows the standard wiring configuration using three CTs. An alternate wiring configuration uses only two CTs. With the two CT method, the third phase is measured by connecting the commons from phase A and C to the phase B input on the PQMII. This causes the phase A and phase C current to flow through the PQMII's phase B CT in the opposite direction, producing a current equal to the actual phase B current.

$I_a + I_b + I_c = 0$ for a three wire system.

$I_b = -(I_a + I_c)$

For the CT connections above, the **S2 SYSTEM SETUP** ⇒ **↓ CURRENT/VOLTAGE CONFIGURATION** ⇒ **↓ PHASE CT WIRING** ⇒ **↓ PHASE CT PRIMARY** setpoint must be set to PHASE A, B, AND C.



823804A2.DWG

FIGURE 2-9: Alternate CT Connections for 3-wire System

Control Power

The control power supplied to the PQMII must match the installed power supply. If the applied voltage does not match, damage to the unit may occur. Check the product identification to verify the control voltage matches the intended application.

A universal AC/DC power supply is standard on the PQMII. It covers the range 90 to 300 V DC and 70 to 265 V AC at 50/60 Hz. It is not necessary to adjust the PQMII if the control voltage is within this range. A low voltage power supply is available as an option. It covers the range 20 to 60 V DC and 24 to 48 V AC at 50/60 Hz. Verify from the product identification label that the control voltage matches the intended application. Connect the control voltage input to a stable source for reliable operation. A 2.5 A HRC fuse is accessible from the back of the PQMII via the fuse access door. Consult the factory for replacement fuses, if required. Using #12 gauge wire or ground braid, connect Terminals 5 and 6 to a solid system ground, typically a copper bus in the switchgear. The PQMII incorporates extensive filtering and transient protection to ensure reliable operation under harsh industrial operating environments. Transient energy must be conducted back to the source through Filter Ground Terminal (5). The Filter Ground Terminal (5) is separated from the Safety Ground Terminal (6) to allow dielectric testing of switchgear with the PQMII wired up. Filter Ground Terminal connections must be removed during dielectric testing.

When properly installed, the PQMII meets the interference immunity requirements of IEC 801 and ANSI C37.90.1.

VT Inputs

The PQMII accepts input voltages from 0 to 600 V AC between the voltage inputs (V1, V2, V3) and voltage common (Vn). These inputs can be directly connected or supplied through external VTs. If voltages greater than 600 V AC are to be measured, external VTs are required. When measuring line-to-line quantities using inputs V1, V2, and V3, ensure that the voltage common input Vn is grounded. This input is used as a reference for measuring the voltage inputs.

All connections to the PQMII voltage inputs should be connected using HRC fuses rated at 2 Amps to ensure adequate interrupting capacity.

CT Inputs

Current transformer secondaries of 1 A or 5 A can be used with the PQMII for phase and neutral sensing. Each current input has 3 terminals: 5 A input, 1 A input, and common. Select either the 1 A or 5 A terminal and common to match the phase CT secondary. Correct polarity as indicated in the wiring diagrams is essential for correct measurement of all power quantities.

The CTs selected should be capable of supplying the required current to the total secondary load, including the PQMII burden of 0.1 VA at rated secondary current and the connection wiring burden.

All PQMII internal calculations are based on information measured at the CT and VT inputs. The accuracy specified in this manual assumes no error contribution from the external CTs and VTs. To ensure the greatest accuracy, Instrument class CTs and VTs are recommended.

Output Relays

The basic PQMII comes equipped with one output relay; the control option supplies three additional output relays. The PQMII output relays have form C contacts (normally open (NO), normally closed (NC), and common (COM)). The contact rating for each relay is 5 A resistive and 5 A inductive at 250 V AC. Consult : *Specifications* for contact ratings under other conditions. The wiring diagrams show the state of the relay contacts with no control power applied; that is, when the relays are not energized. Relay contact wiring depends on how the relay operation is programmed in the **S3 OUTPUT RELAYS** setpoint group (see : S3 Output Relays for details).

- **Alarm Relay (Terminals 43/44/45):** A selected alarm condition activates the alarm relay. Alarms can be enabled or disabled for each feature to ensure only desired conditions cause an alarm. If an alarm is required when control power is not present, indicating that monitoring is not available, select “Fail-safe” operation for the alarm relay through the **S3 OUTPUT RELAYS** ⇒ **ALARM RELAY** ⇒ **ALARM OPERATION** setpoint. The NC/COM contacts are normally open going to a closed state on an alarm. If “Unlatched” mode is selected with setpoint **S3 OUTPUT RELAYS** ⇒ **ALARM RELAY** ⇒ **ALARM ACTIVATION**, the alarm relay automatically resets when the alarm condition disappears. For “Latched” mode, the key must be pressed (or serial port reset command received) to reset the alarm relay. Refer to : *Alarms* for all the displayed alarm messages.
- **Auxiliary Relays 1,2,3 (Optional; Terminals 34 to 42):** Additional output relays can be configured for most of the alarms listed in *Alarms*. When an alarm feature is assigned to an auxiliary relay, it acts as a control feature. When the setpoint is exceeded for a control feature, the output relay changes state and the appropriate Aux LED lights but no indication is given on the display. The auxiliary relays can also be programmed to function as kWh, kvarh, and kVAh pulse outputs.

Switch Inputs (Optional)

With the control (C) option installed the PQMII has four programmable switch inputs that can be used for numerous functions. The figure below shows the internal circuitry of the switches.

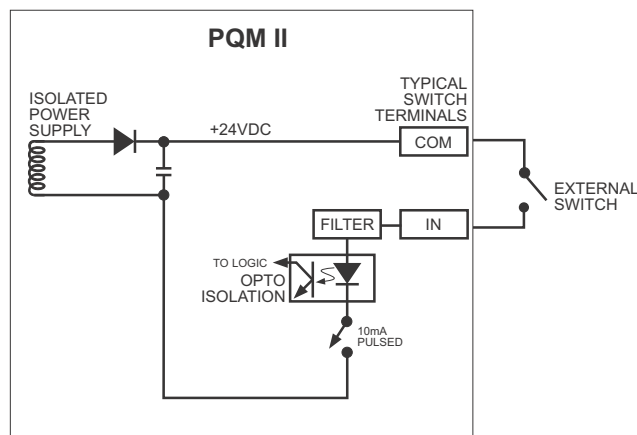


FIGURE 2-10: Switch Input Circuit

Each switch input can be programmed with a 20-character user defined name and can be selected to accept a normally open or normally closed switch. A list of various functions assignable to switches is shown below, followed by a description of each function.

- **Alarm Relay:** When a switch input is assigned to the alarm relay, a change in the switch status produces an alarm condition and the alarm relay activates.
- **Pulse Input 1/2/3/4:** When a switch input is assigned as a pulse input counter, the PQMII counts the number of transitions from open to closed when the input is configured as normally open and closed to open when the input is configured as normally closed. The minimum pulse width required for the PQMII to read the switch is 150 ms. Therefore, for the PQMII to read one pulse, the switch input must be in its inactive state (closed/open) for a minimum of 150 ms then in its active state (open/closed) for another 150 ms. See : *Specifications* for more details.
- **New Demand Period:** The PQMII can be used for load shedding by assigning a switch input to a new demand period. This allows the PQMII demand period to be synchronized with the utility meter. One of the billing parameters used by a utility is peak demand. By synchronizing the PQMII to the utility meter, the PQMII can monitor the demand level read by the utility meter and perform load shedding to prevent the demand from reaching the penalty level. The utility meter provides a dry contact output which can be connected to one of the PQMII switch inputs. When the PQMII senses a contact closure, it starts a new demand period (with Block Interval Demand calculation only).
- **Setpoint Access:** The access terminals must be shorted together in order for the faceplate keypad to have the ability to store new setpoints. Typically the access terminals are connected to a security keyswitch to allow authorized access only. Serial port commands to store new setpoints operate even if the access terminals are not shorted. When the access terminals are open, all actual and setpoint values can still be accessed for viewing; however, if an attempt is made to store a new setpoint value, the message **SETPOINT ACCESS DISABLED** is displayed and the previous setpoint remains intact. In this way, all of the programmed setpoints remain secure and tamper proof.
- **Select Analog Output:** This switch selection allows each analog output to be multiplexed into two outputs. If the switch is active, the parameter assigned in setpoint **S2 SYSTEM SETUP** ⇒ **ANALOG OUTPUT 1** ⇒ **ANALOG OUTPUT 1 ALT** determines the output level. If the switch is not active, the parameter assigned in setpoint **S2 SYSTEM SETUP** ⇒ **ANALOG OUTPUT 1** ⇒ **ANALOG OUTPUT 1 MAIN** is used. See the following section and : *Analog Outputs* for additional details.
- **Select Analog Input:** This switch selection allows the analog input to be multiplexed into two inputs. If the switch is active, the parameter assigned in setpoint **S2 SYSTEM SETUP** ⇒ **ANALOG INPUT** ⇒ **ANALOG INPUT ALT** is used to scale the input. If the switch is not active, the parameter assigned in setpoint **S2 SYSTEM SETUP** ⇒ **ANALOG INPUT** ⇒ **ANALOG INPUT MAIN** is used. If a relay is assigned in **S2 SYSTEM SETUP** ⇒ **ANALOG INPUT** ⇒ **ANALOG IN MAIN/ALT SELECT RELAY**, that relay energizes when the switch is active and de-energizes when the switch is not active, thus providing the ability to feed in analog inputs from two separate sources as shown in the figure below. See the : *Analog Input (Optional)* section below for details. Refer to : *Analog Input* for additional details.

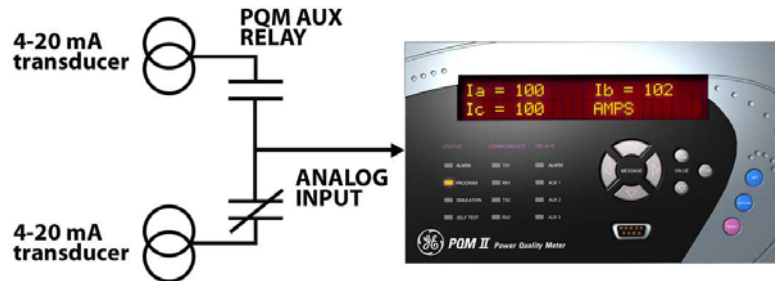


FIGURE 2-11: Analog Input Multiplexing

- **Aux 1/2/3 Relay:** When a switch input is assigned to an Auxiliary relay, a closure on the switch input causes the programmed auxiliary relay to change state. This selection is available only if the Control (C) option is installed.
- **Clear Energy:** When a switch input is assigned to "Clear Energy", a closure on the switch input will clear all Energy data within the PQMII.
- **Clear Demand:** When a switch input is assigned to "Clear Demand", a closure on the switch input will clear all Demand data within the PQMII.

Analog Outputs (Optional)

The PQMII has four current outputs when the transducer option is installed (T20 = 4 to 20 mA, T1 = 0 to 1 mA in the order code). These outputs can be multiplexed to produce 8 analog transducers. This output is a current source suitable for connection to a remote meter, chart recorder, programmable controller, or computer load. Use the 4 to 20 mA option with a programmable controller that has a 2 to 40 mA current input. If only a voltage input is available, use a scaling resistor at the PLC terminals to scale the current to the equivalent voltage. For example, install a 500 Ω resistor across the terminals of a 0 to 10 V input to make the 4 to 20 mA output correspond to 2 to 10 V ($R = V/I = 10 \text{ V} / 0.02 \text{ A} = 500 \Omega$). Current levels are not affected by the total lead and load resistance which must not exceed 600 Ω for the 4 to 20 mA range and 2400 Ω for the 0 to 1 mA range. For readings greater than full scale the output will saturate at 22 mA (4 to 20 mA) or 1.1 mA (0 to 1 mA). These analog outputs are isolated and since all output terminals are floating, the connection of the analog output to a process input will not introduce a ground loop. Part of the system should be grounded for safety, typically at the programmable controller. For floating loads (such as a meter), ground Terminal 24 externally.

The outputs for these transducers can be selected from any of the measured parameters in the PQMII. The choice of output is selected in the **S2 SYSTEM SETUP** \Rightarrow **ANALOG OUTPUT 1(4)** setpoints group. See : *Analog Outputs* for a list of available parameters. Each analog output can be assigned two parameters: a main parameter and an alternate parameter. Under normal operating conditions, the main parameter will appear at the output terminals. To select the alternate parameter, one of the switch inputs must be assigned to "SELECT ANALOG OUT" and the switch input must be closed (assuming normally closed activation). By opening and closing the switch input, two analog output parameters can be multiplexed on one output. This effectively achieves 8 analog outputs for the PQMII.

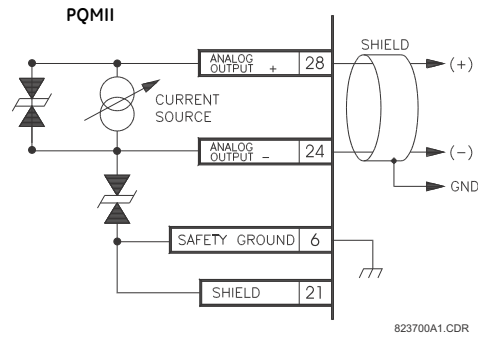


FIGURE 2-12: Analog Output

As shown in wiring diagrams, these outputs are at Terminals 25 to 28 and share Terminal 24 as their common. Shielded cable should be used, with only one end of the shield grounded, to minimize noise effects.

Signals and power supply circuitry are internally isolated, allowing connection to devices (PLCs, computers, etc.) at ground potentials different from the PQMII. Each terminal, however, is clamped to ± 36 V to ground.

Analog Input (Optional)

Terminals 22(-) and 23(+) are provided for a current signal input. This current signal can be used to monitor any external quantity, such as transformer winding temperature, battery voltage, station service voltage, transformer tap position, etc. Any transducer output ranges within the range of 0 to 20 mA can be connected to the analog input terminals of the PQMII. See : *Analog Input* for details on programming the analog input.

RS485 Serial Ports

A fully loaded PQMII is equipped with three serial ports. COM1 is a RS485 port available at the rear terminals of the PQMII which is normally used as the main communications interface to the system. COM2, which is also a rear RS485 port, can be used for data collection, printing reports, or problem analysis without disturbing the main communications interface. COM3 is a front panel RS232 port that can be used for setpoint programming or recording using the EnerVista PQMII Setup Software.

A serial port provides communication capabilities between the PQMII and a remote computer, PLC, or distributed control system (DCS). Up to thirty-two PQMIIs can be daisy chained together with 24 AWG stranded, shielded, twisted-pair wire on a single communication channel. Suitable wire should have a characteristic impedance of 120 W (such as Belden #9841). These wires should be routed away from high power AC lines and other sources of electrical noise. The total length of the communications wiring should not exceed 4000 feet for reliable operation. Correct polarity is essential for the communications port to operate. Terminal (485+) of every PQMII in a serial communication link must be connected together. Similarly, the (485-) terminal of every PQMII must also be connected together. These polarities are specified for a 0 logic and should match the polarity of the master device. If the front panel RX1 or RX2 lights are flashing, this indicates that the PQMII is receiving data. If the front panel TX1 or TX2 lights are flashing, this

indicates that the PQMII is transmitting data. Each PQMII must be daisy-chained to the next one as shown in the figure below. Avoid star or stub connected configurations. If a large difference in ground potentials exists, communication on the serial communication link will not be possible. Therefore, it is imperative that the serial master and PQMII are both at the same ground potential. This is accomplished by joining the RS485 ground terminal (Terminal 46 for COM1; Terminal 49 for COM2) of every unit together and grounding it at the master only.

The last PQMII in the chain and the master computer require a terminating resistor and terminating capacitor to ensure proper electrical matching of the loads and prevent communication errors. Using terminating resistors on all the PQMII's would load down the communication network while omitting them at the ends could cause reflections resulting in communication errors. Install the 120 Ω , ¼ watt terminating resistor and 1 nF capacitor externally. Although any standard resistor and capacitor of these values are suitable, these components can also be ordered from GE Multilin as a combined terminating network.

Each communication link must have only one computer (PLC or DCS) issuing commands called the master. The master should be centrally located and can be used to view actual values and setpoints from each PQMII called the slave device. Other GE Multilin relays or devices using the Modbus RTU protocol can be connected to the communication link. Setpoints in each slave can also be changed from the master. Each PQMII in the link must be programmed with a different slave address prior to running communications using the **S1 PQMII SETUP** \Rightarrow **COM1 RS485 SERIAL PORT** \Rightarrow **MODBUS COMMUNICATION ADDRESS** setpoint. The GE Multilin EnerVista PQMII Setup Software may be used to view status, actual values, and setpoints. See : *Using the EnerVista PQMII Setup Software* for more information on the EnerVista PQMII Setup Software.

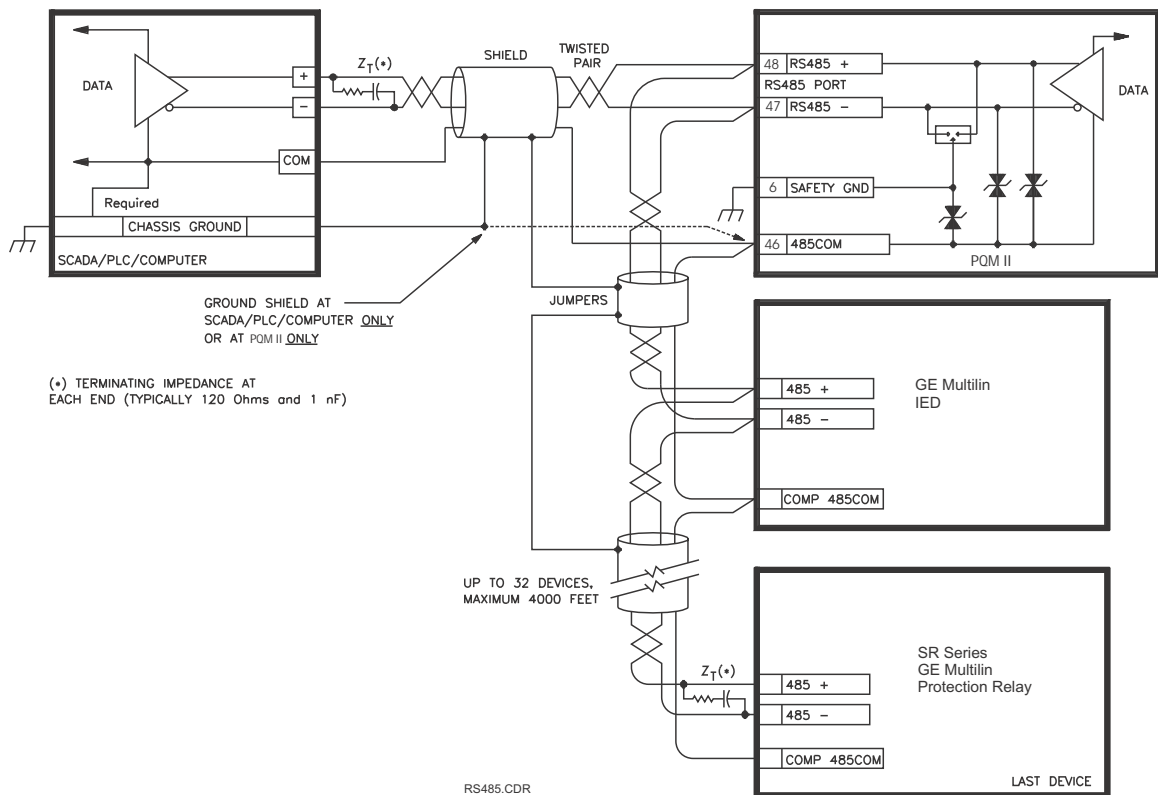


FIGURE 2-13: RS485 Communication Wiring

RS232 Front Panel Port

A 9-pin RS232C serial port provided on the front panel allows the user to program the PQMII with a personal computer. This port uses the same communication protocol as the rear terminal RS485 ports. To use this interface, the personal computer must be running the EnerVista PQMII Setup Software provided with the relay. Cabling to the RS232 port of the computer is shown below for both 9-pin and 25-pin connectors.

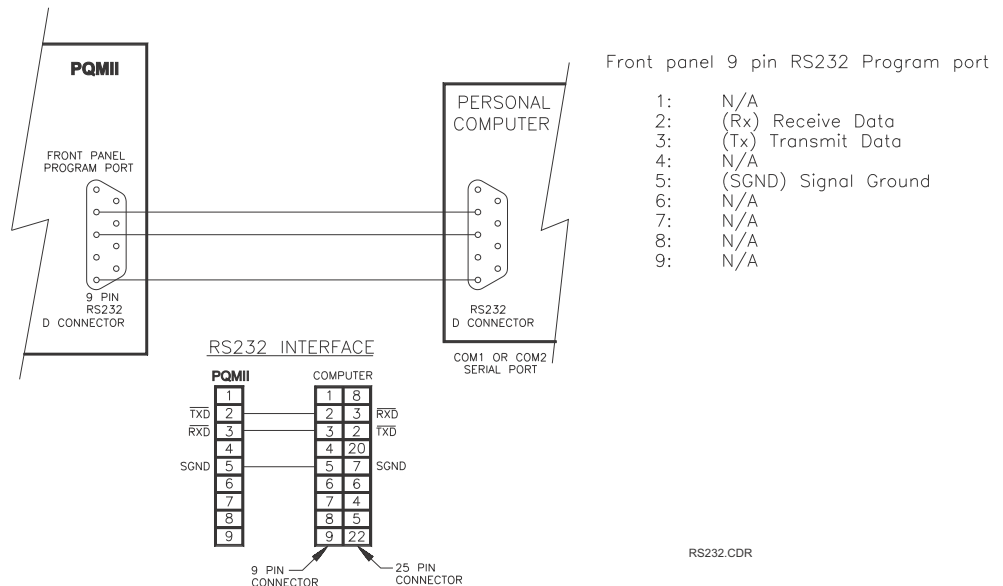


FIGURE 2-14: RS232 Connection

Dielectric Strength Testing

It may be required to test the complete switchgear for dielectric strength with the PQMII installed. This is also known as “flash” or “hipot” testing. The PQMII is rated for 1500 V AC isolation between relay contacts, CT inputs, VT inputs, control power inputs and Safety Ground Terminal 6. Some precautions are necessary to prevent damage to the PQMII during these tests.

Filter networks and transient protection clamps are used between the control power, serial port, switch inputs, analog outputs, analog input, and the filter ground terminal 5 to filter out high voltage transients, radio frequency interference (RFI) and electromagnetic interference (EMI). The filter capacitors and transient absorbers could be damaged by the continuous high voltages relative to ground that are applied during dielectric strength testing. Disconnect the Filter Ground (Terminal 5) during testing of the control power inputs. Relay contact and CT terminals do not require any special precautions. Do not perform dielectric strength testing on the serial ports, switch inputs, analog input or analog output terminals or the PQMII internal circuitry will be damaged.

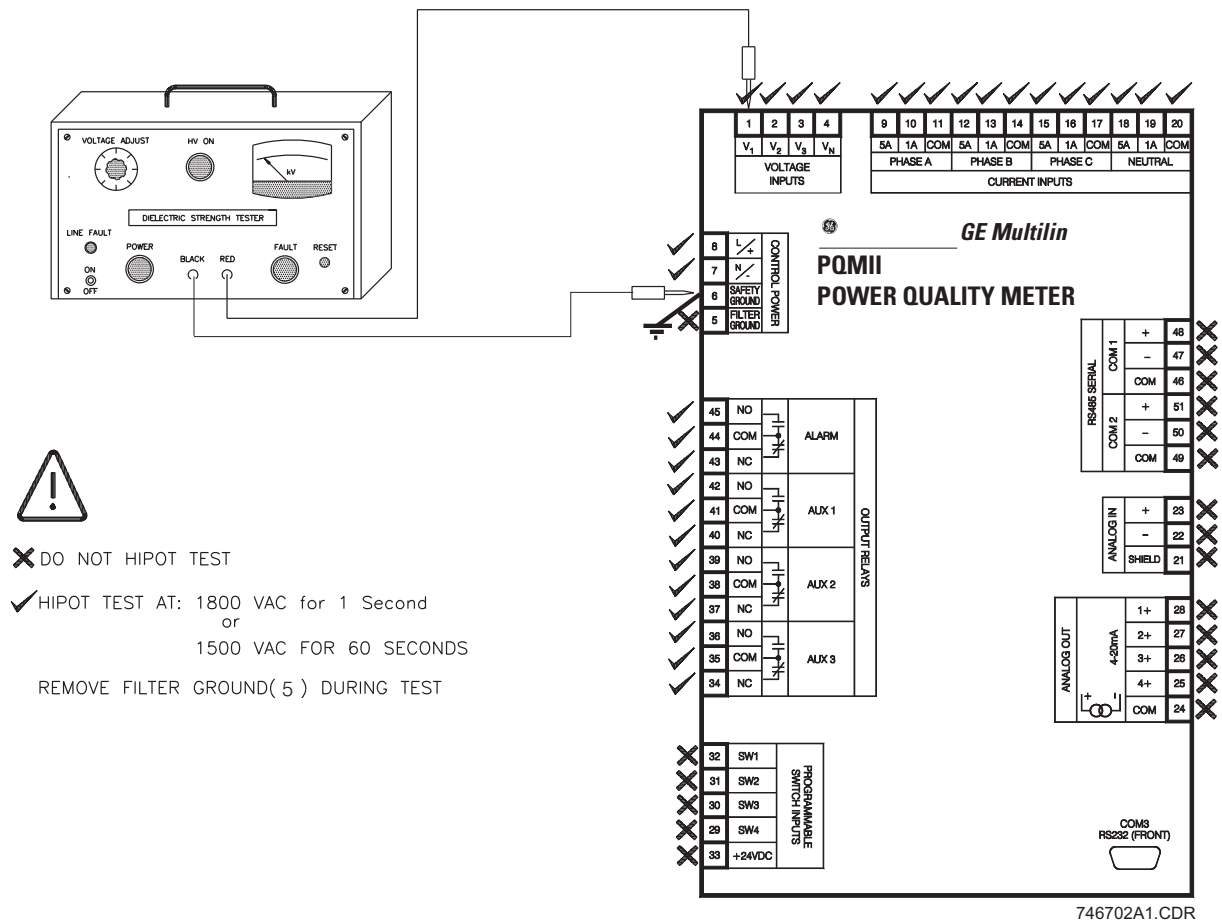


FIGURE 2-15: Hi-Pot Testing



PQMII Power Quality Meter

Chapter 3: Operation

Front Panel and Display

Front Panel

The local operator interface for setpoint entry and monitoring of measured values is through the front panel as shown in the figure below. Control keys are used to select the appropriate message for entering setpoints or displaying measured values. Alarm and status messages are automatically displayed when required. Indicator LEDs provide important status information at all times. An RS232 communications port is also available for uploading or downloading information to the PQMII.

Display

All messages are displayed in English on the 40-character liquid crystal display. This display is visible under varied lighting conditions. When the keypad and display are not actively being used, the screen displays a default status message. This message appears if no key has been pressed for the time programmed in the [S1 PQMII SETUP](#) ⇒ [PREFERENCES](#) ⇒ [DEFAULT MESSAGE TIME](#) setpoint. Note that alarm condition messages automatically override the default messages.




FIGURE 3–1: Display (example)

LED Indicators

Description

The LED status indicators provide a quick indication of the overall status of the PQMII. These indicators illuminate if an alarm is present, if setpoint access is enabled, if the PQMII is in simulation mode, or if there is a problem with the PQMII itself.

STATUS	COMMUNICATE	RELAYS
■ ALARM	■ TX1	■ ALARM
■ PROGRAM	■ RX1	■ AUX1
■ SIMULATION	■ TX2	■ AUX2
■ SELF TEST	■ RX2	■ AUX3

FIGURE 3–2: LED Indicators

Status

- **Alarm:** When an alarm condition exists, the Alarm LED indicator will flash.
- **Program:** The Program LED indicator is on when setpoint access is enabled.
- **Simulation:** The Simulation LED indicator will be on when the PQMII is using simulated values for current, voltage, analog input, switches and analog outputs. While in simulation mode, the PQMII will ignore the measured parameters detected at its inputs and will use the simulated values stored in the [SS TESTING](#) ⇄ [SIMULATION](#) setpoints group.
- **Self-Test:** Any abnormal condition detected during PQMII self-monitoring, such as a hardware failure, causes the Self Test LED indicator to be on. Loss of control power to the PQMII also causes the Self Test LED indicator to turn on, indicating that no metering is present.

Communicate

The Communicate LED indicators monitor the status of the RS485 communication ports. When no serial data is being received through the rear serial ports terminals, the RX1/2 LED indicators are off. This situation occurs if there is no connection, the serial wires become disconnected, or the master computer is inactive. If there is activity on the serial port but the PQMII is not receiving valid messages for its internally programmed address, the TX1/2 LED indicators remain off. This condition can be caused by incorrect message formats (such as baud rate or framing), reversed polarity of the two RS485 twisted-pair connections, or the master not sending the currently programmed PQMII address. If the PQMII is being periodically addressed with a valid message, the RX1/2 LED indicator will turn on followed by the TX1/2 LED indicator.

- **TX1:** The PQMII is transmitting information via the COM1 RS485 communications port when lit.
- **RX1:** The PQMII is receiving information via the COM1 RS485 communications port when lit.

- **TX2:** The PQMII is transmitting information via the COM2 RS485 communications port when lit.
- **RX2:** The PQMII is receiving information via the COM2 RS485 communications port when lit.

Relays

The status of the output relays is displayed with these LED indicators.

- **Alarm:** The Alarm relay is intended for general purpose alarm outputs. This indicator will be on while the Alarm relay is operating. When the condition clears, the Alarm LED indicator turns off. If the alarm relay has been programmed as “Latched”, the alarm condition can only be cleared by pressing the RESET key or by issuing a computer reset command.
- **Aux1:** The Aux 1 relay is intended for control and customer specific requirements. The Aux1 LED indicator is on while the Auxiliary 1 relay is operating.
- **Aux2:** The Aux 2 relay is intended for control and customer specific requirements. The Aux2 LED indicator is on while the Auxiliary 2 relay is operating.
- **Aux3:** The Aux 3 relay is intended for control and customer specific requirements. The Aux3 LED indicator is on while the Auxiliary 3 relay is operating.

Keypad

Description

The front panel keypad allows direct access to PQMII functionality. The keys are used to navigate through message pages, allowing the user to modify settings and view actual values from the device location.

Menu Key

Setpoints and actual values are arranged into two distinct groups of messages. The MENU key selects the main setpoints or actual values page. Pressing MENU while in the middle of a setpoints or actual values page returns the display to the main setpoints or actual values page. The MESSAGE keys select messages within a page.

Escape Key

Pressing the ESCAPE key during any setpoints or actual values message returns the user to the previous message level. Continually pressing ESCAPE will return the user back to the main setpoints or actual values page.

Enter Key

When programming setpoints, enter the new value by using the VALUE keys, followed by the ENTER key. Setpoint programming must be enabled for the ENTER key to store the edited value. An acknowledgment message will flash if the new setpoint is successfully saved in non-volatile memory. The ENTER key is also used to add and remove user defined default messages. Refer to 3.4: *Default Messages* for details.

Reset Key

The RESET key is used to clear the latched alarm and/or auxiliary conditions. Upon pressing the key, the PQMII will perform the appropriate action based on the condition present as shown in the table below.

Table 1: Reset Key Actions

Condition Present	Message Displayed	PQMII Action Performed
None	None	No action taken
Alarm	RESET NOT POSSIBLE ALARM STILL PRESENT	Alarm LED indicators and alarm relay remain on because condition is still present
Aux Relay	RESET NOT POSSIBLE AUX CONDITION EXISTS	Auxiliary LED indicator(s) and aux relay(s) remain on because condition is still present
Alarm and Aux Relay	RESET NOT POSSIBLE AUX CONDITION EXISTS	Auxiliary and Alarm LED indicators and alarm and aux relays remain on because condition is still present
Latched Alarm (condition no longer exists)	None	No message displayed, and Alarm LED indicators and the alarm relay turned off
Latched Aux Relay (condition no longer exists)	None	No message displayed, and appropriate Auxiliary LEDs and auxiliary relay(s) turned off
Alarm and Latched Aux Relay (Aux condition no longer exists)	None	No message displayed, and appropriate Auxiliary LEDs and auxiliary relay(s) turned off
Aux Relay and Latched Alarm (alarm condition no longer exists)	None	No message displayed, and Alarm LEDs and alarm relay turned off

The RESET key, along with the ENTER key, is also used to remove user defined default messages. Refer to 3.4: *Default Messages* further details.

Message Keys

Use the MESSAGE keys to move between message groups within a page. The MESSAGE DOWN key moves toward the end of the page and the MESSAGE UP key moves toward the beginning of the page. A page header message will appear at the beginning of each page and a page footer message will appear at the end of each page. To enter a subgroup, press the MESSAGE RIGHT key. To back out of the subgroup, press the MESSAGE LEFT key.

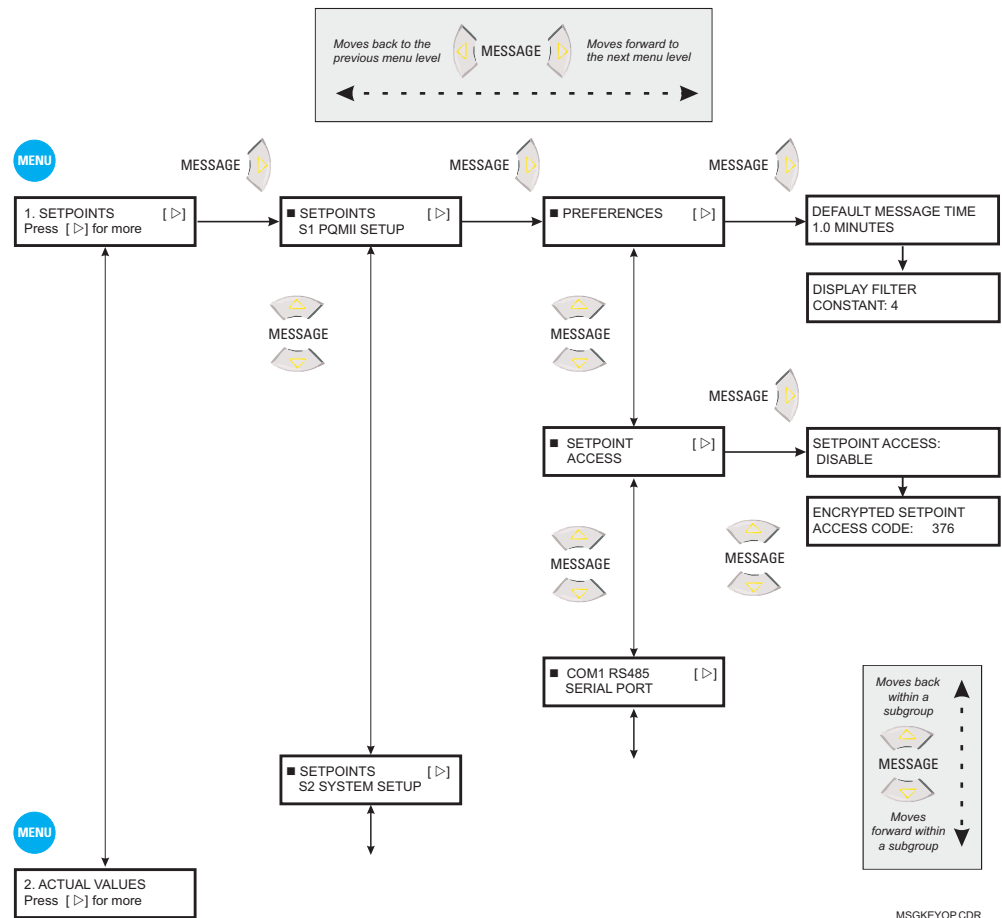


FIGURE 3-3: Message Key Operation

Value Keys

Setpoint values are entered using the VALUE keys. When a setpoint is displayed calling for a yes/no response, each time a VALUE key is pressed, the “Yes” becomes a “No,” or the “No” becomes a “Yes.” Similarly, for multiple choice selections, each time a VALUE key is pressed, the next choice is displayed. When numeric values are displayed, each time VALUE UP is pressed, the value increases by the step increment, up to the maximum. Hold the key down to rapidly change the value.

Data Entry Methods

- **Keypad Entry:** Press the MENU key once to display the first page of setpoints. Press the MESSAGE RIGHT key to select successive setpoints pages. The page number and

page title appear on the second line. All setpoint page headers are numbered with an 'S' prefix. Actual value page headers are numbered with an 'A' prefix.

The messages are organized into logical subgroups within each Setpoints and Actual Values page as shown below.

Press the MESSAGE keys when displaying a subgroup to access messages within that subgroup. Otherwise select the MESSAGE keys to display the next subgroup.

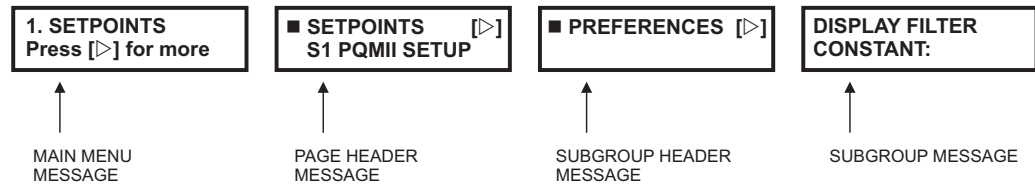


FIGURE 3-4: Message Hierarchy Example

- **Computer Entry:** When running the EnerVista PQMII Setup Software, setpoint values are accessed through the menu bar and displayed in a series of windows. See Chapter 4: *Software* for further details.
- **SCADA Entry:** A SCADA system connected to the RS485 terminals can be custom programmed to make use of any of the communication commands for remote setpoint programming, monitoring, and control.

Setpoint Access Security

The PQMII incorporates software security to provide protection against unauthorized setpoint changes. A numeric access code must be entered to program new setpoints using the front panel keys. To enable the setpoint access security feature, the user must enter a value in the range of 1 to 999. The factory default access code is 1. If the switch option is installed in the PQMII, a hardware jumper access can be assigned to a switch input. Setpoint access can then only be enabled if the switch input is shorted and the correct software access code entered. Attempts to enter a new setpoint without the electrical connection across the setpoint access terminals or without the correct access code will result in an error message. When setpoint programming is via a computer, no setpoint access jumper is required. If a SCADA system is used for PQMII programming, it is up to the programmer to design in appropriate passcode security.

Default Messages

Description

Up to 10 default messages can be selected to display sequentially when the PQMII is left unattended. If no keys are pressed for the default message time in the **S1 PQMII SETUP** ⇒ **PREFERENCES** ⇒ **DEFAULT MESSAGE TIME** setpoint, then the currently displayed message will automatically be overwritten by the first default message. After three seconds, the next default message in the sequence will display if more than one is selected. Alarm messages will override the default message display. Any setpoint or measured value can be selected as a default message.

Messages are displayed in the order they are selected.

Adding a Default Message

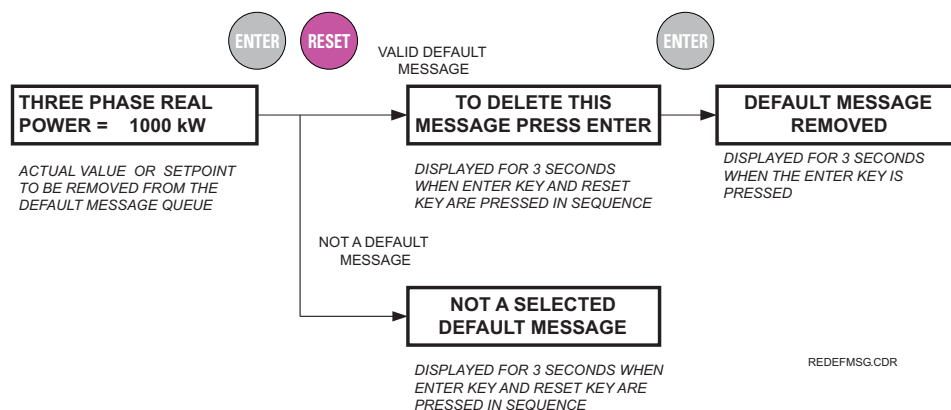
Use the MESSAGE keys to display any setpoint or actual value message to be added to the default message queue and follow the steps shown below. When selecting a setpoint message for display as a default, do not modify the value using the VALUE keys or the PQMII will recognize the ENTER key as storing a setpoint instead of selecting a default message



If 10 default messages are already selected, the first message is erased and the new message is added to the end of the queue.

Deleting a Default Message


Use the MESSAGE keys to display the default message to be erased. If default messages are not known, wait until the PQMII starts to display them and then write them down. Use the MESSAGE keys to display the setpoint or actual value message to be deleted from the default message queue and follow the steps below.



Default Message Sequence

Each PQMII is pre-programmed with five default messages as shown below. Note, each time the factory setpoints are reloaded the user programmed default messages are overwritten with these messages.

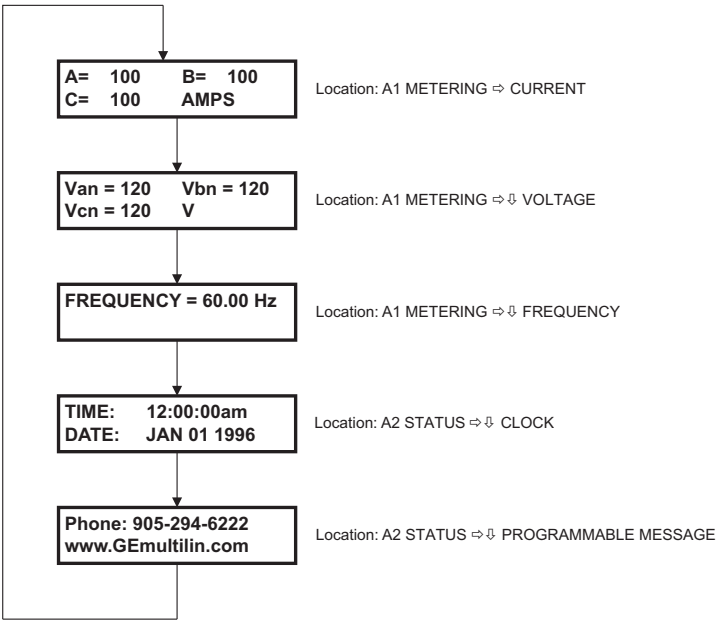The PQMII will scroll through the default messages in the sequence shown.





PQMII Power Quality Meter

Chapter 4: Software

Introduction

Overview

Although setpoints can be manually entered using the front panel keys, it is far more efficient and easier to use a computer to download values through the communications port. The no-charge EnerVista PQMII Setup Software included with the PQMII makes this a quick and convenient process. With the EnerVista PQMII Setup Software running on your PC, it is possible to:

- Program and modify setpoints
- Load/save setpoint files from/to disk
- Read actual values and monitor status
- Perform waveform capture and log data
- Perform harmonic analysis
- Trigger trace memory
- Get help on any topic

The EnerVista PQMII Setup Software allows immediate access to all the features of the PQMII through pull-down menus in the familiar Windows environment. The software can also run without a PQMII connected. This allows you to edit and save setpoint files for later use. If a PQMII is connected to a serial port on a computer and communication is enabled, the PQMII can be programmed from the setpoint screens. In addition, measured values, status and alarm messages can be displayed with the actual screens.

Hardware

Communications from the EnerVista PQMII Setup Software to the PQMII can be accomplished three ways: RS232, RS485, and Ethernet (requires the MultiNET adapter) communications. The following figures below illustrate typical connections for RS232 and RS485 communications. For details on Ethernet communications, please see the MultiNET manual.

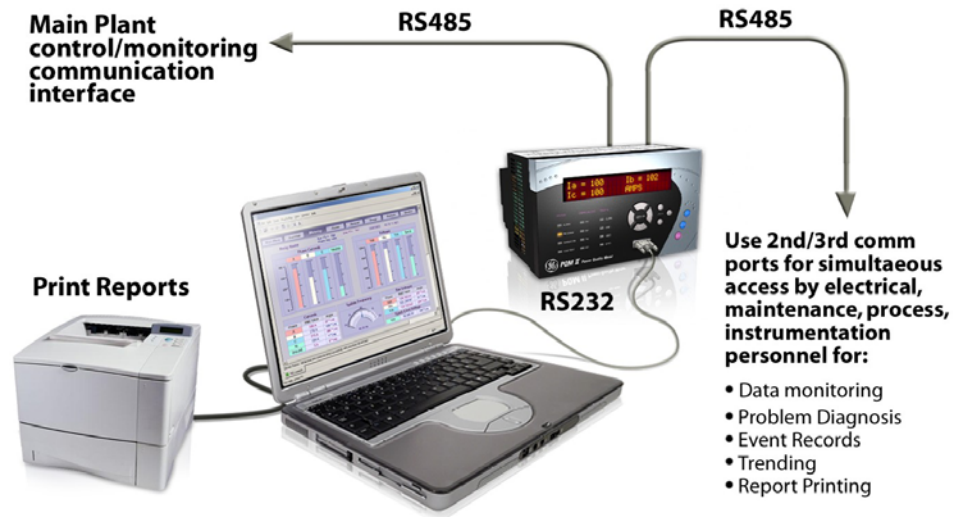


FIGURE 4-1: Communications using The Front RS232 Port

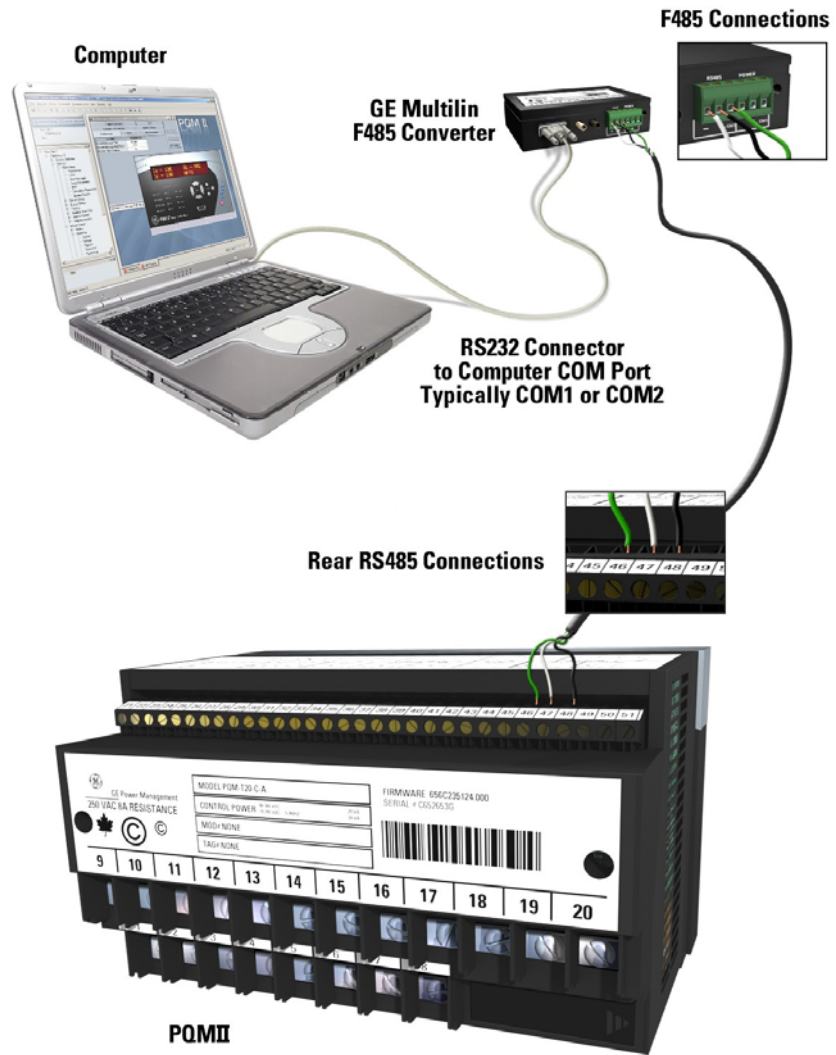


FIGURE 4-2: Communications using Rear RS485 Port

Installing the EnerVista PQMII Setup Software

The following minimum requirements must be met for the EnerVista PQMII Setup Software to operate on your computer.

- Microsoft Windows 95 or higher operating system
- 64 MB of RAM (256 MB recommended)
- Minimum of 50 MB hard disk space (200 MB recommended)

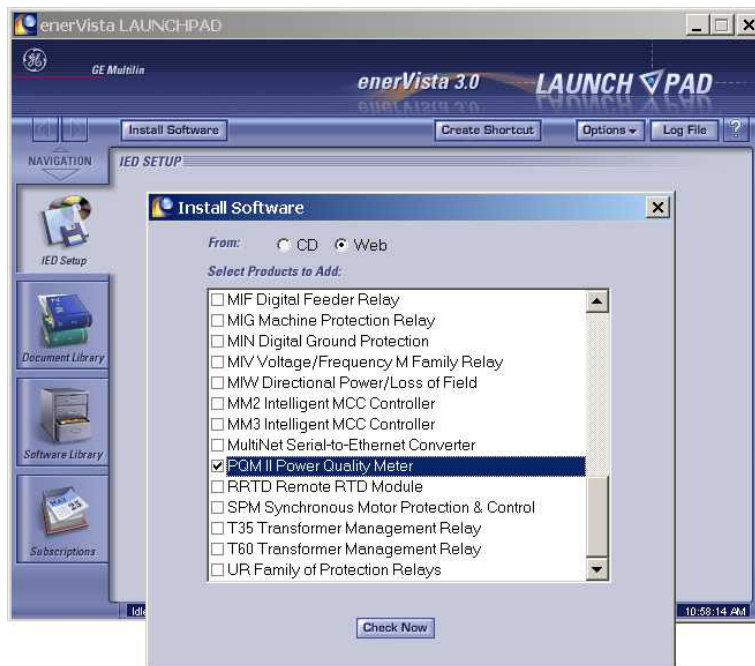
After ensuring these minimum requirements, use the following procedure to install the EnerVista PQMII Setup Software from the enclosed GE EnerVista CD.

- ▷ Insert the GE EnerVista CD into your CD-ROM drive.
- ▷ Click the **Install Now** button and follow the installation instructions to install the no-charge EnerVista software on the local PC.


- ▷ When installation is complete, start the EnerVista Launchpad application.
- ▷ Click the **IED Setup** section of the **Launch Pad** window.



- ▷ In the EnerVista Launch Pad window, click the **Install Software** button
- ▷ Select the “PQMII Power Quality Meter” from the Install Software window as shown below.
- ▷ Select the “Web” option to ensure the most recent software release, or select “CD” if you do not have a web connection.
- ▷ Click the **Check Now** button to list software items for the PQMII.



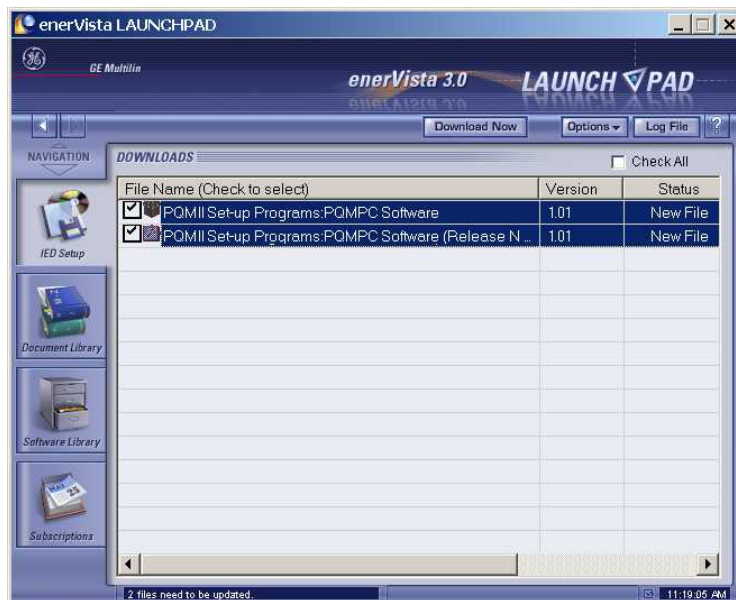- ▷ Select the PQMII software program and release notes (if desired) from the list.
- ▷ Click the **Download Now** button to obtain the installation program from the Web or CD.
EnerVista Launchpad will obtain the installation program.



- ▷ Once the download is complete, double-click the installation program to install the EnerVista PQMII Setup Software.
The program will request the user to create a backup 3.5" floppy-disk set. If this is desired, click on the **Start Copying** button; otherwise,
- ▷ Click on the **CONTINUE WITH PQMII VERSION 1.01 INSTALLATION** button.
- ▷ Select the complete path, including the new directory name, where the EnerVista PQMII Setup Software will be installed.
- ▷ Click on **Next** to begin the installation.
The files will be installed in the directory indicated and the installation program will automatically create icons and add EnerVista PQMII Setup Software to the Windows start menu.

- ▷ Click **Finish** to end the installation.
- The PQMII device will be added to the list of installed IEDs in the EnerVista Launchpad window, as shown below.



Configuring Serial Communications

Description

Before starting, verify that the serial cable is properly connected to either the RS232 port on the front panel of the device (for RS232 communications) or to the RS485 terminals on the back of the device (for RS485 communications). See 4.1.2: *Hardware* for connection details.

- ▷ Install and start the latest version of the EnerVista PQMII Setup Software (available from the GE EnerVista CD). See the previous section for the installation procedure.
- ▷ Click on the **Device Setup** button to open the Device Setup window.
- ▷ Click the **Add Site** button to define a new site.
- ▷ Enter the desired site name in the **Site Name** field. If desired, a short description of site can also be entered along with the display order of devices defined for the site.
- ▷ Click the **OK** button when complete.
The new site will appear in the upper-left list in the EnerVista PQMII Setup Software window.
- ▷ Click the **Add Device** button to define the new device.
- ▷ Enter the desired name in the **Device Name** field and a description (optional) of the site.

- ▷ Select “Serial” from the Interface drop-down list.
This will display a number of interface parameters that must be entered for proper RS232 functionality.
- ▷ Enter the relay slave address and COM port values (from the [S1 PQMII SETUP](#) ⇨ [FRONT PANEL RS232 SERIAL PORT](#) setpoints menu) in the Slave Address and COM Port fields.
- ▷ Enter the physical communications parameters (baud rate and parity settings) in their respective fields.
- ▷ Click the **Read Order Code** button to connect to the PQMII device and upload the order code.
If a communications error occurs, ensure that the PQMII serial communications values entered in the previous step correspond to the relay setting values.
- ▷ Click **OK** when the relay order code has been received.
The new device will be added to the Site List window (or Online window) located in the top left corner of the main EnerVista PQMII Setup Software window.

The PQMII Site Device has now been configured for serial communications.

Upgrading Firmware

Description

To upgrade the PQMII firmware, follow the procedures listed in this section. Upon successful completion of this procedure, the PQMII will have new firmware installed with the original setpoints.

The latest firmware files are available from the GE Multilin website at <http://www.GEmultilin.com>.

Saving Setpoints to a File

Before upgrading firmware, it is important to save the current PQMII settings to a file on your PC. After the firmware has been upgraded, it will be necessary to load this file back into the PQMII.

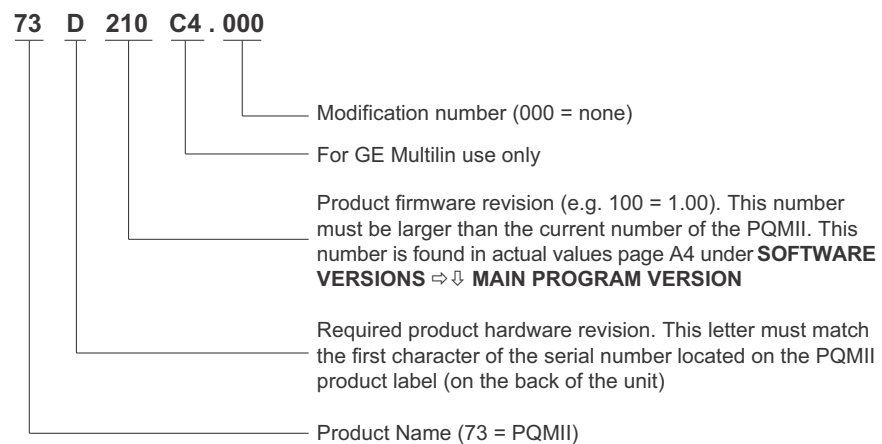
- ▷ To save setpoints to a file, select the **File > Read Device Settings** menu item.
The EnerVista PQMII Setup Software will read the device settings and prompt the user to save the setpoints file.
- ▷ Select an appropriate name and location for the setpoint file.
- ▷ Click **OK**.
The saved file will be added to the “Files” pane of the EnerVista PQMII Setup Software main window.

Loading New Firmware


- ▷ Select the **Commands > Upgrade Firmware** menu item.
A warning will appear.
- ▷ Select **Yes** to proceed or **No** to abort the process.
Do not proceed unless you have saved the current setpoints as shown in the previous section.



- ▷ Locate the firmware file to load into the PQMII.
The firmware filename has the following format:




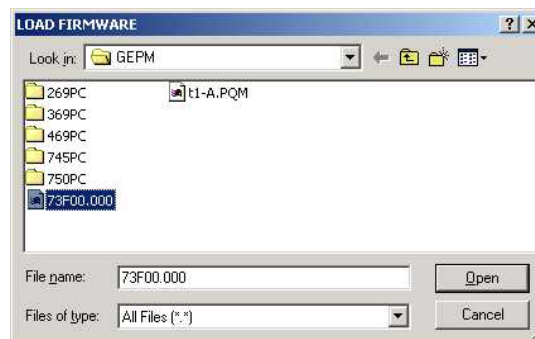- ▷ Select the required file.
- ▷ Click on **OK** to proceed or **Cancel** to abort the firmware upgrade.



One final warning will appear. This will be the last chance to abort the firmware upgrade.

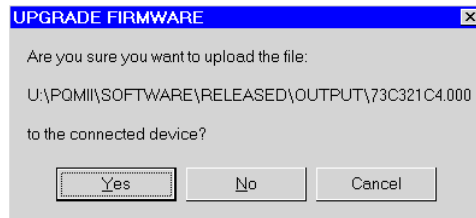- ▷ Select **Yes** to proceed, **No** to load a different file, or **Cancel** to abort the process.



The EnerVista PQMII Setup Software now prepares the PQMII to receive the new firmware file. The PQMII will display a message indicating that it is in Upload Mode. While the file is being loaded into the PQMII, a status box appears showing how much of the new firmware file has been transferred and how much is remaining. The entire transfer process takes approximately five minutes.

The EnerVista PQMII Setup Software will notify the user when the PQMII has finished loading the file.

- ▷ Carefully read any displayed messages and click **OK** to return the main screen.

If the PQMII does not communicate with the EnerVista PQMII Setup Software, ensure that the following PQMII setpoints correspond with the EnerVista PQMII Setup Software settings:

MODBUS COMMUNICATION ADDRESS

BAUD RATE

PARITY (if applicable)

Also, ensure that the correct COM port is being used.

Loading Saved Setpoints

- ▷ Select the previously saved setpoints file from the File pane of the EnerVista PQMII Setup Software main window.
- ▷ Select the setpoint file to be loaded into the PQMII.
- ▷ Click **OK**.
- ▷ Select the **File > Edit Settings File Properties** menu item and change the file version of the setpoint file to match the firmware version of the PQMII.
- ▷ With the updated setpoint file selected in the File pane, select the **File > Write Settings to Device** menu item and select the target PQMII to receive the previously saved settings file.
A dialog box will appear to confirm the request to download setpoints.
- ▷ Click **Yes** to send the setpoints to the PQMII or **No** to end the process.

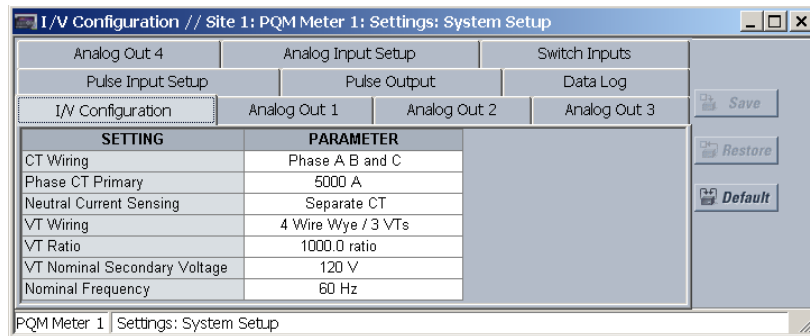
The EnerVista PQMII Setup Software will load the setpoint file into the PQMII. If new setpoints were added in the firmware upgrade, they will be set to factory defaults.

Using the EnerVista PQMII Setup Software

Entering Setpoints

The System Setup page will be used as an example to illustrate the entering of setpoints.

- ▷ Select the **Setpoint > System Setup** menu item. The following window will appear:



When a non-numeric setpoint such as **CT WIRING** is selected, EnerVista PQMII Setup Software displays a drop-down menu:

SETTING	PARAMETER
CT Wiring	Phase A and C only
Phase CT Primary	Phase A B and C
Neutral Current Sensing	Phase A and B only
VT Wiring	Phase A and C only
VT Ratio	Phase A only

When a numeric setpoint such as **PHASE CT PRIMARY** is selected, EnerVista PQMII Setup Software displays a keypad that allows the user to enter a value within the setpoint range displayed near the top of the keypad:

Range: OFF, 5 to 12000 A

Increment: 5 A

5000 A

A	D	7	8	9	CE
B	E	4	5	6	Off
C	F	1	2	3	
<input type="radio"/> Hex <input checked="" type="radio"/> Dec		0	+/-	.	
					Accept Cancel

- ▷ Click **Accept** to exit from the keypad and keep the new value. Click on **Cancel** to exit from the keypad and retain the old value.
- ▷ In the Setpoint / System Setup dialog box, click on **Store** to save the values into the PQMII.
- ▷ Click **OK** to accept any changes and exit the window.
- ▷ Click **Cancel** to retain previous values and exit.

Viewing Actual Values

If a PQMII is connected to a computer via the serial port, any measured value, status and alarm information can be displayed. Use the Actual pull-down menu to select various measured value screens. Monitored values will be displayed and continuously updated.

Setpoint Files

To print and save all the setpoints to a file follow the steps outlined in 4.3.2: *Saving Setpoints to a File*.

To load an existing setpoints file to a PQMII and/or send the setpoints to the PQMII follow the steps outlined in 4.3.4: *Loading Saved Setpoints*.

Getting Help

A detailed Help file is included with the EnerVista PQMII Setup Software.

Select the **Help > Contents** menu item to obtain an explanation of any feature, specifications, setpoint, actual value, etc. Context-sensitive help can also be activated by clicking on the desired function.

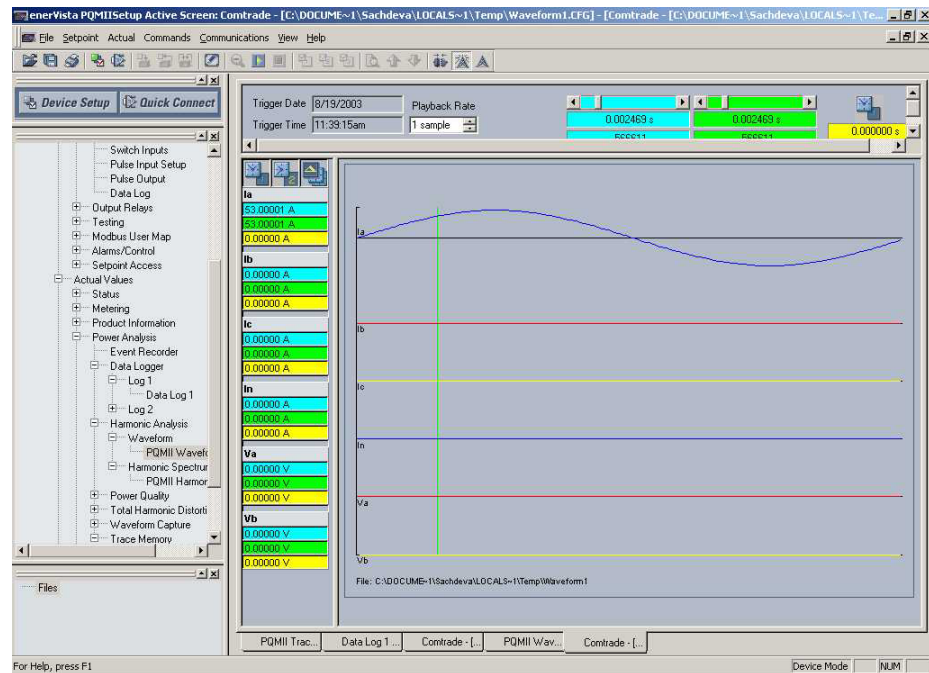
For easy reference, any topic can be printed by selecting **File > Print Topic** item from the Help file menu bar.

Power Analysis

Waveform Capture

Two cycles (64 samples/cycle) of voltage and current waveforms can be captured and displayed on a PC using the EnerVista PQMII Setup Software or third party software. Distorted peaks or notches from SCR switching provides clues for taking corrective action. Waveform capture is also a useful tool when investigating possible wiring problems due to its ability to display the phase relationship of the various inputs. The waveform capture feature is implemented into EnerVista PQMII Setup Software as shown below.

Select the **Actual > Power Analysis > Waveform Capture** menu item. The EnerVista PQMII Setup Software will open the Waveform Capture dialog box.




Select the buttons on the left to display the desired waveforms. The waveform values for the current cursor line position are displayed to the right of the selected buttons. Numerical values are displayed directly below the button.

Harmonic Analysis

Non-linear loads such as variable speed drives, computers, and electronic ballasts can cause harmonics which may lead to problems such as nuisance breaker tripping, telephone interference, transformer, capacitor or motor overheating. For fault diagnosis such as detecting undersized neutral wiring, need for a harmonic rated transformer or effectiveness of harmonic filters; details of the harmonic spectrum are useful and available with the PQMII and the EnerVista PQMII Setup Software.

The EnerVista PQMII Setup Software can perform a harmonic analysis on any of the four current inputs or any of the three voltage inputs by placing the PQMII in a high speed sampling mode (256 samples/cycle) where it will sample one cycle of the user defined parameter. EnerVista PQMII Setup Software then takes this data and performs a FFT (Fast Fourier Transform) to extract the harmonic information. The harmonic analysis feature is implemented into EnerVista PQMII Setup Software as shown below.

- ▷ Select the **Actual > Power Analysis > Harmonic Analysis > Harmonic Spectrum** menu item.
The EnerVista PQMII Setup Software can display the Harmonic Analysis Spectrum window including the harmonic spectrum up to and including the 62nd harmonic.
- ▷ Enter the trigger parameter for the **Select Trigger** setting.
- ▷ Click the **Select** button for the **Trigger** setting.
The Waveform capture window will appear.

- To display the harmonic spectrum, click the Harmonics button () on the top of the screen.

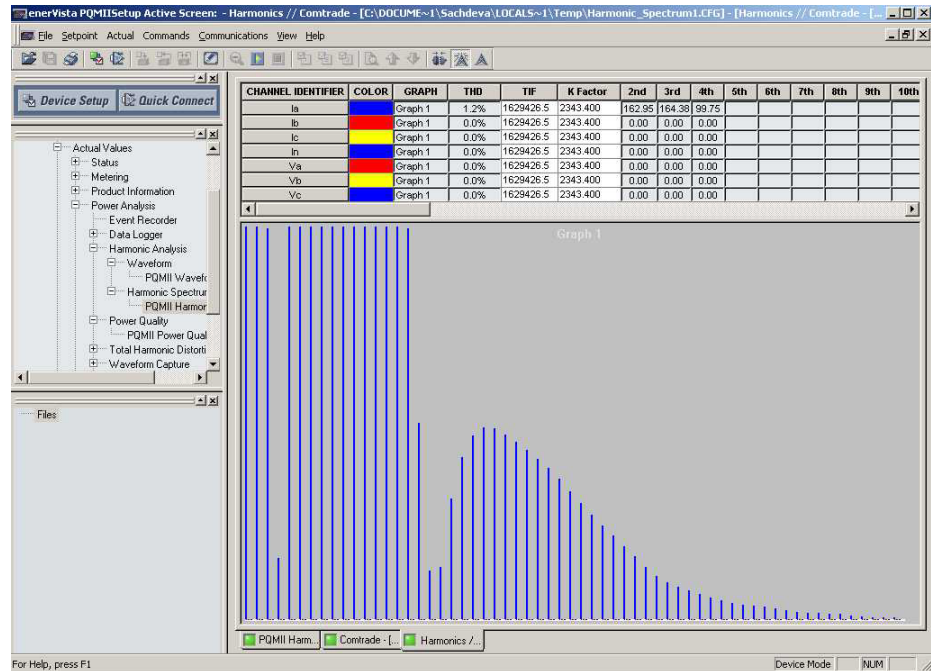


FIGURE 4-3: Harmonic Spectrum Display

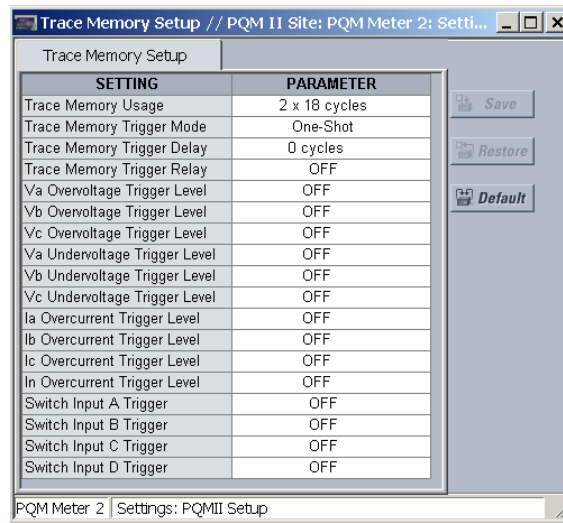
The window includes details of the currently selected harmonic and other harmonic analysis-related data (for example, THD, K Factor, etc.).

- Select **Read Last Trigger From Device** to load previous acquired spectra from the PQMII.

Trace Memory

The trace memory feature allows the PQMII to be setup to trigger on various conditions. The trace memory can record maximum of 36 cycles of data (16 samples per cycle) for all voltage and current inputs simultaneously. A Total Trace Triggers Counter has been implemented in the PQMII Memory Map at Register 0x0B83. This register will keep a running total of all valid Trace Memory Triggers from the last time power was applied to the PQMII. The Total Trace Triggers counter will rollover to 0 at 65536. The trace memory feature is implemented into the EnerVista PQMII Setup Software as shown below.

- Select the **Setpoint > PQMII Setup > Trace Memory Setup** menu item to setup the trace memory feature.




The **Trace Memory Usage** parameter is set as follows:

- 1 x 36 cycles: upon trigger, the entire buffer is filled with 36 cycles of data
- 2 x 18 cycles: 2 separate 18-cycle buffers are created and each is filled upon a trigger
- 3 x 12 cycles: 3 separate 12 cycle buffers are created and each is filled upon a trigger

If the **Trace Memory Trigger Mode** is set to “One-Shot”, then the trace memory is triggered once per buffer; if it is set to “Retrigger”, then it automatically retriggers and overwrites the previous data.

The **Trace Memory Trigger Delay** delays the trigger by the number of cycles specified. The Voltage, Current, and Switch Inputs selections are the parameters and levels that are used to trigger the trace memory. Clicking **Save** sends the current settings to the PQMII.

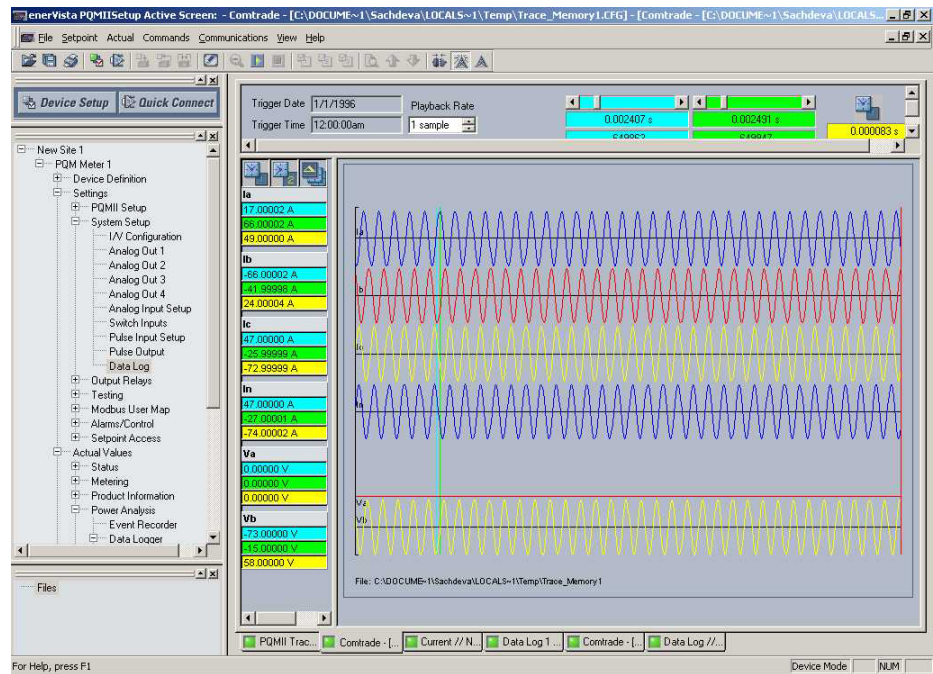- ▷ Select the **Actual > Power Analysis > Trace Memory** menu item to view the trace memory data.
This launches the Trace Memory Waveform window.



Data Logger

The data logger feature allows the PQMII to continuously log various specified parameters at the specified rate. The data logger uses the 64 samples/cycle data. This feature is implemented into EnerVista PQMII Setup Software as shown below.

- ▷ Select the **Setpoint > System Setup > Data Log** menu item to setup the data logger feature.
This launches the Data Log settings box shown below. The state of each data logger and percent filled is shown.
- ▷ Use the **Start Log 1(2)** and **Stop Log 1(2)** buttons to start and stop the logs.

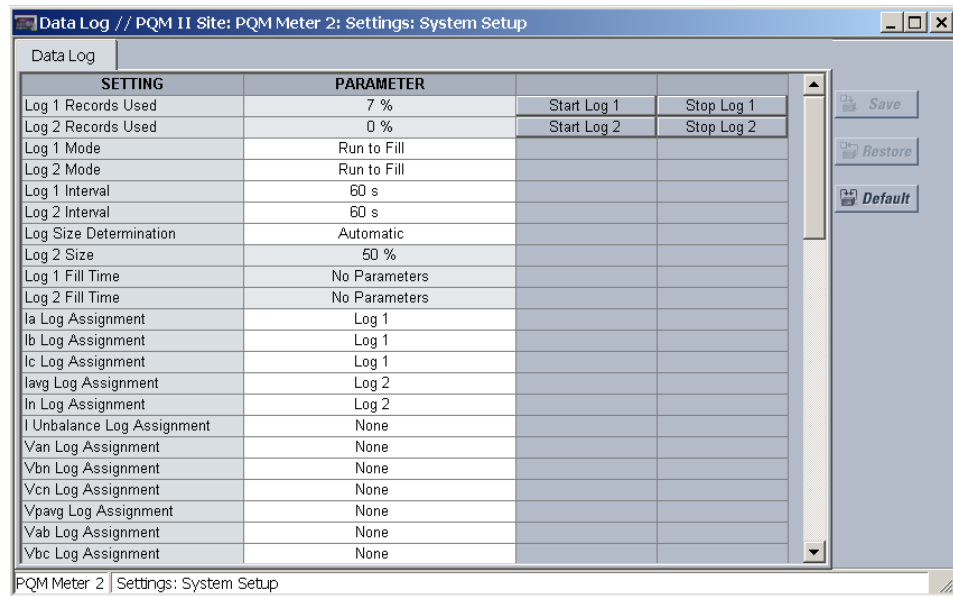


FIGURE 4-4: Data Logger Setup Window

- The **Log 1(2) Mode** parameters are set as follows:
 - “Run to Fill”: when the data logger is full (100%) it will stop logging
 - “Circulate”: when the data logger is full, it will start from the beginning and overwrite the previous data.
- The **Log 1(2) Interval** parameters determine how frequently the PQMII logs each piece of data.
- The total log size is approximately 192KB. The allotment of this memory can be varied between the two logs to maximize the overall log time. Set the **Log Size Determination** to let the PQMII automatically optimize the memory. If desired, the optimization can also be performed manually by the user.
- The **Log 1(2) Fill Time** parameters represent the amount of time the data logger takes to fill to 100%. This time is dependent on the logging interval and the number of parameters being logged.
 - ▷ Set the parameters to be logged by setting the various **Log Assignment** parameters to the desired log.
 - ▷ Select the **Actual > Power Analysis > Data Logger > Log 1 (or Log 2)** item to view the respective data logger.

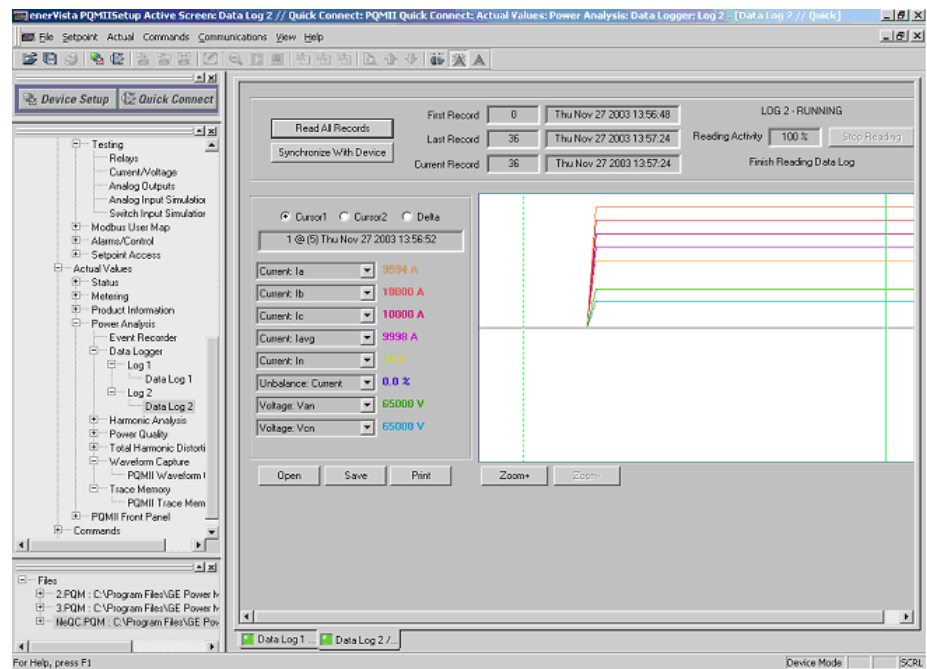


FIGURE 4-5: Data Logger Window

5. The Data Log 1(2) dialog box displays the record numbers, data log start time, the current time, and parameter values for the current cursor line position.

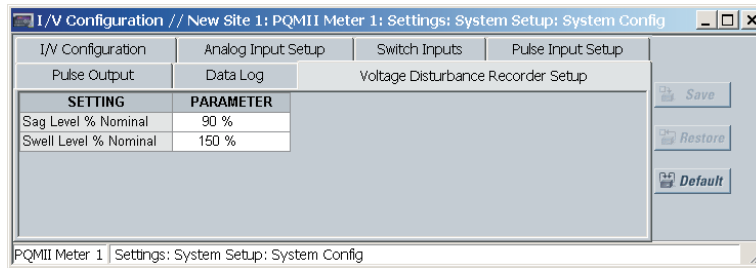
Voltage Disturbance Recorder

The Voltage Disturbance Recorder allows the PQMII to monitor and record sag and swell disturbances. This function can record up to 500 sag/swell events for all voltages simultaneously. The events roll-over and old events are lost when more than 500 events are recorded.

PQMII VDR events are stored in volatile memory. Therefore, all voltage disturbance events will be cleared when control power is cycled to the meter.

The operation of the voltage disturbance recorder as implemented in the EnerVista PQMII Setup Software is shown below:

- Select the **Setpoint > System Setup > System Config** menu item.
- Select the **Voltage Disturbance Recorder** Setup tab.
- The **Sag Level % Nominal** should be set to the level to which a voltage input must fall before a sag event is to be recorded. The **Swell Level % Nominal** should be set to the level to which a voltage input must rise before a swell event is to be recorded.
- Click **Save** to send the current settings to the PQMII.



- ▷ Select the **Actual > Power Analysis > Voltage Disturbance Recorder** menu item to view the voltage disturbance recorder events.

Within the voltage disturbance recorder window, each event is listed and can be selected. When the event is selected the following values are displayed:

- **Dist. Number:** The event number. The first event recorded (after the event recorder is cleared) will be given the event number of "1". Each subsequent event will be given an incrementing event number. If the event number reaches 65535, the event number will rollover back to 1.
- **Dist. Type:** The type refers to the classification of the event (i.e. Sag, Swell, Undervoltage or, Overvoltage)
- **Dist. Source:** The source of the disturbance is the line/phase voltage that the disturbance was measured on.
- **Dist. Time/Date:** The time that the disturbance was recorded. Each disturbance is recorded at the end of the disturbance event.
- **Dist. Dur.:** The duration of the event in cycles.
- **Dist. Average Voltage:** The average RMS voltage recorded during the disturbance.

The **Clear Events** button clears the voltage disturbance recorder. Events are overwritten when the event recorder reaches 500 events.

The **Save** button exports the events to a CSV format file. A text file viewer can open and read the file.

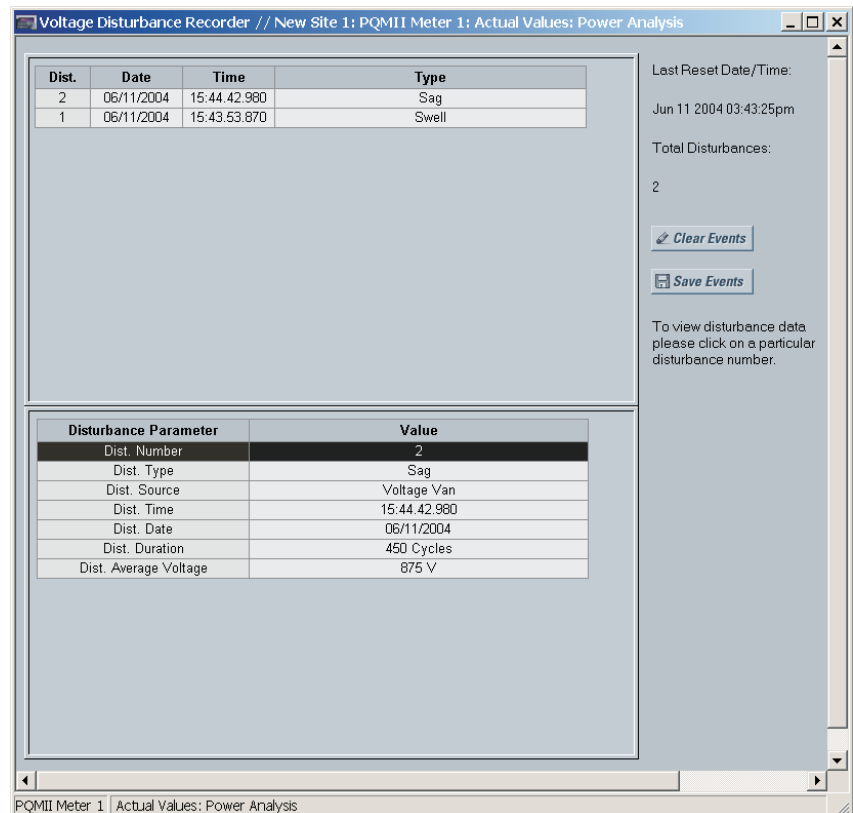


FIGURE 4-6: Voltage Disturbance Recorder

Using EnerVista Viewpoint with the PQMII

Plug and Play Example

EnerVista Viewpoint is an optional software package that puts critical PQMII information onto any PC with plug-and-play simplicity. EnerVista Viewpoint connects instantly to the PQMII via serial, ethernet or modem and automatically generates detailed overview, metering, power, demand, energy and analysis screens. Installing EnerVista Launchpad (see previous section) allows the user to install a fifteen-day trial version of EnerVista Viewpoint. After the fifteen day trial period you will need to purchase a license to continue using EnerVista Viewpoint. Information on license pricing can be found at <http://www.enervista.com>.

- ▷ Install the EnerVista Viewpoint software from the GE EnerVista CD.
- ▷ Ensure that the PQMII device has been properly configured for either serial or Ethernet communications (see previous sections for details).
- ▷ Click the **Viewpoint** window in EnerVista to log into EnerVista Viewpoint.
At this point, you will be required to provide a login and password if you have not already done so.

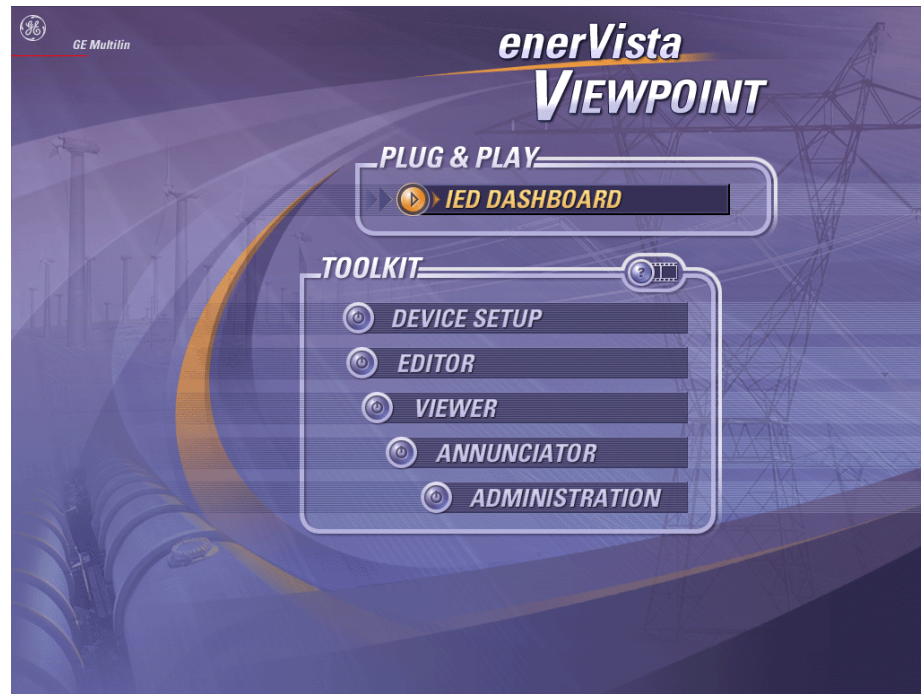


FIGURE 4–7: EnerVista Viewpoint Main Window

- ▷ Click the **Device Setup** button to open the Device Setup window.
- ▷ Click the **Add Site** button to define a new site.
- ▷ Enter the desired site name in the **Site Name** field.
If desired, a short description of site can also be entered along with the display order of devices defined for the site.
- ▷ Click the **OK** button when complete.
The new site will appear in the upper-left list in the EnerVista PQMII Setup Software window.
- ▷ Click the **Add Device** button to define the new device.
- ▷ Enter the desired name in the **Device Name** field and a description (optional) of the site.
- ▷ Select the appropriate communications interface (Ethernet or Serial) and fill in the required information for the PQMII.

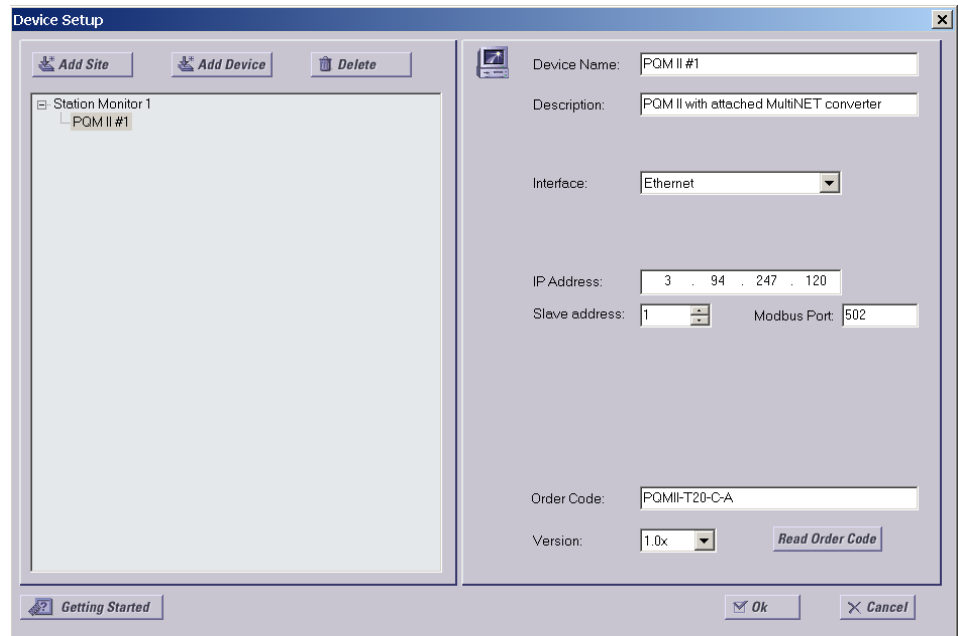


FIGURE 4–8: Device Setup Screen (Example)

- ▷ Click the **Read Order Code** button to connect to the PQMII device and upload the order code.
If a communications error occurs, ensure that communications values entered in the previous step correspond to the relay setting values.
- ▷ Click **OK** when complete.
- ▷ From the EnerVista main window, select the **IED Dashboard** item to open the Plug and Play IED dashboard.
An icon for the PQMII will be shown.

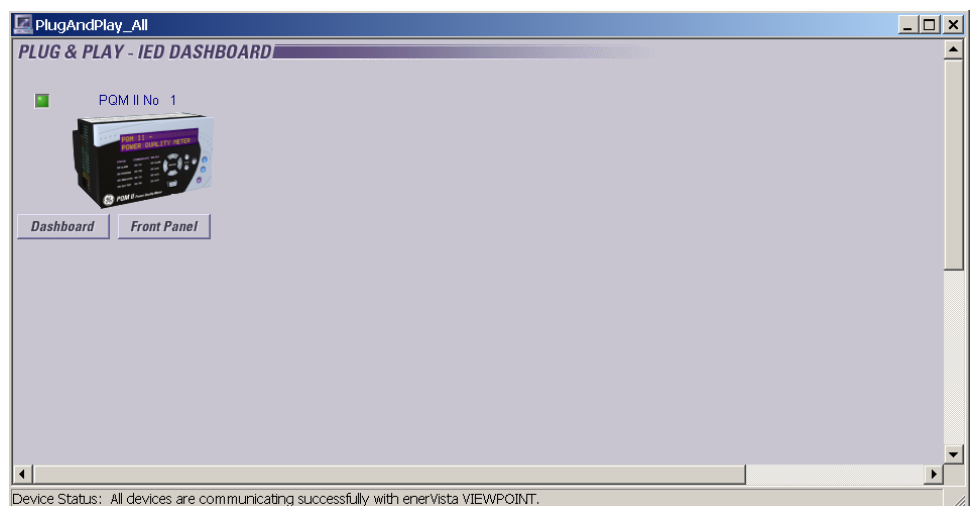


FIGURE 4–9: 'Plug and Play' Dashboard

- ▷ Click the **Dashboard** button below the PQMII icon to view the device information.
We have now successfully accessed our PQMII through EnerVista Viewpoint.


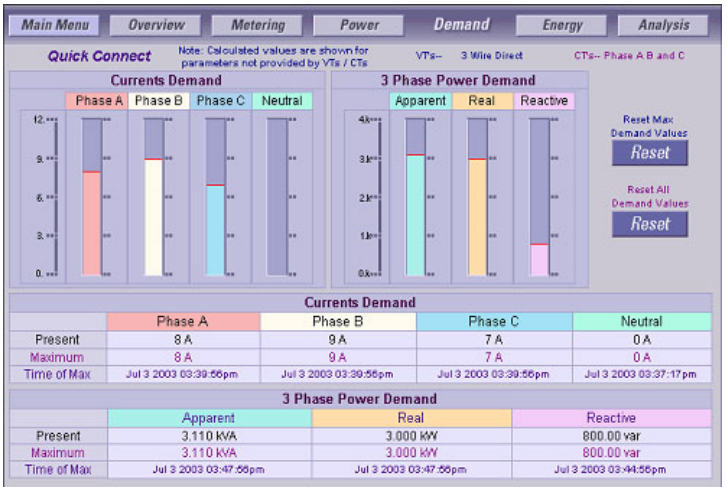
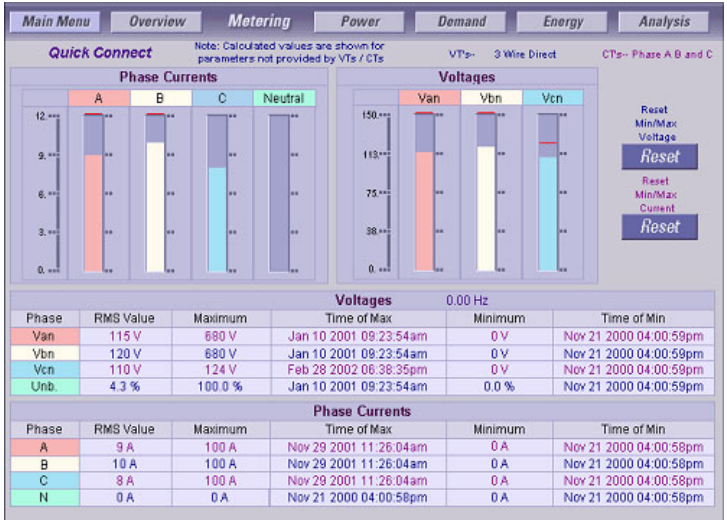


FIGURE 4-10: EnerVista Plug and Play Screens

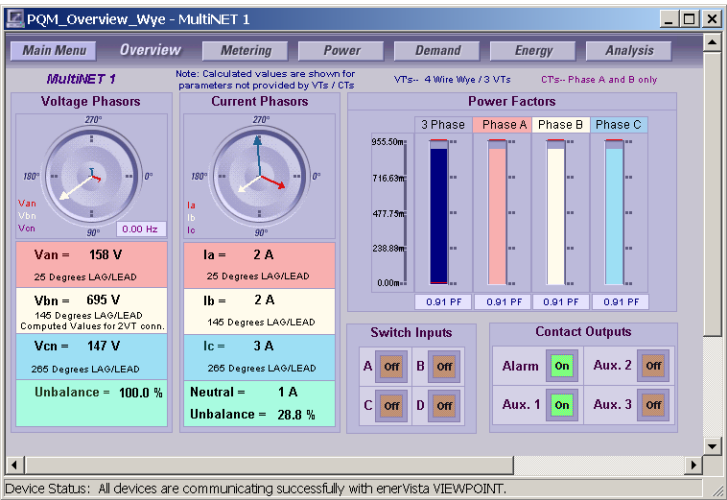For additional information on EnerVista viewpoint, please visit the EnerVista website at <http://www.enervista.com>.



PQMII Power Quality Meter

Chapter 5: Setpoints

Introduction

Setpoint Entry Methods

Prior to operating the PQMII, it is necessary to program setpoints to define system characteristics and alarm settings by one of the following methods:

- Front panel, using the keys and display.
- Rear terminal RS485 port COM1 or COM2, or front RS232 port and a computer running the EnerVista PQMII Setup Software included with the PQMII, or from a SCADA system running user-defined software.



















Either of the above methods can be used to enter the same information. However, a computer makes information entry considerably easier. Moreover, a computer allows setpoint files to be stored and downloaded for fast, error-free entry. The EnerVista PQMII Setup Software included with the PQMII facilitates this process. With this software, setpoints can be modified remotely and downloaded at a later time to the PQMII. Refer to 4.4: *Using the EnerVista PQMII Setup Software* for additional details.






















Setpoint messages are organized into logical groups or pages for easy reference. Messages may vary somewhat from those illustrated because of installed options, and messages associated with disabled features will be hidden. This context sensitive operation eliminates confusing detail. Before accurate monitoring can begin, the setpoints on each page should be worked through, entering values either by local keypad or computer.

















The PQMII leaves the factory with setpoints programmed to default values. These values are shown in all setpoint message illustrations. Many of these factory default values can be left unchanged. At a minimum, however, setpoints that are shown shaded in 5.3.1: *Current and Voltage Configuration* must be entered for the system to function correctly. As a

safeguard, the PQMII will alarm and lock-out until values have been entered for these setpoints. The **CRITICAL SETPOINTS NOT STORED** alarm message will be displayed until the PQMII is programmed with these critical setpoints.

Setpoints Main Menu

■ SETPOINTS S1 PQMII SETUP	[▷]		■ PREFERENCES [▷]	See page 5-5.
MESSAGE		■ SETPOINT ACCESS [▷]	See page 5-6.	
MESSAGE		■ COM1 RS485 SERIAL PORT [▷]	See page 5-7.	
MESSAGE		■ COM2 RS485 SERIAL PORT [▷]	See page 5-7.	
MESSAGE		■ FRONT PANEL RS232 SERIAL PORT [▷]	See page 5-7.	
MESSAGE		■ DNP 3.0 CONFIGURATION [▷]	See page 5-8.	
MESSAGE		■ CLOCK [▷]	See page 5-9.	
MESSAGE		■ CALCULATION PARAMETERS [▷]	See page 5-10.	
MESSAGE		■ CLEAR DATA [▷]	See page 5-12.	
MESSAGE		■ EVENT RECORDER [▷]	See page 5-13.	
MESSAGE		■ TRACE MEMORY [▷]	See page 5-14.	
MESSAGE		■ PROGRAMMABLE MESSAGE [▷]	See page 5-17.	
MESSAGE		■ PRODUCT OPTIONS [▷]	See page 5-18.	
MESSAGE		■ END OF PAGE S1 [▷]		
MESSAGE				
■ SETPOINTS S2 SYSTEM SETUP	[▷]		■ CURRENT/ VOLTAGE CONFIG. [▷]	See page 5-19.
MESSAGE		■ ANALOG OUTPUT 1 [▷]	See page 5-21.	
MESSAGE		■ ANALOG OUTPUT 2 [▷]	See page 5-21.	

MESSAGE		■ ANALOG OUTPUT 3 [▷]	See page 5-21.
MESSAGE		■ ANALOG OUTPUT 4 [▷]	See page 5-21.
MESSAGE		■ ANALOG INPUT [▷]	See page 5-25.
MESSAGE		■ SWITCH INPUT A [▷]	See page 5-27.
MESSAGE		■ SWITCH INPUT B [▷]	See page 5-27.
MESSAGE		■ SWITCH INPUT C [▷]	See page 5-27.
MESSAGE		■ SWITCH INPUT D [▷]	See page 5-27.
MESSAGE		■ PULSE OUTPUT [▷]	See page 5-28.
MESSAGE		■ PULSE INPUT [▷]	See page 5-29.
MESSAGE		■ DATA LOGGER [▷]	See page 5-30.
MESSAGE		■ VOLTAGE DIST. RECORDER [▷]	See page 5-30.
MESSAGE		■ END OF PAGE S2 [▷]	
MESSAGE			
		■ SETPOINTS S3 OUTPUT RELAYS [▷]	
		■ ALARM RELAY [▷]	See page 5-32.
MESSAGE		■ AUXILIARY RELAY 1 [▷]	See page 5-32.
MESSAGE		■ AUXILIARY RELAY 2 [▷]	See page 5-32.
MESSAGE		■ AUXILIARY RELAY 3 [▷]	See page 5-32.
MESSAGE		■ END OF PAGE S3 [▷]	
MESSAGE			
		■ SETPOINTS S4 ALARMS/CONTROL [▷]	
		■ CURRENT/VOLTAGE [▷]	See page 5-34.
MESSAGE		■ TOTAL HARMONIC DISTORTION [▷]	See page 5-39.

MESSAGE		■ FREQUENCY [▷]	See page 5-40.
MESSAGE		■ POWER [▷]	See page 5-41.
MESSAGE		■ POWER FACTOR [▷]	See page 5-43.
MESSAGE		■ DEMAND [▷]	See page 5-46.
MESSAGE		■ PULSE INPUT [▷]	See page 5-48.
MESSAGE		■ TIME [▷]	See page 5-49.
MESSAGE		■ MISCELLANEOUS [▷]	See page 5-50.
MESSAGE		■ END OF PAGE S4 [▷]	
MESSAGE		■ SETPOINTS S5 TESTING [▷]	
		■ TEST RELAYS & LEDS [▷]	See page 5-51.
MESSAGE		■ CURRENT/VOLTAGE SIMULATION [▷]	See page 5-51.
MESSAGE		■ ANALOG OUTPUTS SIMULATION [▷]	See page 5-52.
MESSAGE		■ ANALOG INPUT SIMULATION [▷]	See page 5-53.
MESSAGE		■ SWITCH INPUTS SIMULATION [▷]	See page 5-53.
MESSAGE		■ FACTORY USE ONLY [▷]	See page 5-54.
MESSAGE		■ END OF PAGE S5 [▷]	

S1 PQMII Setup

Description

General settings to configure the PQMII are entered on this page. This includes user preferences, the RS485 and RS232 communication ports, loading of factory defaults, and user-programmable messages.

Preferences

PATH: SETPOINTS ⇨ S1 PQMII SETUP ⇨ PREFERENCES

■ PREFERENCES [▷]		DEFAULT MESSAGE TIME: 1.0 MINUTES	Range: 0.1 to 120.0 minutes in steps of 0.1 or OFF
		DISPLAY FILTER CONSTANT: 4	Range: 1 to 10 in steps of 1

MESSAGE

- **DEFAULT MESSAGE TIME:** Up to 10 default messages can be selected to scan sequentially when the PQMII is left unattended. If no keys are pressed for the interval defined by the **DEFAULT MESSAGE TIME** setting, then the currently displayed message is automatically overwritten by the first default message. After 3 seconds, the next default message in the sequence is displayed. Alarm messages will always override the default message display. Note that any setpoint or measured value can be selected as a default message.

See 3.4: Default Messages for details on default message operation and programming.


- **DISPLAY FILTER CONSTANT:** Display filtering may be required in applications where large fluctuations in current and/or voltage are normally present. This setpoint allows the user to enter the PQMII filter constant to average all metered values. If the **DISPLAY FILTER CONSTANT** setpoint is set to 1, the PQMII updates the displayed metered values approximately every 400 ms. Therefore, the display updating equals **DISPLAY FILTER CONSTANT** × 400 ms.

Setpoint Access

PATH: SETPOINTS ⇨ S1 PQMII SETUP ⇨ SETPOINT ACCESS

■ SETPOINT ACCESS [▷]		SETPOINT ACCESS: DISABLE	Range: Disable, Enable
		ENTER SETPOINT ACCESS CODE: 1	Range: 1 to 999 in steps of 1
		SETPOINT ACCESS ON FOR: 5 min.	Range: 1 to 300 min. in steps of 1 or Unlimited
		CHANGE SETPOINT ACCESS CODE: No	Range: No, Yes
		ENTER NEW ACCESS CODE: 0	Range: 1 to 999 in steps of 1
		RE-ENTER NEW ACCESS CODE: 0	Range: 1 to 999 in steps of 1
		ENCRYPTED SETPOINT ACCESS CODE: 376	Range: N/A

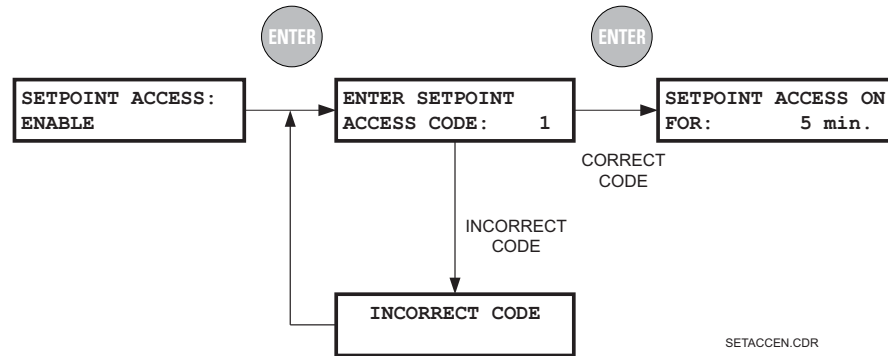To enable setpoint access, follow the steps outlined in the following diagram:



The factory default access code for the PQMII is 1.

If three attempts are made to enable setpoint access with an incorrect code, the value of the setpoint access setpoint changes to “Disabled” and the above procedure must be repeated.

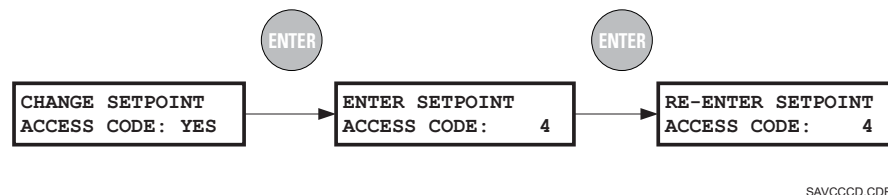
Once setpoint access is enabled, the Program LED indicator turns on. Setpoint alterations are allowed as long as the Program LED indicator remains on. Setpoint access is disabled and the Program LED indicator turns off when:

- The time programmed in **S1 PQMII SETUP** ⇒ **SETPOINT ACCESS** ⇒ **SETPOINT ACCESS ON FOR** is reached
- The control power to the PQMII is removed
- The factory setpoints are reloaded

To permanently enable the setpoint access feature, enable setpoint access and then set **SETPOINT ACCESS ON FOR** to “Unlimited”. Setpoint access remains enabled even if the control power is removed from the PQMII.

Setpoints can be changed via the serial ports regardless of the state of the setpoint access feature or the state of an input switch assigned to setpoint access.

To change the setpoint access code, enable setpoint access and perform the steps as outlined below:



If an attempt is made to change a setpoint when setpoint access is disabled, the **SETPOINT ACCESS: DISABLED** message is displayed to allow setpoint access to be enabled. Once setpoint access has been enabled, the PQMII display will return to the original setpoint message.

If the control option is installed and one of the switches is assigned to “Setpoint Access”, the setpoint access switch and the software setpoint access will act as a logical ‘AND’. That is, both conditions must be satisfied before setpoint access will be enabled. Assuming the setpoint access switch activation is set to closed, the following flash messages will appear depending upon the condition present when the ENTER key is pressed.

Table 1: Setpoint Access Conditions

Condition		Displayed Message
Access Code	Switch Input	
Incorrect	Open	SETPOINT ACCESS OFF ENTER ACCESS CODE
Incorrect	Closed	SETPOINT ACCESS OFF ENTER ACCESS CODE
Correct	Open	CANNOT ALTER SETTING ACCESS SW. DISABLED
Correct	Closed	NEW SETPOINT STORED

Serial Ports

PATH: SETPOINTS ⇒ S1 PQMII SETUP ⇒ ↓ COM1 RS485 SERIAL PORT

<div>■ COM1 RS485 SERIAL PORT [▷]</div> <div>MESSAGE</div>		MODBUS COMMUNICATION ADDRESS: 1	Range: 1 to 255 in steps of 1
		COM1 BAUD RATE: 19200 BAUD	Range: 1200, 2400, 4800, 9600, and 19200 baud
		COM1 PARITY: NONE	Range: None, Even, Odd
<div>■ COM2 RS485 SERIAL PORT [▷]</div> <div>MESSAGE</div>		COM2 BAUD RATE: 19200 BAUD	Range: 1200, 2400, 4800, 9600, and 19200 baud
		COM2 PARITY: NONE	Range: None, Even, Odd
<div>■ FRONT PANEL RS232 SERIAL PORT [▷]</div> <div>MESSAGE</div>		RS232 BAUD RATE: 9600 Baud	Range: 1200, 2400, 4800, 9600, and 19200 baud
		RS232 PARITY: None	Range: None, Even, Odd

- **MODBUS COMMUNICATION ADDRESS:** Enter a unique address from 1 to 255. The selected address is used for all serial communication ports. Address 0 represents a broadcast message to which all PQMIIs will listen but not respond. Although addresses do not have to be sequential, no two PQMIIs can have the same address or there will be conflicts resulting in errors. Generally, each PQMII added to the link uses the next higher address, starting from address 1.
- **BAUD RATE:** Enter the baud rate for each port: 1200, 2400, 4800, 9600, or 19200 baud. All PQMIIs and the computer on the RS485 communication link must run at the same baud rate. The fastest response is obtained at 19200 baud. Use slower baud rates if noise becomes a problem. The data frame consists of 1 start bit, 8 data bits, 1 stop bit and a programmable parity bit. The baud rate default setting is 9600.
- **PARITY:** Enter the parity for each communication port: "Even", "Odd", or "None". All PQMIIs on the RS485 communication link and the computer connecting them must have the same parity.

DNP 3.0 Configuration

PATH: SETPOINTS ⇒ S1 PQMII SETUP ⇒ DNP 3.0 CONFIGURATION

■ DNP 3.0 CONFIGURATION [▷]		DNP PORT: None	Range: None, COM1, COM2
		DNP SLAVE ADDRESS: 0	Range: 0 to 255 in steps of 1
		DNP TURNAROUND TIME: 0 ms	Range: 0 to 100 ms in steps of 10

- **DNP PORT:** Select the appropriate PQMII port to be used for DNP protocol. The COM2 selection is only available if T1 or T20 option is installed in the PQMII. Each port is configured as shown in 5.2.4: *Serial Ports*.
- **DNP SLAVE ADDRESS:** Enter a unique address from 0 to 255 for this particular PQMII. The address selected is applied to the PQMII port currently assigned to communicate using the DNP protocol. Although addresses do not have to be sequential, no two PQMIIs that are daisy chained together can have the same address or there will be conflicts resulting in errors. Generally each PQMII added to the link will use the next higher address.
- **DNP TURNAROUND TIME:** The turnaround time is useful in applications where the RS485 converter without RTS or DTR switching is being employed. A typical value for the delay is 30 ms to allow the transmitter to drop in the RS485 converter.

Clock

PATH: SETPOINTS ⇒ S1 PQMII SETUP ⇒ CLOCK

■ CLOCK [▷]		SET TIME hh:mm:ss 12:00:00 am DATE ▷	Range: time format as shown
		SET DATE dd:mm:yyyy Nov 21, 2003	Range: date format as shown

MESSAGE

- **SET TIME/DATE:** These messages are used to set the time and date for the PQMII software clock.
The PQMII software clock is retained for power interruptions of approximately thirty days. A Clock Not Set alarm can be enabled so that an alarm will occur on the loss of clock data. The time and date are used for all time-stamped data. If the clock has not been set, a "?" will appear on the right-hand side of the displayed time for all time-stamped data. Follow the steps shown below to set the new time and date.

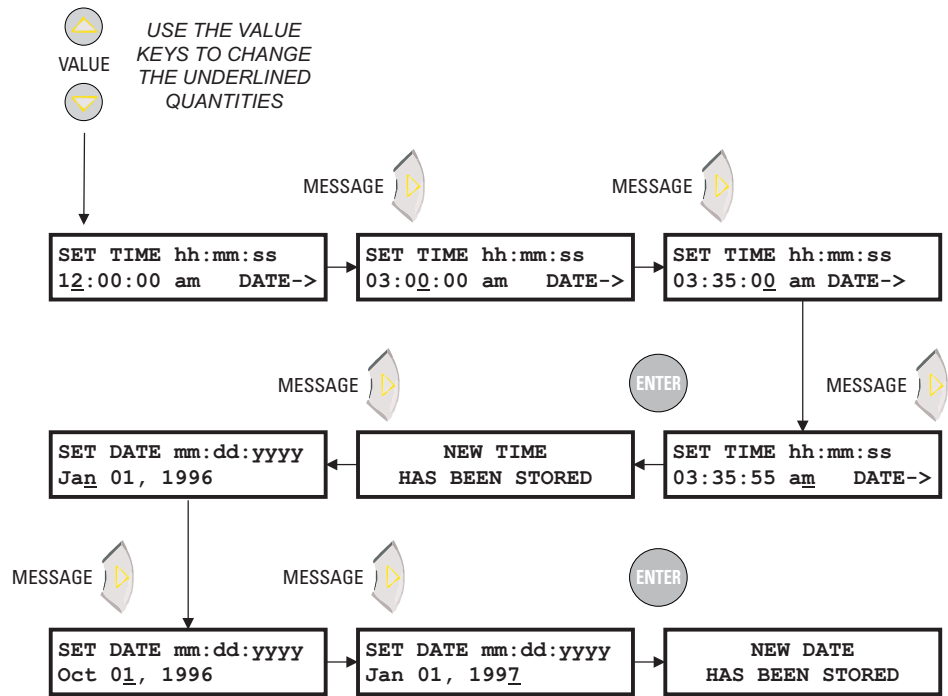


FIGURE 5-1: Setting the Date and Time

The time and date can also be set via Modbus communications.

Calculation Parameters

PATH: SETPOINTS ⇒ S1 PQMII SETUP ⇒ ↓ CALCULATION PARAMETERS

<div>■ CALCULATION PARAMETERS</div> <div>[▷]</div>			EXTRACT FUNDAMENTAL: DISABLE	Range: Disable, Enable
	MESSAGE		CURRENT DEMAND TYPE: THERMAL EXPONENTIAL	Range: Thermal Exponential, Rolling Interval, Block Interval
	MESSAGE		CURRENT DEMAND TIME INTERVAL: 30 min.	Range: 5 to 180 min. in steps of 1
	MESSAGE		POWER DEMAND TYPE: THERMAL EXPONENTIAL	Range: Thermal Exponential, Rolling Interval, Block Interval
	MESSAGE		POWER DEMAND TIME INTERVAL: 30 min.	Range: 5 to 180 min. in steps of 1
	MESSAGE		ENERGY COST PER kWh 10.00 cents	Range: 0.01 to 500.00 cents in steps of 0.01
	MESSAGE		TARIFF PERIOD 1 START TIME: 0 min.	Range: 0 to 1439 min. in steps of 1
	MESSAGE		TARIFF PERIOD 1 COST PER kWh: 10.00 cents	Range: 0.01 to 500.00 cents in steps of 0.01
	MESSAGE		TARIFF PERIOD 2 START TIME: 0 min.	Range: 0 to 1439 min. in steps of 1
	MESSAGE		TARIFF PERIOD 2 COST PER kWh: 10.00 cents	Range: 0.01 to 500.00 cents in steps of 0.01
	MESSAGE		TARIFF PERIOD 3 START TIME: 0 min.	Range: 0 to 1439 min. in steps of 1
	MESSAGE		TARIFF PERIOD 3 COST PER kWh: 10.00 cents	Range: 0.01 to 500.00 cents in steps of 0.01


The PQMII can be programmed to calculate metering quantities and demand by various methods.

- **EXTRACT FUNDAMENTAL:** The PQMII can be programmed to calculate all metering quantities using true RMS values or the fundamental component of the sampled data. When this setpoint is set to "Disable", the PQMII will include all harmonic content, up to the 32nd harmonic, when making metering calculations. When this setpoint is set to "Enable", the PQMII will extract the fundamental contribution of the sampled data only and use this contribution to calculate all metering quantities. Many utilities base their metering upon fundamental, or displacement, values. Using the fundamental contribution allows one to compare the quantities measured by the PQMII with the local utility meter.
- **CURRENT DEMAND TYPE:** Three current demand calculation methods are available: thermal exponential, block interval, and rolling interval (see the *Demand Calculation Methods* table below). The current demand for each phase and neutral is calculated individually.
- **CURRENT DEMAND TIME INTERVAL:** Enter the time period over which the current demand calculation is to be performed.
- **POWER DEMAND TYPE:** Three real/reactive/apparent power demand calculation methods are available: thermal exponential, block interval, and rolling interval (see the

Demand Calculation Methods table below). The three phase real/reactive/apparent power demand is calculated.

- **POWER DEMAND TIME INTERVAL:** Enter the time period over which the power demand calculation is to be performed.



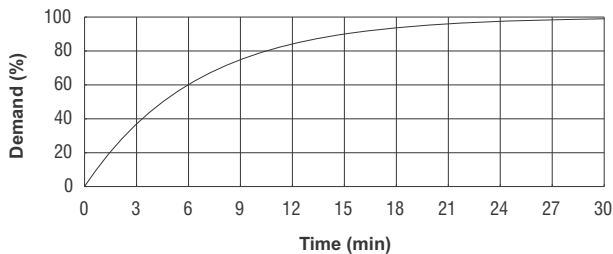









Table 2: Demand Calculation Methods

Method	Description
Thermal Exponential	<p>This selection emulates the action of an analog peak-recording thermal demand meter. The PQMII measures the average quantity (RMS current, real power, reactive power, or apparent power) on each phase every minute and assumes the circuit quantity remains at this value until updated by the next measurement. It calculates the “thermal demand equivalent” based on the following equation:</p> $d(t) = D(1 - e^{-kt}) \quad \text{(EQ 5.1)}$ <p>where: d = demand after applying input quantity for time t (in min.) D = input quantity (constant) $k = 2.3 / \text{thermal 90\% response time}$</p>  <p>The graph above shows the thermal response characteristic for a thermal 90% response time of 15 minutes. A setpoint establishes the time to reach 90% of a steady-state value, just as the response time of an analog instrument (a steady-state value applied for twice the response time will indicate 99% of the value).</p>
Block Interval	<p>This selection calculates a linear average of the quantity (RMS current, real power, reactive power, or apparent power) over the programmed demand TIME INTERVAL. Each new value of demand becomes available at the end of each time interval.</p>
Rolling Interval	<p>This selection calculates a linear average of the quantity (RMS current, real power, reactive power, or apparent power) over the programmed demand TIME INTERVAL (in the same way as Block Interval). The value is updated every minute and indicates the demand over the time interval just preceding the time of update.</p>

- **ENERGY COST PER kWh:** Enter the cost per kWh that is charged by the local utility.
- **TARIFF PERIOD START TIME:** Enter the start time for each of the three tariff period calculations.
- **TARIFF PERIOD COST PER kWh:** Enter the cost per kWh for each of the three tariff periods.

Clear Data

PATH: SETPOINTS ⇒ S1 PQMII SETUP ⇒ CLEAR DATA


■ CLEAR DATA [▷]		CLEAR ENERGY VALUES: NO	Range: Yes, No
MESSAGE		CLEAR MAX DEMAND VALUES: NO	Range: Yes, No
MESSAGE		CLEAR ALL DEMAND VALUES: NO	Range: Yes, No
MESSAGE		CLEAR MIN/MAX CURRENT VALUES: NO	Range: Yes, No
MESSAGE		CLEAR MIN/MAX VOLTAGE VALUES: NO	Range: Yes, No
MESSAGE		CLEAR MIN/MAX POWER VALUES: NO	Range: Yes, No
MESSAGE		CLEAR MIN/MAX FREQUENCY VALUES: NO	Range: Yes, No
MESSAGE		CLEAR MAX THD VALUES: NO	Range: Yes, No
MESSAGE		CLEAR PULSE INPUT VALUES: NO	Range: Yes, No
MESSAGE		CLEAR EVENT RECORD: NO	Range: Yes, No
MESSAGE		CLEAR VOLTAGE DIST. RECORD: NO	Range: Yes, No
MESSAGE		LOAD FACTORY DEFAULT SETPOINTS: NO	Range: Yes, No

- **CLEAR ENERGY VALUES:** Enter “Yes” to clear all the energy used data in the **A1 METERING ⇒ ENERGY** actual values subgroup. The **TIME OF LAST RESET** date under the same subgroup is updated upon issuing this command.
- **CLEAR MAX DEMAND VALUES:** Enter “Yes” to clear all the maximum power and current demand data under the actual values subgroup **A1 METERING ⇒ DEMAND**. The time and date associated with each message will be updated to the current date upon issuing this command.
- **CLEAR ALL DEMAND VALUES:** Enter “Yes” to clear all the power and current demand data under the actual values subgroup **A1 METERING ⇒ DEMAND**. The time and date associated with each message will be updated to the current date upon issuing this command.
- **CLEAR MIN/MAX CURRENT VALUES:** Enter “Yes” to clear all the minimum/maximum current data under the actual values subgroup **A1 METERING ⇒ CURRENT**. The time and date associated with each message will be updated to the current date upon issuing this command.
- **CLEAR MIN/MAX VOLTAGE VALUES:** Enter “Yes” to clear all the minimum/maximum voltage data under the actual values subgroup **A1 METERING ⇒ VOLTAGE**. The time and date associated with each message will be updated to the current date upon issuing this command.

- **CLEAR MIN/MAX POWER VALUES:** Enter “Yes” to clear all the minimum/maximum power data under the actual values subgroup **A1 METERING** ⇒ **POWER**. The time and date associated with each message will be updated to the current date upon issuing this command.
- **CLEAR MIN/MAX FREQUENCY VALUES:** Enter “Yes” to clear all the minimum/maximum frequency data under the actual values subgroup **A1 METERING** ⇒ **FREQUENCY**. The time and date associated with each message will be updated to the current date upon issuing this command.
- **CLEAR MAX THD VALUES:** Enter “Yes” to clear all the max THD data under the actual values subgroup **A3 POWER ANALYSIS** ⇒ **TOTAL HARMONIC DISTORTION**. The time and date associated with each message will be updated to the current date upon issuing this command.
- **CLEAR PULSE INPUT VALUES:** Enter “Yes” to clear all the pulse input values under the actual values subgroup **A1 METERING** ⇒ **PULSE INPUT**. The time and date associated with this message will be updated to the current date upon issuing this command.
- **CLEAR EVENT RECORD:** Enter “Yes” to clear all of the events in the Event Record. This will eliminate all previous events from the Event Record and create a Clear Events event as the new event number 1. The Event Recorder can be cleared only if it is enabled in **S1 PQMII SETUP** ⇒ **EVENT RECORDER** ⇒ **EVENT RECORDER OPERATION**.
The **CLEAR EVENT RECORD** command takes six seconds to complete, during which no new events will be logged. Do not cycle power to the unit while the event record is being cleared.
- **CLEAR VOLTAGE DIST. RECORD:** Enter “Yes” to clear all of the events in the Voltage Disturbance Record.
- **LOAD FACTORY DEFAULT SETPOINTS:** When the PQMII is shipped from the factory all setpoints will be set to factory default values. These settings are shown in the setpoint message reference figures. To return a PQMII to these known setpoints select “Yes” and press the key while this message is displayed. The display will then warn that all setpoints will be lost and will ask whether to continue. Select yes again to reload the setpoints. It is a good idea to first load factory defaults when replacing a PQMII to ensure all the settings are defaulted to reasonable values.

Event Recorder


PATH: SETPOINTS ⇒ S1 PQMII SETUP ⇒ EVENT RECORDER




















The Event Recorder can be disabled or enabled using the **EVENT RECORDER OPERATION** setpoint. When the Event Recorder is disabled no new events are recorded. When the Event Recorder is enabled new events are recorded with the 150 most recent events displayed in **A3 POWER ANALYSIS** ⇒ **EVENT RECORDER**. Refer to 6.4.4 *Event Recorder* for the list of possible events. All data within the Event Recorder is stored in non-volatile memory.

Trace Memory

PATH: SETPOINTS ⇒ S1 PQMII SETUP ⇒ TRACE MEMORY



MESSAGE		TRACE MEMORY TRIGGER MODE: ONE SHOT	Range: One Shot, Retrigger
MESSAGE		Ia OVERCURRENT TRIG LEVEL: OFF % CT	Range: 1 to 150% of CT in steps of 1 or OFF
MESSAGE		Ib OVERCURRENT TRIG LEVEL: OFF % CT	Range: 1 to 150% of CT in steps of 1 or OFF
MESSAGE		Ic OVERCURRENT TRIG LEVEL: OFF % CT	Range: 1 to 150% of CT in steps of 1 or OFF
MESSAGE		In OVERCURRENT TRIG LEVEL: OFF % CT	Range: 1 to 150% of CT in steps of 1 or OFF
MESSAGE		Va OVERVOLTAGE TRIG LEVEL: OFF % NOMINAL	Range: 20 to 150% of Nominal in steps of 1 or OFF
MESSAGE		Vb OVERVOLTAGE TRIG LEVEL: OFF % NOMINAL	Range: 20 to 150% of Nominal in steps of 1 or OFF
MESSAGE		Vc OVERVOLTAGE TRIG LEVEL: OFF % NOMINAL	Range: 20 to 150% of Nominal in steps of 1 or OFF
MESSAGE		Va UNDERVOLTAGE TRIG LEVEL: OFF % NOMINAL	Range: 20 to 150% of Nominal in steps of 1 or OFF
MESSAGE		Vb UNDERVOLTAGE TRIG LEVEL: OFF % NOMINAL	Range: 20 to 150% of Nominal in steps of 1 or OFF
MESSAGE		Vc UNDERVOLTAGE TRIG LEVEL: OFF % NOMINAL	Range: 20 to 150% of Nominal in steps of 1 or OFF
MESSAGE		SWITCH INPUT A TRIG: OFF	Range: Off, Open-to-Closed, Closed-to-Open
MESSAGE		SWITCH INPUT B TRIG: OFF	Range: Off, Open-to-Closed, Closed-to-Open
MESSAGE		SWITCH INPUT C TRIG: OFF	Range: Off, Open-to-Closed, Closed-to-Open
MESSAGE		SWITCH INPUT D TRIG: OFF	Range: Off, Open-to-Closed, Closed-to-Open
MESSAGE		TRACE MEMORY TRIGGER DELAY: 0 cycles	Range: 0 to 30 cycles in steps of 2
MESSAGE		TRACE MEMORY TRIGGER RELAY: OFF	Range: Off, Aux1, Aux2, Aux3, Alarm

The Trace Memory feature involves a separate sampling data stream. All input channels are sampled continuously at a rate of 16 times per cycle. Using a single-cycle block interval, the input samples are checked for trigger conditions as per the trigger setpoints below. Note that the normal sampling burst (64 samples/cycle, 2 cycles) used for all metering calculations is done on top of the trace memory sampling. The harmonic analysis sampling (256 samples/cycles, 1 cycle) causes the trace memory sampling to stop for one cycle whenever a harmonic analysis is requested. Refer to 4.5.3 *Trace Memory* for details on trace memory implementation in the EnerVista PQMII Setup Software.

- **TRACE MEMORY USAGE:** The trace memory feature allows the user to capture maximum of 36 cycles. The **TRACE MEMORY USAGE** setpoint allows the buffer to be divided into maximum of 3 separate buffers as shown in table below.

Setpoint Value	Result
1 x 36 cycles	Upon a trigger, the entire buffer is filled with 36 cycles of data.
2 x 18 cycles	The buffer is split into 2 separate buffers and upon a trigger, the first buffer is filled with 18 cycles of data and upon a second trigger, the second buffer is filled with 18 cycles of data.
3 x 12 cycles	The buffer is split into 3 separate buffers and upon a trigger, the first buffer is filled with 12 cycles of data, upon a second trigger, the second buffer is filled with 12 cycles of data and upon a third trigger, the third buffer is filled with 12 cycles of data.

- **TRACE MEMORY TRIGGER MODE:** The trace memory can be configured to trigger in two different modes as described in the table below.

Setpoint Value	Result
One Shot	The trace memory will be triggered once per buffer as defined in the TRACE MEMORY USAGE setpoint above. In order for it to re-trigger, it must be re-armed through the serial port using the EnerVista PQMII Setup Software or other software. Once re-armed the trace memory will default back to the first buffer.
Retrigger	The trace memory will automatically re-trigger upon each condition and overwrite the previous buffer data.

- **Ia/Ib/Ic/In OVERCURRENT TRIG LEVEL:** Once the phase A/B/C/neutral current equals or increases above this setpoint value, the trace memory is triggered and data on all inputs are captured in the buffer. The number of cycles captured depends on the value specified in the [TRACE MEMORY USAGE](#) setpoint.
- **Va/Vb/Vc OVERVOLTAGE TRIG LEVEL:** Once the phase A/B/C voltage equals or increases above this setpoint value, the trace memory is triggered and data on all inputs are captured in the buffer. The number of cycles captured depends on the value specified in the [TRACE MEMORY USAGE](#) setpoint. Phase to neutral levels are used regardless of the VT wiring.
- **Va/Vb/Vc UNDERVOLTAGE TRIG LEVEL:** Once the phase A/B/C voltage is equal to or less than this setpoint value, the trace memory is triggered and data on all inputs are captured in the buffer. The number of cycles captured depends on the value specified in the [TRACE MEMORY USAGE](#) setpoint.
- **SWITCH INPUT A(D) TRIG:** If the setpoint is set to "Open-to-Closed", the trace memory is triggered and data on all inputs are captured in the buffer on a Switch A(D) close transition. If the setpoint is set to "Closed-to-Open", the trace memory is triggered and data on all inputs are captured in the buffer on a Switch A(D) open transition. The number of cycles captured depends on the value specified in the [TRACE MEMORY USAGE](#) setpoint.
- **TRACE MEMORY TRIGGER DELAY:** In some applications it may be necessary to delay the trigger point to observe the data before the fault occurred. The PQMII allows the trigger to be delayed by the amount of cycles set in this setpoint. Therefore, buffer will always contain the number cycles specified in this setpoint before the trigger point and the remaining space in the buffer is filled with the cycles after the trigger point.
- **TRACE MEMORY TRIGGER RELAY:** The relay selected here will be activated upon the occurrence of a Trace Memory Trigger. This relay will be cleared once the Trace Memory is re-armed.


See 7.4 *Triggered Trace Memory* for additional details on this feature.

Programmable Message

PATH: SETPOINTS ⇒ S1 PQMII SETUP ⇒ PROGRAMMABLE MESSAGE

<div style="border: 1px solid black; padding: 2px;"> <div style="display: flex; justify-content: space-between; align-items: center;"> ■ PROGRAMMABLE MESSAGE [▷] </div> </div>		<div style="border: 1px solid black; padding: 2px;"> PHONE: 905-294-6222 www.GEmultilin.com </div>	<i>Range: 40 alphanumeric characters</i>
---	--	---	--

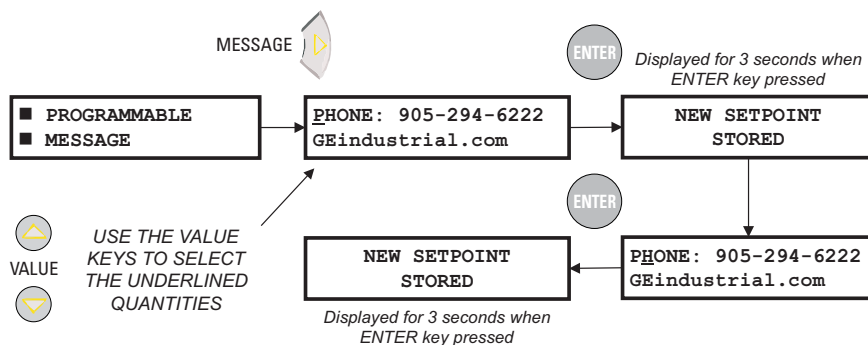A 40-character message can be programmed using the keypad, or via a serial port using the EnerVista PQMII Setup Software. An example of writing a new message over the existing one is shown below:



TIPS:

- The setpoint access must be enabled in order to alter the characters.
- To skip over a character press the ENTER key.
- If a character is entered incorrectly, press the ENTER key repeatedly until the cursor returns to the position of the error, and re-enter the character.
- See 3.4 *Default Messages* for details on selecting this message as a default message

A copy of this message is displayed in actual values page [A2 STATUS](#) ⇒ PROGRAMMABLE MESSAGE.

Product Options

PATH: SETPOINTS ⇒ S1 PQMII SETUP ⇒ ↓ PRODUCT OPTIONS

<div>■ PRODUCT OPTIONS</div> <div>[▷]</div>		<div>SELECT ORDER:</div> <div>PQMII-T20-C-A</div>	<div>Range: see range in PQMII Modbus memory format code F116</div>
MESSAGE		<div>SELECT MOD1 TO</div> <div>ENABLE: 0</div>	Range: 0 to 999 in steps of 1
MESSAGE		<div>SELECT MOD2 TO</div> <div>ENABLE: 0</div>	Range: 0 to 999 in steps of 1
MESSAGE		<div>SELECT MOD3 TO</div> <div>ENABLE: 0</div>	Range: 0 to 999 in steps of 1
MESSAGE		<div>SELECT MOD4 TO</div> <div>ENABLE: 0</div>	Range: 0 to 999 in steps of 1
MESSAGE		<div>SELECT MOD5 TO</div> <div>ENABLE: 0</div>	Range: 0 to 999 in steps of 1
MESSAGE		<div>ENTER PASSCODE: _</div>	Range: consult the factory

The PQMII can have options and certain modifications upgraded on-site via use of a passcode provided by GE Multilin. Consult the factory for details on the use of this feature.

S2 System Setup

Current and Voltage Configuration

The shaded setpoints below must be set to a value other than “Off” to clear the Critical Setpoints Not Stored alarm.

PATH: SETPOINTS ⇒ S2 SYSTEM SETUP ⇒ CURRENT/VOLTAGE CONFIG.

<div>■ CURRENT/ VOLTAGE CONFIG. [▷]</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div>		PHASE CT WIRING: Phases A, B, AND C	Range: A, B, and C, A and B only, A and C only, A only
		PHASE CT PRIMARY: OFF A	Range: 5 to 12000 A in steps of 5 or Off
		NEUTRAL CURRENT SENSING: OFF	Range: Off, Separate CT, Calculated
		NEUTRAL CT PRIMARY: 100 A	Range: 5 to 6000 A in steps of 5
		VT WIRING: OFF	Range: Off, 4 Wire Wye / 3 VTs, 4 Wire Wye / Direct, 4 Wire Wye / 2 VTs, 3-Wire Delta / 2 VTs, 3 Wire Direct, Single Phase Direct
		VT RATIO: 1.0 : 1	Range: 1.0 to 3500.0 in steps of 0.1
		VT NOMINAL SECONDARY VOLTAGE: 120 V	Range: 40 to 600 V in steps of 1
		NOMINAL DIRECT INPUT VOLTAGE: 600 V	Range: 40 to 600 V in steps of 1
	NOMINAL SYSTEM FREQUENCY: 60 Hz	Range: 50 Hz, 60 Hz	

- **PHASE CT WIRING:** The table below indicates the required connection per setpoint setting.

Setpoint Value	Required CT Connection
A,B, and C	CTs are connected to phase A, B and C inputs.
A and B Only	CTs are connected to phase A and B only. Phase C input is left open. The value for phase C is calculated by the PQMII.
A and C Only	CTs are connected to phase A and C only. Phase B input is left open. The value for phase B is calculated by the PQMII.
A Only	CT is connected to phase A only. Phase B and C inputs are left open. The values for phase B and C are calculated by the PQMII.

If the "A and B Only", "A and C Only", or "A Only" connection is selected, the neutral sensing must be accomplished with a separate CT.

- **PHASE CT PRIMARY:** Enter the primary current rating of the phase current transformers. All three phase CTs must have the same rating. For example, if 500:5 CTs are used, the **PHASE CT PRIMARY** value is entered as "500". The **PHASE CT PRIMARY** factory default is "Off". While set to "Off", the PQMII is forced to an alarm state as a safety precaution until a valid CT value is entered. Ensure that the CT is connected to the correct 1 or 5 A terminals to match the CT secondary.
- **NEUTRAL CURRENT SENSING:** Neutral current sensing can be accomplished by using a separate external CT connection or by calculations. Select "Separate CT" when using an external CT. If "Calculated" is selected, the PQMII calculates the neutral current using the vector sum of $I_a + I_b + I_c = I_n$. If a residual connection is required using the PQMII internal CT, the neutral CT primary must be the same as the phase CT primary to ensure correct readings.
- **NEUTRAL CT PRIMARY:** This message is visible only if the neutral current sensing setpoint is set to "Separate CT". Enter the CT primary current. For example, if a 50:5 CT

is installed for neutral sensing enter 50. One amp CTs can also be used for neutral sensing.

- **VT WIRING:** Enter the VT connection of the system in this setpoint. The three possible wiring configurations are Wye, Delta, and Single Phase. If the system to be measured is a Wye connection, the selections are "3 Wire Direct", "4 Wire Wye Direct", "4 Wire Wye / 3 VTs", and "4 Wire Wye / 2 VTs". The "3 Wire Direct" and "4 Wire Wye Direct" values are used for systems that are 600 V or less and directly connected to the PQMII. The **VT NOMINAL SECONDARY VOLTAGE** setpoint is replaced by **NOMINAL DIRECT INPUT VOLTAGE**. With external VTs (depending upon how many external VTs are used), the "4 Wire Wye / 3 VTs" or "4 Wire Wye / 2 VTs" value must be selected. Note that when using the "4 Wire Wye / 2 VTs" value, only two voltages are measured; the third voltage is calculated on the assumption that $V_{an} + V_{bn} + V_{cn} = 0$. This assumption is valid only for balanced system voltages.

If the system to be measured is a Delta connection, the selection is "3 Wire Delta / 2 VTs".

The PQMII accepts input voltages from 0 to 600 V AC between any two of the voltage terminals (V1, V2, V3, and Vn). These inputs can be directly connected or supplied via external VTs. External VTs are required for input voltages greater than 600 V AC (line-to-line). When measuring line-to-line quantities using inputs V1, V2 and V3, ensure that the voltage common input Vn is grounded. This input is used as a reference for measuring the voltage inputs.

All connections to the PQMII voltage inputs should be connected using HRC fuses rated at 2 amps to ensure adequate interrupting capacity.

- **VT RATIO:** Enter the voltage transformer ratio. All three voltage inputs must be of the same rating. For example, if 4200:120 VTs are used, the **VT RATIO** should be $4200 / 120 = 35.0:1$. This setpoint is not visible if **VT WIRING** is set to "3 Wire Direct", "4 Wire Direct", or "Single Phase Direct".
- **VT NOMINAL SECONDARY VOLTAGE:** Enter the nominal secondary of the VTs. If the voltage inputs are directly connected, enter the nominal system voltage that will be applied to the PQMII. This setpoint is not visible if the **VT WIRING** is set to "3 Wire Direct", "4 Wire Direct", or "Single Phase Direct". This value is used to scale an analog output that is assigned to display voltage as a percentage of nominal.
- **NOMINAL DIRECT INPUT VOLTAGE:** This setpoint is displayed only if **VT WIRING** is selected as a direct connection. The nominal direct input voltage must be entered in this message. This value will be used to scale an analog output that is assigned to display voltage as a percentage of nominal.
- **NOMINAL SYSTEM FREQUENCY:** Enter the nominal system frequency. The PQMII measures frequency from the Van voltage and adjusts its internal sampling to best fit the measured frequency. If the Van input is unavailable, the PQMII will assume the frequency entered here.

Analog Outputs

PATH: SETPOINTS ⇒ S2 SYSTEM SETUP ⇒ ANALOG OUTPUT 1(4)

■ ANALOG OUTPUT 1 [▷]		ANALOG OUTPUT RANGE: 4-20 mA	Range: 0-20 mA, 4-20 mA. Seen only in the Analog Output 1 menu.
MESSAGE		ANALOG OUTPUT 1 MAIN: Not Used	Range: refer to the Analog Output Parameters table below
MESSAGE		MAIN 4 mA VALUE: 0	Range: refer to the Analog Output Parameters table below
MESSAGE		MAIN 20 mA VALUE: 0	Range: refer to the Analog Output Parameters table below
MESSAGE		ANALOG OUTPUT 1 ALT: NOT USED	Range: refer to the Analog Output Parameters table below
MESSAGE		ALT 4 mA VALUE: 0	Range: refer to the Analog Output Parameters table below
MESSAGE		ALT 20 mA VALUE: 0	Range: refer to the Analog Output Parameters table below

The PQMII has four (4) Analog Outputs configured through four setpoints pages. The **ANALOG OUTPUT RANGE** setpoint appears in the Analog Output 1 setpoints page only and applies to all four outputs.

- **ANALOG OUTPUT RANGE:** If the T20 option is installed, the Analog Outputs can be configured to operate as 4 to 20 mA current sources or 0 to 20 mA current sources. All four Analog Outputs will operate in the range defined by this setpoint.
- **ANALOG OUTPUT 1(4) MAIN / ANALOG OUTPUT 1(4) ALT:** If the PQMII is used in conjunction with programmable controllers, automated equipment, or a chart recorder, the analog outputs can be used for continuous monitoring. Although parameters can be selected for continuous analog output, all values are available digitally through the communications interface. Applications include using a computer to automatically shed loads as the frequency decreases by monitoring frequency or a chart recorder to plot the loading of a system in a particular process.
Each of the analog outputs can be assigned to two of the parameters listed in the Analog Output Parameters table. The analog output main selection is the default selection and a programmable switch input can be programmed to multiplex the **ANALOG OUTPUT 1(4) ALT** selection to the same output depending upon the open or closed state of the switch input. See 5.3.4 *Switch Inputs* for details about configuring a switch input. If no switch input is assigned as an analog output multiplexer, the analog output main selection will be the only parameter which appears at the analog output terminals. The ability to multiplex two different analog output quantities on one analog output effectively gives the PQMII eight analog outputs. The table below shows the criteria used by the PQMII to decide whether the output is based on MAIN or ALT settings.
- **MAIN/ALT 4 mA VALUE:** This message appears for each analog output and allows the user to assign a numeric value which corresponds to the 4 mA end of the 4 to 20 mA signal range (T20 option) or the 0 mA end of the 0 to 1 mA signal range (T1 option). The numeric value range will depend upon which parameter is selected. See the *Analog Output Parameters* table below for details. Note that if the T20 option is installed and the **ANALOG OUTPUT RANGE** setpoint is set to "0-20 mA", this message represents the 0 mA end of the signal range.

Table 3: Analog Output Selection Criteria

Condition Present	'Main' Parameter	'Alt' Parameter	Output Based On
Any condition	"Not Used"	"Not Used"	Main
Control option 'C' not installed	any	not available	Main
Switch assigned to SELECT ANALOG OUTPUT and is disabled	any	"Not Used"	Main
Switch assigned to SELECT ANALOG OUTPUT and is enabled	any	"Not Used"	Main
Any condition	"Not Used"	anything other than "Not Used"	Alt
Switch assigned to SELECT ANALOG OUTPUT and is disabled	"Not Used"	anything other than "Not Used"	Alt
Switch assigned to SELECT ANALOG OUTPUT and is enabled	any	anything other than "Not Used"	Alt

- MAIN/ALT 20 mA VALUE:** This message appears for each analog output and allows the user to assign a numeric value which corresponds to the 20 mA end of the 4 to 20 mA signal range (T20 option) or the 1 mA end of the 0 to 1 mA signal range (T1 option). The numeric value range will depend upon which parameter is selected. See the *Analog Output Parameters* table below.

If the 4 mA (or 0 mA) value is programmed to be higher than the 20 mA (or 1 mA) value, the analog output will decrease towards 4 mA (or 0 mA) as the value increases and the analog output will increase towards 20 mA (or 1 mA) as the value decreases. If the 4 mA (or 0 mA) and 20 mA (or 1 mA) values are programmed to an identical value, the output will always be 4 mA (or 0 mA).

Table 4: Analog Output Parameters (Sheet 1 of 2)

Parameter	Range	Step
Phase A Current	0 to 150%	1%
Phase B Current	0 to 150%	1%
Phase C Current	0 to 150%	1%
Neutral Current	0 to 150%	1%
Average Phase Current	0 to 150%	1%
Current Unbalance	0 to 100.0%	0.1%
Voltage Van	0 to 200%	1%
Voltage Vbn	0 to 200%	1%
Voltage Vcn	0 to 200%	1%
Voltage Vab	0 to 200%	1%
Voltage Vbc	0 to 200%	1%
Voltage Vca	0 to 200%	1%
Average Phase Voltage	0 to 200%	1%
Average Line Voltage	0 to 200%	1%
Voltage Unbalance	0 to 100.0%	0.1%
Frequency	00.00 to 75.00 Hz	0.01 Hz
3 Phase PF	0.01 lead to 0.01 lag	0.01
3 Phase kW	-32500 to +32500	1 kW
3 Phase kvar	-32500 to +32500	1 kvar
3 Phase kVA	0 to 65400	1 kVA
3 Phase MW	-3250.0 to +3250.0	0.1 MW
3 Phase Mvar	-3250.0 to +3250.0	0.1 Mvar
3 Phase MVA	0 to 6540.0	0.1 MVA
Phase A PF	0.01 lead to 0.01 lag	0.01
Phase A kW	-32500 to +32500	1 kW
Phase A kvar	-32500 to +32500	1 kvar
Phase A kVA	0 to 65400	1 kVA
Phase B PF	0.01 lead to 0.01 lag	0.01
Phase B kW	-32500 to +32500	1 kW
Phase B kvar	-32500 to +32500	1 kvar

Table 4: Analog Output Parameters (Sheet 2 of 2)

Parameter	Range	Step
Phase B kVA	0 to 65400	1 kVA
Phase C PF	0.01 lead to 0.01 lag	0.01
Phase C kW	-32500 to +32500	1 kW
Phase C kvar	-32500 to +32500	1 kvar
Phase C kVA	0 to 65400	1 kVA
3 Phase +kWh Used	0 to 65400	1 kWh
3 Phase +kvarh Used	0 to 65400	1 kvarh
3 Phase -kWh Used	0 to 65400	1 kWh
3 Phase -kvarh Used	0 to 65400	1 kvarh
3 Phase kVAh Used	0 to 65400	1 kVAh
Phase A Current Demand	0 to 7500	1 A
Phase B Current Demand	0 to 7500	1 A
Phase C Current Demand	0 to 7500	1 A
Neutral Current Demand	0 to 7500	1 A
3 Phase kW Demand	-32500 to +32500	1 kW
3 Phase kvar Demand	-32500 to +32500	1 kvar
3 Phase kVA Demand	0 to 65400	1 kVA
3 Phase Current THD	0.0 to 100%	0.1%
3 Phase Voltage THD	0.0 to 100%	0.1%
Phase A Current THD	0.0 to 100%	0.1%
Phase B Current THD	0.0 to 100%	0.1%
Phase C Current THD	0.0 to 100%	0.1%
Voltage Van THD	0.0 to 100%	0.1%
Voltage Vbn THD	0.0 to 100%	0.1%
Voltage Vcn THD	0.0 to 100%	0.1%
Voltage Vab THD	0.0 to 100%	0.1%
Voltage Vbc THD	0.0 to 100%	0.1%
Neutral Current THD	0.0 to 100%	0.1%
Serial Control	-32500 to +32500	1 Unit

When the Analog Output parameter is set to “Serial Control”, the analog output(s) reflect a value in proportion to the serial value written to a specific register within the PQMII memory map. The locations are as described in the table below.

Analog Output	Modbus Register	Register
Analog Output 1	Analog Output 1 Serial Value	1067
Analog Output 2	Analog Output 2 Serial Value	106F
Analog Output 3	Analog Output 3 Serial Value	1077
Analog Output 4	Analog Output 4 Serial Value	107F

Analog Input





PATH: SETPOINTS ⇒ S2 SYSTEM SETUP ⇒ ANALOG INPUT

■ ANALOG INPUT [▷]			ANALOG IN MAIN/ALT SELECT RELAY: OFF	Range: Aux1, Aux2, Aux3, Off.
MESSAGE			ANALOG IN MAIN NAME: MAIN ANALOG INPUT	Range: 20 alphanumeric characters
MESSAGE			ANALOG IN MAIN UNITS: Units	Range: 10 alphanumeric characters
MESSAGE			MAIN 4 mA VALUE: 0	Range: 0 to 65000 in steps of 1
MESSAGE			MAIN 20 mA VALUE: 0	Range: 0 to 65000 in steps of 1
MESSAGE			ANALOG IN MAIN: RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			ANALOG IN MAIN LEVEL: 100 Units	Range: 0 to 65000 in steps of 1
MESSAGE			ANALOG IN MAIN DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 1
MESSAGE			ANALOG IN ALT NAME: ALT ANALOG INPUT	Range: 20 alphanumeric characters
MESSAGE			ANALOG IN ALT UNITS: Units	Range: 10 alphanumeric characters
MESSAGE			ALT 4 mA VALUE: 0	Range: 0 to 65000 in steps of 1
MESSAGE			ALT 20 mA VALUE: 0	Range: 0 to 65000 in steps of 1
MESSAGE			ANALOG IN ALT: RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			ANALOG IN ALT LEVEL: 100	Range: 0 to 65000 in steps of 1
MESSAGE			ANALOG IN ALT DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 1

- **ANALOG IN MAIN/ALT SELECT RELAY:** Select the output relay that is to be used to multiplex two analog input signals to the PQMII. If this setpoint is "Off", the **MAIN** analog input setpoints will be used unless a switch input assigned to **SELECT ANALOG INPUT** is activated. For more information on multiplexing two analog inputs using one of the PQMII output relays, refer to 2.2.8 *Switch Inputs (Optional)*.
- **ANALOG IN MAIN/ALT NAME:** This message allows the user to input a user defined 20 character alphanumeric name for the **MAIN** and **ALT** analog inputs. To enter the names, perform the following steps:
 - ▷ Allow access to setpoints by enabling setpoint access.
 - ▷ Select the Analog Input name message display under the **S2 SYSTEM SETUP** ⇒ **ANALOG INPUT** setpoints group.
 - ▷ Use the VALUE keys to change the blinking character over the cursor. A space is selected like a character.
 - ▷ Press the ENTER key to store the character and advance the cursor to the next position. To skip over a character press the ENTER key.
 - ▷ Continue entering characters and spaces until the desired message is displayed. If a character is entered incorrectly, press the ENTER key repeatedly until the cursor returns to the incorrect position and re-enter the character.
- **ANALOG IN MAIN/ALT UNITS:** This message allows the user to input a user defined 10 character alphanumeric name for the **MAIN** and **ALT** units. To enter the units, perform the same steps as shown for analog input name.
- **MAIN/ALT 4 mA VALUE:** This message appears for each analog input and allows the user to assign a numeric value which corresponds to the 4 mA end of the 4 to 20 mA signal range.
- **MAIN/ALT 20 mA VALUE:** This message appears for each analog input and allows the user to assign a numeric value which corresponds to the 20 mA end of the 4 to 20 mA signal range.
- **ANALOG IN MAIN/ALT RELAY:** Analog input **MAIN** and **ALT** detection can either be disabled, used as an alarm or as a process control. Set this setpoint to OFF if the feature is not required. Selecting "Alarm" causes the alarm relay to activate and displays an alarm message whenever a **MAIN** or **ALT** analog input condition exists. Selecting an auxiliary relay causes the selected auxiliary relay to activate with no message displayed. This is intended for process control.
- **ANALOG IN MAIN/ALT LEVEL:** When the measured **MAIN** or **ALT** analog input meets or exceeds the level set by this setpoint, a **MAIN** or **ALT** analog input condition will occur.
- **ANALOG IN MAIN/ALT DELAY:** If the **MAIN** or **ALT** analog input meets or exceeds the **ANALOG IN MAIN/ALT LEVEL** setpoint value and remains this way for the time delay programmed in this setpoint, an analog input condition will occur. If the **ANALOG IN MAIN/ALT RELAY** setpoint is set to "Alarm", the alarm relay will activate and the **ANALOG IN MAIN/ALT ALARM** message will be displayed. If the setpoint **ANALOG IN MAIN/ALT RELAY** is set to "Aux1", "Aux2", or "Aux3", the respective auxiliary relay will activate and no message will be displayed after the delay expires.

Switch Inputs

PATH: SETPOINTS ⇌ S2 SYSTEM SETUP ⇌ SWITCH INPUT A(D)

<div>■ SWITCH INPUT A [▷]</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div>		SWITCH A NAME: Switch Input A	Range: 20 alphanumeric characters
		SWITCH A FUNCTION: NOT USED	Range: see description below
		SWITCH A ACTIVATION: OPEN	Range: Open, Closed
		SWITCH A TIME DELAY: 0.0 s	Range: 0.0 to 600.0 s in steps of 1

There are four (4) Switch Inputs, denoted as Switch Input A, B, C, and D.

- SWITCH A(D) NAME:** This message allows the user to input a user defined 20-character alphanumeric name for each switch input. To enter a switch name, perform the following steps:
 - ▷ Allow access to setpoints by enabling setpoint access.
 - ▷ Select the switch input message display under the subgroup **S2 SYSTEM SETUP** ⇌ **SWITCH INPUT A**.
 - ▷ Use the VALUE keys to change the blinking character over the cursor. A space is selected like a character.
 - ▷ Press the ENTER key to store the character and advance the cursor to the next position. To skip over a character press the ENTER key.
 - ▷ Continue entering characters and spaces until the desired message is displayed. If a character is entered incorrectly, press the ENTER key repeatedly to return the cursor to the position of the error, and re-enter the character.
- SWITCH A(D) FUNCTION:** Select the required function for each switch input. See *Switch Inputs (Optional)* on page 2-12 for a description of each function. The "New Demand Period", "Setpoint Access", "Select Analog Out", "Select Analog In", "Pulse Input 1", "Pulse Input 2", "Pulse Input 3", "Pulse Input 4", "Clear Energy" and "Clear Demand" functions can be assigned to only one switch input at a time. If an attempt is made to assign one of these functions to more than one input, the **THIS SWITCH FUNCTION ALREADY ASSIGNED** flash message will be displayed. If an attempt is made via the serial port, no flash message will appear but an error code will be returned.

 The range of functions for the **SWITCH A(D) FUNCTION** setpoint is: Not Used, Alarm, Aux1, Aux2, Aux3, New Demand Period, Setpoint Access, Select Analog Out, Select Analog In, Pulse Input 1, Pulse Input 2, Pulse Input 3, Pulse Input 4, Clear Energy, Clear Demand.
- SWITCH A(D) ACTIVATION:** This setpoint determines the operating sequence of the switch. Select "Open" if a switch activation is required for a switch input transition of closed to open. Select "Closed" if a switch activation is required for a switch input transition of open to closed.
- SWITCH A(D) TIME DELAY:** If the switch input function is assigned to "Alarm", "Aux1", "Aux2", or "Aux3", this message will be displayed. Enter the required time delay in this message.

Pulse Output

PATH: SETPOINTS ⇒ S2 SYSTEM SETUP ⇒ PULSE OUTPUT

■ PULSE OUTPUT [▷]		POS kWh PULSE OUTPUT RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		POS kWh PULSE OUTPUT INTERVAL: 100 kWh	Range: 1 to 65000 kWh in steps of 1
MESSAGE		NEG kWh PULSE OUTPUT RELAY: Off	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		NEG kWh PULSE OUTPUT INTERVAL: 100 kWh	Range: 1 to 65000 kWh in steps of 1
MESSAGE		POS kvarh PULSE OUTPUT RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		POS kvarh PULSE OUTPUT INTERVAL: 100 kvarh	Range: 1 to 65000 kvarh in steps of 1
MESSAGE		NEG kvarh PULSE OUTPUT RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		NEG kvarh PULSE OUTPUT INTERVAL: 100 kvarh	Range: 1 to 65000 kvarh in steps of 1
MESSAGE		kVAh PULSE OUTPUT RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		kVAh PULSE OUTPUT INTERVAL: 100 kVAh	Range: 1 to 65000 kVAh in steps of 1
MESSAGE		PULSE WIDTH: 100 ms	Range: 100 to 2000 ms in steps of 10

- **kWh / kvarh / kVAh PULSE OUTPUT RELAY:** Five pulse output parameters can be assigned to the alarm or auxiliary relays. They are positive kWh, negative kWh, positive kvarh, negative kvarh, and kVAh. Enter the desired relay to which each parameter is assigned. Select "Off" if a particular output parameter is not required.
- **kWh / kvarh / kVAh PULSE OUTPUT INTERVAL:** Enter the interval for the appropriate quantity at which the relay pulse will occur. The pulse width is set by the **PULSE WIDTH** setpoint described below. If the pulse interval is set to "100 kWh", one pulse will indicate that 100kWh has been accumulated.
- **PULSE WIDTH:** This setpoint determines the duration of each pulse as shown in the figure below.

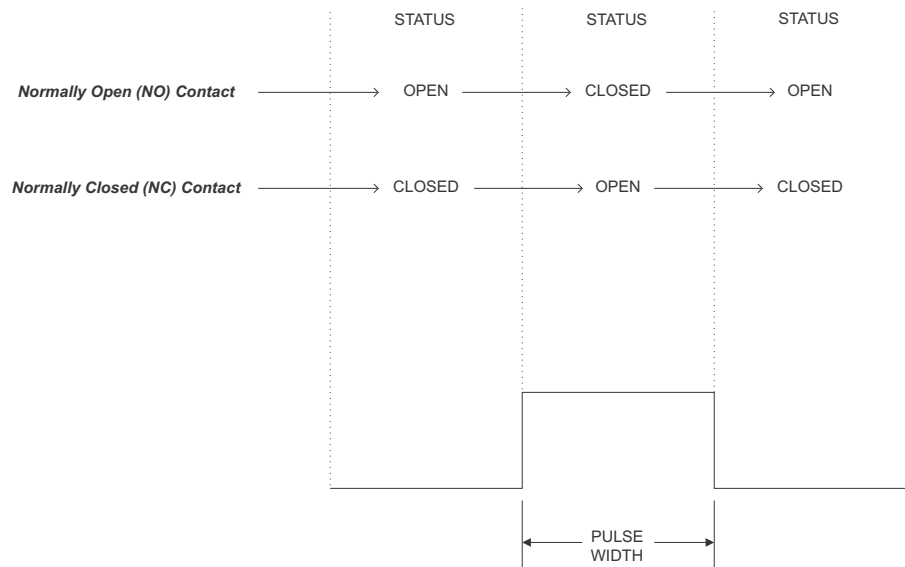


FIGURE 5-2: Pulse Output Timing

Pulse Input

PATH: SETPOINTS ⇌ S2 SYSTEM SETUP ⇌ PULSE INPUT

<div> <div>■ PULSE INPUT</div> <div>[▷]</div> </div>	<div>◀▶</div>	<div>PULSE INPUT</div> <div>UNITS: Units</div>	<div>Range: 10 alphanumeric characters</div>
MESSAGE	◀▶	<div>PULSE INPUT 1 VALUE:</div> <div>1 Units</div>	<div>Range: 0 to 65000 in steps of 1</div>
MESSAGE	◀▶	<div>PULSE INPUT 2 VALUE:</div> <div>1 Units</div>	<div>Range: 0 to 65000 in steps of 1</div>
MESSAGE	◀▶	<div>PULSE INPUT 3 VALUE:</div> <div>1 Units</div>	<div>Range: 0 to 65000 in steps of 1</div>
MESSAGE	◀▶	<div>PULSE INPUT 4 VALUE:</div> <div>1 Units</div>	<div>Range: 0 to 65000 in steps of 1</div>
MESSAGE	◀▶	<div>PULSE INPUT TOTAL:</div> <div>1+2+3+4</div>	<div>Range: 1+2, 1+3, 1+4, 2+3, 2+4, 3+4, 1+2+3, 1+3+4, 1+2+4, 2+3+4, 1+2+3+4</div>

- PULSE INPUT UNITS:** This message allows the user to input a user defined 10 character alphanumeric unit for the pulse inputs (i.e. kWh). The unit will be used by all pulse inputs including the totalized value. To enter the unit, perform the following steps:
 - ▷ Allow access to setpoints by enabling setpoint access.
 - ▷ Select the **PULSE INPUT UNITS** setpoint.
 - ▷ Use the VALUE keys to change the blinking character over the cursor. A space is selected like a character.
 - ▷ Press the ENTER key to store the character and advance the cursor to the next position. To skip over a character press the ENTER key.

▷ Continue entering characters and spaces until the desired message is displayed. If a character is entered incorrectly, press the ENTER key repeatedly until the cursor returns to the incorrect position and re-enter the character.

- **PULSE INPUT 1(4) VALUE:** Enter a value in this setpoint that will be equivalent to 1 pulse input on the switch input assigned to Pulse Input 1(4); i.e., 1 pulse = 100 kWh. The accumulated value is displayed in actual values under **A1 METERING** ⇒ **PULSE INPUT COUNTERS** ⇒ **PULSE INPUT 1(4)**.
- **PULSE INPUT TOTAL:** This setpoint defines which pulse inputs to add together. For example, if the selection is this setpoint is "1+2+3", the **PULSE INPUT 1**, **PULSE INPUT 2** and **PULSE INPUT 3** values shown in **A1 METERING** ⇒ **PULSE INPUT COUNTERS** ⇒ **PULSE INPUT 1(4)** will be added together and displayed in **A1 METERING** ⇒ **PULSE INPUT COUNTERS** ⇒ **PULSE IN 1+2+3**.

Data Logger

PATH: SETPOINTS ⇒ S2 SYSTEM SETUP ⇒ DATA LOGGER

DATA LOGGER [▷]		STOP DATA LOG 1: NO (STOPPED)	Range: No, Yes
		STOP DATA LOG 2: NO (STOPPED)	Range: No, Yes

MESSAGE

The data logger operation is only configurable using the EnerVista PQMII Setup Software. On occasions it may be necessary to stop the data loggers using the PQMII keypad and then a computer to extract the logged information. The **STOP DATA LOG 1(2)** setpoints allow the user to stop the respective data log. These setpoints also display the current status of the respective data logger. Refer to 7.6 *Data Logger Implementation* for a detailed implementation description.

Voltage Disturbance

PATH: SETPOINTS ⇒ S2 SYSTEM SETUP ⇒ VOLTAGE DIST. RECORDER

VOLTAGE DIST. RECORDER [▷]		SAG LEVEL ≤ 80% Nominal	Range: 20 to 90% of Nominal VT in steps of 1
		SWELL LEVEL ≥ 130% Nominal	Range: 110 to 150% of Nominal VT in steps of 1

MESSAGE

- **SAG LEVEL:** When the voltage on any phase drops below this level a Sag condition occurs. During this condition, the average voltage and duration of the disturbance are calculated. The condition ends when the level increases to at least 10% of nominal plus pickup of the **SAG LEVEL** setting. This hysteresis is implemented to avoid nuisance alarms due to voltage fluctuations. If the duration logged was less than or equal to 1 minute an event with a sag type will be logged. If the duration was greater than 1 minute an event with an undervoltage type will be logged when this feature is configured.
- **SWELL LEVEL:** When the voltage on any phase increases above this level a swell condition occurs. During a swell condition the average voltage and duration of the disturbance are calculated. To end a Swell condition the level must decrease to pickup minus 10% of nominal of the **SWELL LEVEL** setting. This hysteresis is implemented to avoid nuisance alarms due to voltage fluctuations. If the duration logged was less than or equal to 1 minute an event with a swell type will be logged. If the duration was

greater than 1 minute an event with an overvoltage type will be logged when this feature is configured.

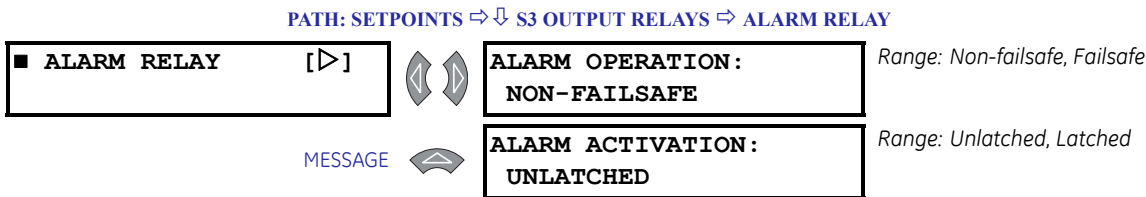
S3 Output Relays

Description

Output relay operation in the PQMII occurs in either ‘failsafe’ or ‘non-failsafe’ modes, as defined below:


- **Non-failsafe:** The relay coil is not energized in its non-active state. Loss of control power will cause the relay to remain in the non-active state. That is, a non-failsafe alarm relay will not cause an alarm on loss of control power. Contact configuration in the Wiring Diagrams is shown with relays programmed non-failsafe and control power not applied.
- **Failsafe:** The relay coil is energized in its non-active state. Loss of control power will cause the relay to go into its active state. That is, a failsafe alarm relay will cause an alarm on loss of control power. Contact configuration is opposite to that shown in the Wiring Diagrams for relays programmed as failsafe when control power is applied.

Alarm Relay



- **ALARM OPERATION:** The terms ‘failsafe’ and ‘non-failsafe’ are defined above as implemented in the PQMII. If an alarm is required when the PQMII is not operational due to a loss of control power, select failsafe operation. Otherwise, choose non-failsafe.
- **ALARM ACTIVATION:** If an alarm indication is required only while an alarm is present, select unlatched. Once the alarm condition disappears, the alarm and associated message automatically clear. To ensure all alarms are acknowledged, select latched. Even if an alarm condition is no longer present, the alarm relay and message can only be cleared by pressing the key or by sending the reset command via the computer.

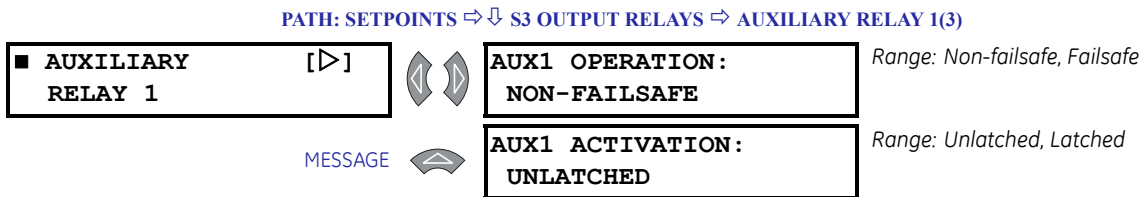Auxiliary Relays



The PQMII contains three (3) auxiliary relays, denoted as Aux1 through Aux3. The terms ‘failsafe’ and ‘non-failsafe’ are defined in the previous section.

- **AUXILIARY 1(3) OPERATION:** If an output is required when the PQMII is not operational due to a loss of control power, select failsafe auxiliary operation, otherwise, choose non-failsafe.
- **AUXILIARY 1(3) ACTIVATION:** If an auxiliary relay output is only required while the selected conditions are present, select “Unlatched”. Once the selected condition disappears, the auxiliary relay returns to the non-active state. To ensure all conditions are acknowledged, select “Latched”. If the condition is no longer present, the auxiliary relay can be reset by pressing the key or by sending the reset command via the computer.

The PQMII uses a priority system to determine which function will control the relays if they happen to be assigned to more than one function.




















The Pulse Output function has the highest activation priority, followed by the Analog Input Main/Alt Select functions. The alarm functions have the lowest priority. For example, if a relay is assigned to an alarm function and also assigned to one of the pulse output parameters, it only responds to the pulse output function.

S4 Alarms/Control

Current/Voltage Alarms

PATH: SETPOINTS ⇄ S4 ALARMS/CONTROL ⇄ CURRENT/VOLTAGE

<div>■ CURRENT/ VOLTAGE</div> <div>[▷]</div>			DETECT I/V ALARMS USING PERCENTAGE: NO	Range: No, Yes
	MESSAGE		PHASE UNDERCURRENT RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
	MESSAGE		PHASE UNDERCURRENT LEVEL ≤ 100 A	Range: 1 to 12000 A in steps of 1, or 1 to 100% of CT in steps of 1, set by the DETECT I/V ALARMS USING PERCENTAGE value.
	MESSAGE		PHASE UNDERCURRENT DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
	MESSAGE		DETECT UNDERCURRENT WHEN 0A: NO	Range: No, Yes
	MESSAGE		PHASE OVERCURRENT RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
	MESSAGE		PHASE OVERCURRENT LEVEL ≥ 100 A	Range: 1 to 12000 A in steps of 1, or 1 to 150% of CT in steps of 1, set by the DETECT I/V ALARMS USING PERCENTAGE value.
	MESSAGE		PHASE OVERCURRENT DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
	MESSAGE		PHASE OVERCURRENT ACTIVATION: AVERAGE	Range: Average, Maximum
	MESSAGE		NEUTRAL OVERCURRENT RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off

MESSAGE		NEUTRAL OVERCURRENT LEVEL \geq 100 A	Range: 1 to 12000 A in steps of 1, or 1 to 150% of CT in steps of 1, set by the DETECT I/V ALARMS USING PERCENTAGE value.
MESSAGE		NEUTRAL OVERCURRENT DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		UNDERVOLTAGE RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		UNDERVOLTAGE LEVEL \leq 100 V	Range: 20 to 65000 V in steps of 1, or 20 to 100% of VT in steps of 1, set by the DETECT I/V ALARMS USING PERCENTAGE value.
MESSAGE		UNDERVOLTAGE DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		PHASES REQ'D FOR U/V OPERATION: ANY ONE	Range: Any One, Any Two, All Three. Not seen when VT WIRING is set to "Single Phase Direct"
MESSAGE		DETECT UNDERVOLTAGE BELOW 20V: NO	Range: No, Yes
MESSAGE		OVERVOLTAGE RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		OVERVOLTAGE LEVEL \geq 100 V	Range: 20 to 65000 V in steps of 1, or 20 to 150% of VT in steps of 1, set by the DETECT I/V ALARMS USING PERCENTAGE value.
MESSAGE		OVERVOLTAGE DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		PHASES REQ'D FOR O/V OPERATION: ANY ONE	Range: Any One, Any Two, All Three. Not seen when VT WIRING is set to "Single Phase Direct"
MESSAGE		CURRENT UNBALANCE RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		CURRENT UNBALANCE LEVEL \geq 100%	Range: 1 to 100% in steps of 1
MESSAGE		CURRENT UNBALANCE DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		VOLTAGE UNBALANCE RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		VOLTAGE UNBALANCE LEVEL \geq 100%	Range: 1 to 100% in steps of 1
MESSAGE		VOLTAGE UNBALANCE DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		VOLTS PHASE REVERSAL RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		VOLTS PHASE REVERSAL DELAY: 1.0 s	Range: 0.5 to 600.0 s in steps of 0.5

- **DETECT I/V ALARMS USING PERCENTAGE:** When “Yes” is selected, all current and voltage alarms can be set in percentages of CT and VT. When “No” is selected, all current and voltage alarms are actual voltage and current levels.
- **PHASE UNDERCURRENT RELAY:** Undercurrent can be disabled, used as an alarm, or as a process control feature. Set this setpoint to “Off” if the feature is not required. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever an undercurrent condition exists. Selecting an auxiliary relay activates the selected auxiliary relay for an undercurrent condition but no message will be displayed. This is intended for process control.
- **PHASE UNDERCURRENT LEVEL:** When the average three phase current drops to or below the level set by this setpoint, a phase undercurrent condition will occur. Refer to the [DETECT UNDERCURRENT WHEN 0A](#) setpoint description below to enable/disable undercurrent detection below 5% of CT.
- **PHASE UNDERCURRENT DELAY:** If the average phase current is less than or equal to the [PHASE UNDERCURRENT LEVEL](#) setpoint value for the time delay programmed in this setpoint, a phase undercurrent condition will occur.
- **DETECT UNDERCURRENT WHEN 0A:** If this setpoint is set to “Yes”, undercurrent will be detected if the average phase current drops below 5% of CT. If the setting is “No”, the undercurrent detection is only enabled if the average phase current is equal to or above 5% of CT.
- **PHASE OVERCURRENT RELAY:** Overcurrent can either be disabled, used as an alarm or as a process control. Set this setpoint to “Off” if the feature is not required. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever an overcurrent condition exists. Selecting an auxiliary relay activates the auxiliary relay for an overcurrent condition but no message will be displayed. This is intended for process control.
- **PHASE OVERCURRENT LEVEL:** When the average (or maximum, see below) three phase current equals or exceeds the level set by this setpoint, a phase overcurrent condition will occur.
- **PHASE OVERCURRENT DELAY:** If the average (or maximum, see below) phase current equals or exceeds the [PHASE OVERCURRENT LEVEL](#) setpoint value and remains this way for the time delay programmed in this setpoint, a phase overcurrent condition will occur.
- **PHASE OVERCURRENT ACTIVATION:** The Phase Overcurrent function can use either the average phase current or the maximum of the three phase currents. This setpoint determines which is used.
- **NEUTRAL OVERCURRENT RELAY:** Neutral overcurrent can be disabled, used as an alarm, or used as a process control. Set this setpoint to “Off” if the feature is not required. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever a neutral overcurrent condition exists. Selecting an auxiliary relay activates the auxiliary relay for a neutral overcurrent condition but no message will be displayed. This is intended for process control.
- **NEUTRAL OVERCURRENT LEVEL:** When the neutral current equals or exceeds the level set by this setpoint, a neutral overcurrent condition will occur.
- **NEUTRAL OVERCURRENT DELAY:** If the neutral current greater than or equal to the [NEUTRAL OVERCURRENT LEVEL](#) setpoint value for the time delay programmed in this setpoint, a neutral overcurrent condition will occur.
- **UNDERVOLTAGE RELAY:** Undervoltage can either be disabled, used as an alarm, or as a process control. Set this setpoint to “Off” if the feature is not required. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever an undervoltage condition exists. Selecting an auxiliary relay activates the auxiliary relay for an undervoltage condition but no message will be displayed. This is intended for process control.

- **UNDERVOLTAGE LEVEL:** When the voltage on one, two, or three phases drops to or below this level, an undervoltage condition occurs. The required number of phases is determined by the **PHASES REQUIRED FOR U/V OPERATION** setpoint. To clear the undervoltage condition, the level must increase to 103% of the **UNDERVOLTAGE LEVEL** setting. For example, if the **UNDERVOLTAGE LEVEL** is “4000 V”, the condition clears when the voltage in the appropriate phase(s) increases above 4120 V (4000×1.03). This hysteresis is implemented to avoid nuisance alarms due to voltage fluctuations.
- **UNDERVOLTAGE DELAY:** If the voltage drops to or below the **UNDERVOLTAGE LEVEL** setpoint value and remains this way for the time delay programmed in this setpoint, an undervoltage condition will occur.
- **PHASES REQ'D FOR U/V OPERATION:** Select the minimum number of phases on which the undervoltage condition must be detected before the selected output relay will operate. This setpoint is not visible if **VT WIRING** is set to “Single Phase Direct”.
- **DETECT UNDERVOLTAGE BELOW 20V:** If an indication is required for loss of voltage, select “Yes”. If “No” is selected and any one of the voltage inputs has less than 20 V applied, the undervoltage feature will be disabled.
- **OVERVOLTAGE RELAY:** Overvoltage can either be disabled, used as an alarm, or as a process control. Set this setpoint to “Off” if the feature is not required. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever an overvoltage condition exists. Selecting an auxiliary relay activates the auxiliary relay for an overvoltage condition but no message will be displayed. This is intended for process control.
- **OVERVOLTAGE LEVEL:** When the voltage on one, two, or three phases equals or exceeds the level determined with this setpoint, an overvoltage condition occurs. The required number of phases is determined by the **PHASES REQUIRED FOR O/V OPERATION** setpoint. To clear the overvoltage condition, the level must decrease to 97% of the **OVERVOLTAGE LEVEL** setting. For example, if the **OVERVOLTAGE LEVEL** is set to “4200 V”, the condition clears when the voltage in the appropriate phase(s) goes below 4074 V (4200×0.97). This hysteresis is implemented to avoid nuisance alarms due to voltage fluctuations.
- **OVERVOLTAGE DELAY:** If the voltage equals or exceeds the **OVERVOLTAGE LEVEL** setpoint value for the time delay programmed in this setpoint, an overvoltage condition will occur.
- **PHASES REQ'D FOR O/V OPERATION:** Select the minimum number of phases on which the overvoltage condition must be detected before the selected output relay operates. This setpoint is not visible if **VT WIRING** is set to “Single Phase Direct”.
- **CURRENT UNBALANCE RELAY:** Current unbalance is calculated as the maximum deviation from the average divided by the average three phase current. Current unbalance can either be disabled, used as an alarm, or as a process control. Set this setpoint to “Off” if the feature is not required. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever a current unbalance condition exists. Selecting an auxiliary relay activates the auxiliary relay for a current unbalance condition but no message will be displayed. This is intended for process control.
- **CURRENT UNBALANCE LEVEL:** When the current unbalance equals or exceeds this level, a current unbalance condition will occur. See 6.2.1 *Current Metering* for details on the method of calculation.
- **CURRENT UNBALANCE DELAY:** If the current unbalance equals or exceeds the **CURRENT UNBALANCE LEVEL** value for the time delay programmed in this setpoint, a current unbalance condition occurs.
- **VOLTAGE UNBALANCE RELAY:** Voltage unbalance is calculated as the maximum deviation from the average divided by the average three phase voltage. Voltage unbalance can either be disabled, used as an alarm, or as a process control. Set this setpoint to “Off” if the feature is not required. Selecting “Alarm” activates the alarm

relay and displays an alarm message whenever a voltage unbalance condition exists. Selecting an auxiliary relay activates the auxiliary relay for a voltage unbalance condition but no message will be displayed. This is intended for process control.

- **VOLTAGE UNBALANCE LEVEL:** When the voltage unbalance equals or exceeds this level, a voltage unbalance condition occurs. See 6.2.2 *Voltage Metering* for details on the method of calculation.
- **VOLTAGE UNBALANCE DELAY:** If the voltage unbalance equals or exceeds the **VOLTAGE UNBALANCE LEVEL** setpoint value and remains this way for the time delay programmed in this setpoint, a voltage unbalance condition will occur.
- **VOLTAGE PHASE REVERSAL:** Under normal operating conditions, the PQMII expects to see the voltages connected with a 1-2-3 or A-B-C sequence. If the voltages are connected with the wrong sequence (e.g. 2-1-3 or B-A-C), a voltage phase reversal condition will occur. A minimum of 20 V must be applied to the PQMII on all voltage inputs before the phase reversal feature will operate.

A phase reversal condition is determined by looking at the phase angle at the occurrence of the peak sample of phase B voltage and subtracting it from the phase angle at the peak sample of phase A voltage (phase A angle – phase B angle). This angle is averaged over several cycles before deciding on the condition to avoid any false triggering of the feature. Only two phases are required to detect phase reversal because all phase reversal conditions can be covered without the use of the third phase. The angle to detect phase reversal will vary depending on the connection being used as described below.

For “4-Wire Wye / 3 VTs”, “4 Wire Wye / 2 VTs”, “4 Wire Direct”, and “3 Wire Direct” connections, the phase reversal function operates when the angle between phase A and B becomes $\leq -150^\circ$ or $\geq -90^\circ$ as shown below.

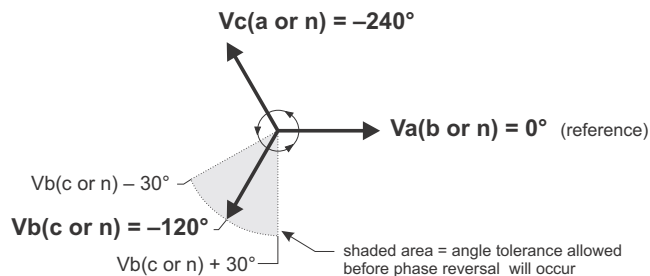


FIGURE 5-3: Phase Reversal for 4-wire and 3-wire Direct Connections

For the “3 Wire Delta / 2 VTs” connection, the phase reversal function operates when the angle between phase A and B is $\leq 30^\circ$ or $\geq 90^\circ$ as shown below.

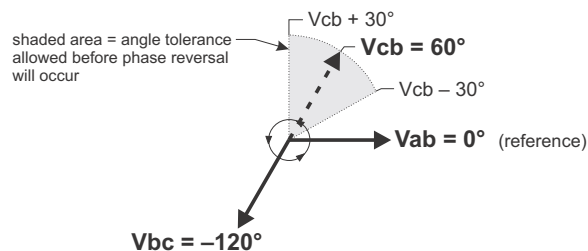


FIGURE 5-4: Phase Reversal for 3-wire Delta (2 VTs Open-Delta) Wiring

When the “Single Phase Direct” connection is used the phase reversal feature will never operate.

- **VOLTAGE PHASE REVERSAL DELAY:** If a voltage phase reversal exists for the time programmed in this setpoint a voltage phase reversal condition will occur.

Please note that the terms undervoltage and overvoltage used for alarm, are generic regardless of sag/swell or undervoltage/overvoltage conditions based on duration of the voltage disturbance

Harmonic Distortion

PATH: SETPOINTS ⇨ S4 ALARMS/CONTROL ⇨ TOTAL HARMONIC DISTORTION

<div>■ TOTAL HARMONIC DISTORTION [▷]</div>		AVERAGE CURRENT THD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		AVERAGE CURRENT THD LEVEL ≥ 10.0 %	Range: 0.5 to 100.0% in steps of 0.5
MESSAGE		AVERAGE CURRENT THD DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		AVERAGE VOLTAGE THD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		AVERAGE VOLTAGE THD LEVEL ≥ 10.0 %	Range: 0.5 to 100.0% in steps of 0.5
MESSAGE		AVERAGE VOLTAGE THD DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5

- **AVERAGE CURRENT THD RELAY:** Excessive phase current THD detection can either be disabled, used as an alarm, or as a process control. Set this setpoint to “Off” if the feature is not required. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever an excessive average current THD condition exists. Selecting an auxiliary relay activates the auxiliary relay, but no message will be displayed. This is intended for process control.
- **AVERAGE CURRENT THD LEVEL:** When the measured average current THD exceeds this setpoint value, an average current THD condition occurs.
- **AVERAGE CURRENT THD DELAY:** If the average current THD exceeds the **AVERAGE CURRENT THD LEVEL** for the time delay programmed in this setpoint, an average current THD condition occurs.
- **AVERAGE VOLTAGE THD RELAY:** Average voltage THD detection can either be disabled, used as an alarm or as a process control. Set this setpoint to off if the feature is not required. Selecting alarm relay will cause the alarm relay to activate and display an alarm message whenever an average voltage THD condition exists. Selecting auxiliary relay will cause the auxiliary relay to activate, but no message will be displayed. This is intended for process control.
- **AVERAGE VOLTAGE THD LEVEL:** When the measured average voltage THD equals or exceeds this setpoint value, an Average Voltage THD condition occurs.
- **AVERAGE VOLTAGE THD DELAY:** If the average voltage THD equals or exceeds the **AVERAGE VOLTAGE THD LEVEL** value and remains this way for the time delay programmed in this setpoint, an Average Voltage THD condition will occur.

Frequency

PATH: SETPOINTS ⇌ S4 ALARMS/CONTROL ⇌ FREQUENCY

■ FREQUENCY [▷]		UNDERFREQUENCY RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		UNDERFREQUENCY LEVEL ≤ 40.00 Hz	Range: 20.00 to 70.00 Hz in steps of 0.01
MESSAGE		UNDERFREQUENCY DELAY: 1.0 s	Range: 0.1 to 10.0 s in steps of 0.1
MESSAGE		UNDERFREQUENCY WHEN FREQUENCY=0 Hz: NO	Range: Yes, No
MESSAGE		OVERFREQUENCY RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		OVERFREQUENCY LEVEL ≥ 70.00 Hz	Range: 20.00 to 125.00 Hz in steps of 0.01
MESSAGE		OVERFREQUENCY DELAY: 1.0 s	Range: 0.1 to 10.0 s in steps of 0.1

- **UNDERFREQUENCY RELAY:** Underfrequency detection can either be disabled or used as an alarm, or process control. Set this setpoint to “Off” if the feature is not required. Selecting alarm relay will cause the alarm relay to activate and display an alarm message whenever an underfrequency condition exists. Selecting an auxiliary relay activates the auxiliary relay for an underfrequency condition, but no message will be displayed. This is intended for process control.
- **UNDERFREQUENCY LEVEL:** When the measured frequency drops to or below the level set by this setpoint, an underfrequency condition will occur.
- **UNDERFREQUENCY DELAY:** If the underfrequency drops to or below the **UNDERFREQUENCY LEVEL** value for the time delay programmed in this setpoint, an underfrequency condition will occur.
- **UNDERFREQUENCY WHEN FREQ=0 Hz:** A voltage greater than 20 V is required on phase AN (AB) voltage input before frequency can be measured. If no voltage is applied or if the voltage applied is less than 20 V, the displayed frequency will be 0 Hz. If “No” is selected in this setpoint, an underfrequency condition will not occur when the displayed frequency is 0 Hz.
- **OVERFREQUENCY RELAY:** Overfrequency detection can either be disabled, used as an alarm or as a process control. Set this setpoint to off if the feature is not required. Selecting alarm relay will cause the alarm relay to activate and display an alarm message whenever an overfrequency condition exists. Selecting auxiliary relay will cause the auxiliary relay to activate for an overfrequency condition, but no message will be displayed. This is intended for process control.
- **OVERFREQUENCY LEVEL:** When the measured frequency equals or exceeds the level set by this setpoint, an overfrequency condition will occur.
- **OVERFREQUENCY DELAY:** If the overfrequency equals or exceeds the **OVERFREQUENCY LEVEL** setpoint value for the time delay programmed in this setpoint, an overfrequency condition will occur.

Power Alarms

PATH: SETPOINTS ⇌ S4 ALARMS/CONTROL ⇌ POWER

















■ POWER [▷]		POWER ALARMS LEVEL BASE UNIT(s) : kW/kvar	Range: kW/kvar, MW, Mvar
MESSAGE		POSITIVE REAL POWER RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		POSITIVE REAL POWER LEVEL ≥ 1000 kW	Range: 1 to 65000 kW in steps of 1, or 0.01 to 650.00 MW in steps of 0.01
MESSAGE		POSITIVE REAL POWER DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		NEGATIVE REAL POWER RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		NEGATIVE REAL POWER LEVEL ≥ 1000 kW	Range: 1 to 65000 kW in steps of 1, or 0.01 to 650.00 MW in steps of 0.01
MESSAGE		NEGATIVE REAL POWER DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		POSITIVE REACT POWER RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		POSITIVE REACT POWER LEVEL ≥ 1000 kvar	Range: 1 to 65000 kvar in steps of 1, or 0.01 to 650.00 Mvar in steps of 0.01
MESSAGE		POSITIVE REACT POWER DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		NEGATIVE REACT POWER RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		NEGATIVE REACT POWER LEVEL ≥ 1000 kvar	Range: 1 to 65000 kvar in steps of 1, or 0.01 to 650.00 Mvar in steps of 0.01
MESSAGE		NEGATIVE REACT POWER DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5

- **POWER ALARMS LEVEL BASE UNIT(S):** This setpoint is used to select the base unit multiplier for all power alarms. When set to kW/kvar, all power alarm levels can be set in terms of kW and kvar with a step value of 1 kW/kvar. When set to MW/Mvar, all power alarm levels can be set in terms of MW and Mvar with a step value of 0.01 MW/Mvar.
- **POSITIVE/NEGATIVE REAL POWER RELAY:** The positive and negative real power level detection can be disabled, used as an alarm, or used as a process control. The “Off” setting disables this feature. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever a positive/negative real power level exceeds the selected level. Selecting an auxiliary relay activates the auxiliary relay for a set level of positive/negative real power but no message will be displayed. This is intended for process control.
- **POSITIVE/NEGATIVE REAL POWER LEVEL:** When the three phase real power equals or exceeds the level defined by this setpoint, an excess positive/negative real power condition will occur.

- **POSITIVE/NEGATIVE REAL POWER DELAY:** If the positive/negative real power equals or exceeds the **POSITIVE/NEGATIVE REAL POWER LEVEL** setpoint value for the time delay programmed in this setpoint, an excessive positive/negative real power condition will occur.
- **POSITIVE/NEGATIVE REACTIVE POWER RELAY:** Positive and negative reactive power level detection can either be disabled, used as an alarm, or as a process control. Set this setpoint to "Off" if the feature is not required. Selecting "Alarm" activates the alarm relay and displays an alarm message whenever a positive/negative reactive power level exceeds the selected level. Selecting an auxiliary relay activates the auxiliary relay for a set level of positive/negative reactive power but no message will be displayed. This is intended for process control.
- **POSITIVE/NEGATIVE REACTIVE POWER LEVEL:** When the three phase reactive power equals or exceeds the level set by this setpoint, an excess positive/negative reactive power condition will occur.
- **POSITIVE/NEGATIVE REACTIVE POWER DELAY:** If the positive reactive power equals or exceeds the **POSITIVE/NEGATIVE REACTIVE POWER LEVEL** setpoint value for the time delay programmed in this setpoint, an excessive positive reactive power condition will occur.

Power Factor

PATH: SETPOINTS ⇌ S4 ALARMS/CONTROL ⇌ POWER FACTOR

■ POWER FACTOR [▷]			POWER FACTOR LEAD 1 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			POWER FACTOR LEAD 1 PICKUP ≤ 0.99	Range: 0.50 to 1.00 in steps of 0.01
MESSAGE			POWER FACTOR LEAD 1 DROPOUT ≥ 1.00	Range: 0.50 to 1.00 in steps of 0.01
MESSAGE			POWER FACTOR LEAD 1 DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE			POWER FACTOR LAG 1 RELAY: Off	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			POWER FACTOR LAG 1 PICKUP ≤ 0.99	Range: 0.50 to 1.00 in steps of 0.01
MESSAGE			POWER FACTOR LAG 1 DROPOUT ≥ 1.00	Range: 0.50 to 1.00 in steps of 0.01
MESSAGE			POWER FACTOR LAG 1 DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE			POWER FACTOR LEAD 2 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			POWER FACTOR LEAD 2 PICKUP ≤ 0.99	Range: 0.50 to 1.00 in steps of 0.01
MESSAGE			POWER FACTOR LEAD 2 DROPOUT ≥ 1.00	Range: 0.50 to 1.00 in steps of 0.01
MESSAGE			POWER FACTOR LEAD 2 DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE			POWER FACTOR LAG 2 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			POWER FACTOR LAG 2 PICKUP ≤ 0.99	Range: 0.50 to 1.00 in steps of 0.01
MESSAGE			POWER FACTOR LAG 2 DROPOUT ≥ 1.00	Range: 0.50 to 1.00 in steps of 0.01
MESSAGE			POWER FACTOR LAG 2 DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5

It is generally desirable for a system operator to maintain the power factor as close to unity as possible (that is, to make the real power of the system as close as possible to the apparent power) to minimize both costs and voltage excursions. On dedicated circuits such as some large motors, with a near-fixed load, a capacitor bank may be switched on or off with the motor to supply leading vars to compensate for the lagging vars required by the motor. Since the power factor is variable on common non-dedicated circuits, it is

advantageous to compensate for low (lagging) power factor values by connecting a capacitor bank to the circuit when required. The PQMII provides power factor monitoring and allows two stages of capacitance switching for power factor compensation.

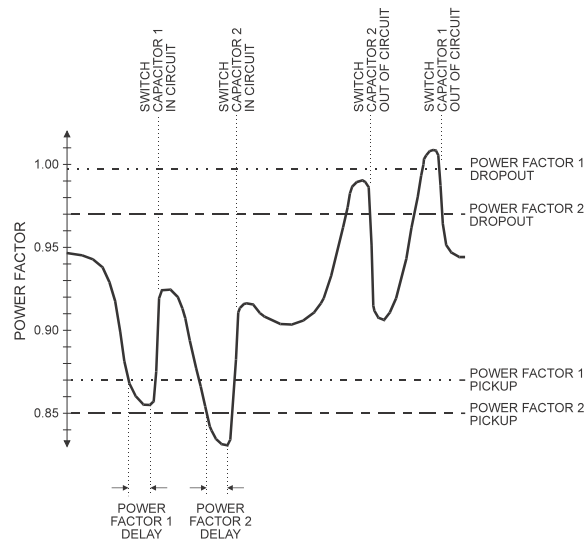


FIGURE 5-5: Capacitor Bank Switching

The PQMII calculates the average power factor in the three phases, according to the following equation:

$$\text{Average Power Factor} = \frac{\text{Total 3-phase Real Power}}{\text{Total 3-phase Apparent Power}} \quad (\text{EQ 5.2})$$

Two independent 'elements' are available for monitoring power factor, Power Factor 1 and Power Factor 2, each having a pickup and a dropout level. For each element, when the measured power factor is equal to or becomes more lagging than the pickup level (i.e. numerically less than), the PQMII will operate a user-selected output relay. This output can be used to control a switching device which connects capacitance to the circuit, or to signal an alarm to the system operator. After entering this state, when the power factor becomes less lagging than the power factor dropout level, the PQMII will reset the output relay to the non-operated state.

Both Power Factor 1 and 2 features are inhibited from operating unless all three voltages are above 20% of nominal and one or more currents is above 0. Power factor 1 and 2 delay timers will be allowed to time only when the 20% threshold is exceeded on all phases (and, of course, only while the power factor remains outside of the programmed pickup and dropout levels). In the same way, when a power factor condition starts the power factor 1 or 2 delay timer, if all three phase voltages fall below the 20% threshold before the timer has timed-out, the element will reset without operating. A loss of voltage during any state will return both Power Factor 1 and 2 to the reset state.

- POWER FACTOR LEAD 1(2) RELAY:** Power factor detection can either be disabled, used as an alarm or as a process control. Set this setpoint to "Off" if the feature is not required. Selecting "Alarm" activates the alarm relay and displays an alarm message when the power factor is more leading than the level set. Selecting "Aux1", "Aux2", or "Aux3" activates the respective auxiliary relay when the power factor is equal to or more leading than the level set, but no message will be displayed. This is intended for

process control. A minimum of 20 V applied must exist on all voltage inputs before this feature will operate.

- **POWER FACTOR LEAD 1(2) PICKUP:** When a leading power factor equals or exceeds the level set by this setpoint, a Power Factor Lead 1(2) condition will occur.
- **POWER FACTOR LEAD 1(2) DROPOUT:** When a leading power factor drops below this level, the Power Factor Lead 1(2) condition will drop out.
- **POWER FACTOR LEAD 1(2) DELAY:** If the power factor equals or exceeds the **POWER FACTOR LEAD 1(2) PICKUP** setpoint value and remains this way for the time delay programmed in this setpoint, a Power Factor Lead 1(2) condition will occur.

If the power factor drops below the **POWER FACTOR LEAD 1(2) DROPOUT** setpoint value, the power factor lead 1(2) condition will drop out. If the **POWER FACTOR LEAD 1(2) RELAY** setpoint is set to "Alarm", the alarm relay will deactivate and the **POWER FACTOR LEAD 1(2) ALARM** message will be cleared. If the **POWER FACTOR LEAD 1(2) RELAY** setpoint is set to "Aux1", "Aux2", or "Aux3," the respective auxiliary relay deactivates.

- **POWER FACTOR LAG 1(2) RELAY:** Power factor detection can either be disabled, used as an alarm or as a process control. Set this setpoint to "Off" if the feature is not required. Selecting "Alarm" activates the alarm relay and displays an alarm message when the power factor is more lagging than the level set. Selecting "Aux1", "Aux2", or "Aux3" activates the respective auxiliary relay when the power factor is equal to or more lagging than the level set, but no message will be displayed. This is intended for process control. A minimum of 20 V applied must exist on all voltage inputs before this feature will operate.
- **POWER FACTOR LAG 1(2) PICKUP:** When a lagging power factor equals or exceeds the level set by this setpoint, a Power Factor Lag 1(2) condition will occur.
- **POWER FACTOR LAG 1(2) DROPOUT:** When a lagging power factor drops below this level, the Power Factor Lag 1(2) condition will drop out.
- **POWER FACTOR LAG 1(2) DELAY:** If the power factor equals or exceeds the **POWER FACTOR LAG 1(2) PICKUP** setpoint value and remains this way for the time delay programmed in this setpoint, a Power Factor Lag 1(2) condition will occur.

If the power factor drops below the **POWER FACTOR LAG 1(2) DROPOUT** setpoint value, the Power Factor 1(2) lag condition will drop out. If the **POWER FACTOR LAG 1(2) RELAY** setpoint is set to "Alarm", the alarm relay will deactivate and the **POWER FACTOR LAG 1(2) ALARM** message will be cleared. If the **POWER FACTOR LAG 1(2) RELAY** setpoint is set to "Aux1", "Aux2", or "Aux3", the respective auxiliary relay will deactivate.

Demand Alarms

PATH: SETPOINTS ⇌ S4 ALARMS/CONTROL ⇌ DEMAND

■ DEMAND	[▷]		PHASE A CURRENT DMD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
			PHASE A CURRENT DMD LEVEL ≥ 100 A	Range: 10 to 7500 A in steps of 1
MESSAGE			PHASE B CURRENT DMD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			PHASE B CURRENT DMD LEVEL ≥ 100 A	Range: 10 to 7500 A in steps of 1
MESSAGE			PHASE C CURRENT DMD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			PHASE C CURRENT DMD LEVEL ≥ 100 A	Range: 10 to 7500 A in steps of 1
MESSAGE			NEUTRAL CURRENT DMD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			NEUTRAL CURRENT DMD LEVEL ≥ 100 A	Range: 10 to 7500 A in steps of 1
MESSAGE			3Φ POS REAL PWR DMD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			3Φ POS REAL PWR DMD LEVEL ≥ 1000 kW	Range: 1 to 65000 kW in steps of 1
MESSAGE			3Φ POS REACT PWR DMD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			3Φ POS REACT PWR DMD LEVEL ≥ 1000 kvar	Range: 1 to 65000 kvar in steps of 1
MESSAGE			3Φ NEG REAL PWR DMD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			3Φ NEG REAL PWR DMD LEVEL ≥ 1000 kW	Range: 1 to 65000 kW in steps of 1
MESSAGE			3Φ NEG REACT PWR DMD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			3Φ NEG REACT PWR DMD LEVEL ≥ 1000 kvar	Range: 1 to 65000 kvar in steps of 1
MESSAGE			3Φ APPARENT PWR DMD RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			3Φ APPARENT PWR DMD LEVEL ≥ 1000 kVA	Range: 1 to 65000 kVA in steps of 1
















- **PHASE A/B/C/NEUTRAL CURRENT DMD RELAY:** Phase/neutral current demand detection can either be disabled or used as an alarm or process control. Set this setpoint to “Off” if the feature is not required. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever a phase/neutral current demand level

is equalled or exceeded. Selecting "Aux1", "Aux2", or "Aux3" activates the respective auxiliary relay with no message displayed. This is intended for process control.

- **PHASE A/B/C/NEUTRAL CURRENT DMD LEVEL:** When the phase A/B/C/ or neutral current demand equals or exceeds this setpoint, a phase A/B/C or neutral demand alarm or process control indication occurs.
- **3Φ POS/NEG REAL PWR DMD RELAY:** Three-phase positive/negative real power demand detection can either be disabled or used as an alarm or process control. Set this setpoint to "Off" if the feature is not required. Selecting "Alarm" activates the alarm relay and displays an alarm message whenever the positive/negative three-phase real power demand level is equalled or exceeded. Selecting "Aux1", "Aux2", or "Aux3" activates the respective auxiliary relay with no message displayed. This is intended for process control.
- **3Φ POS/NEG REAL PWR DMD LEVEL:** When the three-phase real power demand exceeds this setpoint, a three-phase positive/negative real power demand alarm or process control indication will occur.
- **3Φ POS/NEG REACT PWR DMD RELAY:** Three-phase positive/negative reactive power demand detection can either be disabled or used as an alarm or process control. Set to "Off" if this feature is not required. Selecting "Alarm" activates the alarm relay and displays an alarm message whenever the positive/negative three-phase reactive power demand level is equalled or exceeded. Selecting "Aux1", "Aux2", or "Aux3" activates the respective auxiliary relay with no message displayed. This is intended for process control.
- **3Φ POS/NEG REACT PWR DMD LEVEL:** When the three-phase reactive power demand equals or exceeds this setpoint, a three-phase positive/negative reactive power demand alarm or process control indication will occur.
- **3Φ APPARENT POWER DEMAND RELAY:** Three-phase apparent power demand detection can be disabled or used as an alarm or process control. Set to "Off" if this feature is not required. Selecting "Alarm" activates the alarm relay and displays an alarm message if the three-phase apparent power demand level is equalled or exceeded. Selecting "Aux1", "Aux2", or "Aux3" activates the respective auxiliary relay with no message displayed. This is intended for process control.
- **3Φ APPARENT POWER DEMAND LEVEL:** When the three-phase apparent power demand equals or exceeds this setpoint, a three-phase apparent power alarm or process control indication will occur.

Pulse Input

PATH: SETPOINTS ↓ S4 ALARMS/CONTROL ⇨ PULSE INPUT

■ PULSE INPUT [▷]			PULSE INPUT 1 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			PULSE INPUT 1 LEVEL ≥ 100 Units	Range: 1 to 65000 in steps of 1
MESSAGE			PULSE INPUT 1 DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE			PULSE INPUT 2 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			PULSE INPUT 2 LEVEL ≥ 100 Units	Range: 1 to 65000 in steps of 1
MESSAGE			PULSE INPUT 2 DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE			PULSE INPUT 3 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			PULSE INPUT 3 LEVEL ≥ 100 Units	Range: 1 to 65000 in steps of 1
MESSAGE			PULSE INPUT 3 DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE			PULSE INPUT 4 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			PULSE INPUT 4 LEVEL ≥ 100 Units	Range: 1 to 65000 in steps of 1
MESSAGE			PULSE INPUT 4 DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE			TOTALIZED PULSES RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE			TOTAL PULSES LEVEL ≥ 100 Units	Range: 1 to 65000 in steps of 1
MESSAGE			TOTALIZED PULSES DELAY: 10.0 s	Range: 0.5 to 600.0 s in steps of 0.5

- **PULSE INPUT 1(4) RELAY:** Any of the PQMII switch inputs can be assigned to count pulse inputs as shown in 5.3.4 *Switch Inputs*. This setpoint can be used to give an indication (alarm or control) if the programmed level is equaled or exceeded. Set this setpoint to "Off" if the feature is not required. Selecting "Alarm" activates the alarm relay and displays an alarm message whenever a pulse count level equals or exceeds the selected level. Selecting "Aux1", "Aux2", or "Aux3" activates the appropriate auxiliary relay but no message is displayed. The "Aux1", "Aux2", and "Aux3" selections are intended for process control.
- **PULSE INPUT 1(4) LEVEL:** When the pulse input value accumulated in the **A1 METERING** ⇨ **PULSE COUNTER** ⇨ **PULSE INPUT 1(4)** actual value equals or exceeds this setpoint value, the relay assigned in the **PULSE INPUT 1(4) RELAY** will energize. If the "Alarm" relay is assigned, a **PULSE INPUT 1(4) ALARM** message will also be displayed. The units in

this setpoint are determined by the **S2 SYSTEM SETUP** ⇒ **PULSE INPUT** ⇒ **PULSE INPUT UNITS** setpoint.

- **PULSE INPUT 1(4) DELAY:** This setpoint can be used to allow a time delay before the assigned relay will energize after the **PULSE INPUT 1(4) LEVEL** has been equaled or exceeded.
- **TOTALIZED PULSES RELAY:** A relay can be selected to operate based upon a Total Pulse Input Count as configured in the PQMII. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever a pulse count level equals or exceeds the selected level. Selecting “Aux1”, “Aux2”, or “Aux3” activates the appropriate auxiliary relay but no message will be displayed. The “Aux1”, “Aux2”, and “Aux3” selections are intended for process control.
- **TOTAL PULSES LEVEL:** When the pulse input value accumulated in the **A1 METERING** ⇒ **PULSE COUNTER** ⇒ **PULSE INPUT 1+2+3+4** actual value exceeds this setpoint value, the relay assigned in the **TOTALIZED PULSES RELAY** will energize. If the “Alarm” relay is assigned, a **TOTALIZED PULSES ALARM** message will also be displayed. The units in this setpoint are determined by the **S2 SYSTEM SETUP** ⇒ **PULSE INPUT** ⇒ **PULSE INPUT UNITS** setpoint.
- **TOTALIZED PULSES DELAY:** This setpoint can be used to allow a time delay before the assigned relay will energize after the **TOTAL PULSES LEVEL** has been equaled or exceeded.

Time


PATH: SETPOINTS ⇒ S4 ALARMS/CONTROL ⇒ TIME

<div>■ TIME [▷]</div>		<div>TIME</div> <div>RELAY: OFF</div>	Range: Alarm, Aux1, Aux2, Aux3, Off
	MESSAGE	<div>PICKUP TIME ≥</div> <div>12:00:00 am</div>	Range: hh:mm:ss am/pm
	MESSAGE	<div>DROPOUT TIME ≥</div> <div>12:00:00 pm</div>	Range: hh:mm:ss am/pm

The time function is useful where a general purpose time alarm is required or a process is required to start and stop each day at the specified time.

- **TIME RELAY:** This setpoint can be used to give an indication (alarm or control) if the programmed **PICKUP TIME** is equaled or exceeded. Set to “Off” if the feature is not required. Selecting “Alarm” activates the alarm relay and displays an alarm message whenever the PQMII clock time equals or exceeds the set **PICKUP TIME**. Selecting “Aux1”, “Aux2”, or “Aux3” activates the appropriate auxiliary relay but no message is displayed. The “Aux1”, “Aux2”, and “Aux3” selections are intended for process control. The selected relay will de-energize when the PQMII clock time equals or exceeds the **DROPOUT TIME** setting.

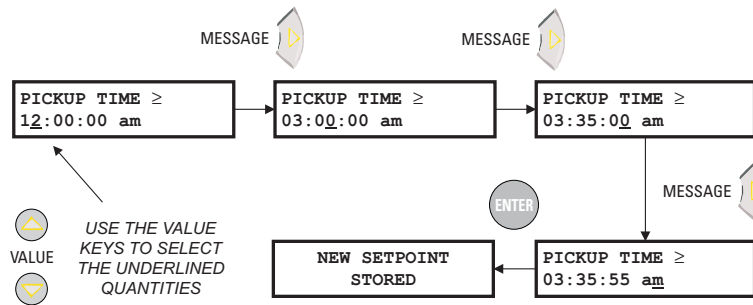- **PICKUP TIME:** The relay assigned in the **TIME RELAY** setpoint energizes when the PQMII clock time equals or exceeds the time specified in this setpoint. Follow the example below to set the **PICKUP TIME**.



- **DROPOUT TIME:** The relay assigned in the **TIME RELAY** setpoint de-energizes when the PQMII clock time equals or exceeds the time specified in this setpoint. Follow the example above to set the **DROPOUT TIME**.

Miscellaneous Alarms

PATH: SETPOINTS ⇄ S4 ALARMS/CONTROL ⇄ MISCELLANEOUS

<div>■ MISCELLANEOUS [▷]</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div>		SERIAL COM1 FAILURE ALARM DELAY: OFF s	Range: 5 to 60 s in steps of 1 or OFF
		SERIAL COM2 FAILURE ALARM DELAY: OFF s	Range: 5 to 60 s in steps of 1 or OFF
		CLOCK NOT SET ALARM: ON	Range: Off, On
		DATA LOG 1 MEMORY FULL LEVEL: OFF %	Range: 50 to 100% in steps of 1 or OFF
		DATA LOG 2 MEMORY FULL LEVEL: OFF %	Range: 50 to 100% in steps of 1 or OFF

- **SERIAL COM1(2) FAILURE ALARM DELAY:** If loss of communications to the external master is required to activate the alarm relay, select a time delay in the range of 5 to 60 seconds. In this case, an absence of communication polling on the RS485 communication port for the selected time delay will generate the alarm condition. Disable this alarm if communications is not used or is not considered critical. This alarm is not available on the front RS232 port.
- **CLOCK NOT SET ALARM:** The software clock in the PQMII will remain running for a period of approximately thirty days after power has been removed from the PQMII power supply inputs. Selecting "On" for this setpoint causes a Clock Not Set Alarm to occur at power-up for power losses greater than thirty days. Once the alarm occurs, the **S1 PQMII SETUP** ⇄ **CLOCK** ⇄ **SET TIME & DATE** setting must be stored to reset the alarm.
- **DATA LOG 1(2) MEMORY FULL LEVEL:** These messages can be used to configure alarms to indicate that the Data Logger memory is almost full. Separate alarms are provided for each log. When the log memory reaches the level programmed in this message a Data Log 1(2) Alarm will occur.

S5 Testing

Test Relays and LEDs

PATH: SETPOINTS ⇒ S5 TESTING ⇒ TEST RELAYS & LEDs

<div>■ TEST RELAYS & LEDS</div> <div>[▷]</div>	<div>OPERATION TEST:</div> <div>NORMAL MODE</div>
--	---

To verify correct operation of output relay wiring, each output relay and status indicator can be manually forced on or off via the keypad or serial port.

While the **OPERATION TEST** setpoint is displayed, use the **VALUE** keys to scroll to the desired output relay and/or status indicator to be tested. As long as the test message remains displayed the respective output relay and/or status indicator will be forced to remain energized. As soon as a new message is selected, the respective output relay and/or status indicator return to normal operation.

Current/Voltage

PATH: SETPOINTS ⇒ S5 TESTING ⇒ CURRENT/VOLTAGE SIMULATION

<div>■ CURRENT/ VOLTAGE SIMULATION</div> <div>[▷]</div>	<div>SIMULATION:</div> <div>OFF</div>	Range: Off, On
MESSAGE	<div>SIMULATION ENABLED</div> <div>FOR: 15 min</div>	Range: 5 to 300 min. in steps of 5 or UNLIMITED
MESSAGE	<div>PHASE A CURRENT:</div> <div>0 A</div>	Range: 0 to 10000 A in steps of 1
MESSAGE	<div>PHASE B CURRENT:</div> <div>0 A</div>	Range: 0 to 10000 A in steps of 1
MESSAGE	<div>PHASE C CURRENT:</div> <div>0 A</div>	Range: 0 to 10000 A in steps of 1
MESSAGE	<div>NEUTRAL CURRENT:</div> <div>0 A</div>	Range: 0 to 10000 A in steps of 1
MESSAGE	<div>V_{ax} VOLTAGE:</div> <div>0 V</div>	Range: 0 to 65000 V in steps of 1
MESSAGE	<div>V_{bx} VOLTAGE:</div> <div>0 V</div>	Range: 0 to 65000 V in steps of 1
MESSAGE	<div>V_{cx} VOLTAGE:</div> <div>0 V</div>	Range: 0 to 65000 V in steps of 1
MESSAGE	<div>PHASE ANGLE:</div> <div>0 DEGREES</div>	Range: 0 to 359 degrees in steps of 1







Simulated currents and voltages can be forced instead of using actual currents or voltages. This allows for verification of current and voltage related functions.

- **SIMULATION:** Enter "On" to switch from actual currents and voltages to the programmed simulated values. Return to "Off" after simulation is complete.

- **SIMULATION ENABLED FOR:** Select the desired length of time to enable simulation. When the programmed time has elapsed, current and voltage simulation will turn off. If “Unlimited” is selected, simulated currents and voltages will be used until simulation is turned off via the **SIMULATION** setpoint or via the serial port or until control power is removed from the PQMII.
- **PHASE A/B/C/NEUTRAL CURRENT:** Enter the desired phase and neutral currents for simulation.
- **Vax/Vbx/Vcx VOLTAGE:** Enter the desired voltages for simulation. The voltages entered will be line or phase quantities depending upon the VT wiring type selected with the **S2 SYSTEM SETUP** ⇒ **CURRENT/VOLTAGE CONFIGURATION** ⇒ **VT WIRING** setpoint.
- **PHASE ANGLE:** This setpoint represents the phase shift from a unity power factor. Enter the desired phase angle between the current and voltage. The angle between the individual currents and voltages is fixed at 120°.

Analog Outputs

PATH: SETPOINTS ⇒ S5 TESTING ⇒ ANALOG OUTPUTS SIMULATION

<div>■ ANALOG OUTPUTS SIMULATION [▷]</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div>		SIMULATION: OFF	Range: Off, On
		SIMULATION ENABLED FOR: 15 min	Range: 5 to 300 min. in steps of 5 or UNLIMITED
		ANALOG OUTPUT 1: OFF %	Range: 0.0 to 120.0% in steps of 0.1
		ANALOG OUTPUT 2: OFF %	Range: 0.0 to 120.0% in steps of 0.1
		ANALOG OUTPUT 3: OFF %	Range: 0.0 to 120.0% in steps of 0.1
	ANALOG OUTPUT 4: OFF %	Range: 0.0 to 120.0% in steps of 0.1	

- **SIMULATION:** Enter “On” to switch from actual analog outputs to the programmed simulated values. Set this setpoint “Off” after simulation is complete.
- **SIMULATION ENABLED FOR:** Select the desired length of time that simulation will be enabled. When the programmed time has elapsed, analog output simulation will turn off. If unlimited is selected, simulated analog outputs will be used until simulation is turned off via the **SIMULATION** setpoint or via the serial port or until control power is removed from the PQMII.
- **ANALOG OUTPUT 1(4):** Enter the percentage of analog output to be simulated. The output is 0 to 1 or 4 to 20 mA, depending upon the installed option.

For example, alter the setpoints below:

S5 TESTING ⇒ ANALOG OUTPUTS SIMULATION ⇒ ANALOG OUTPUT 1: “50.0%”

S5 TESTING ⇒ ANALOG OUTPUTS SIMULATION ⇒ SIMULATION: “On”

The output current level on Analog Output 1 will be 12 mA (4 to 20mA) or 0.5 mA (0 to 1mA).

Simulated values for Analog outputs may only be entered while **SIMULATION** mode is set to “On”.

Analog Input

PATH: SETPOINTS ↓ S5 TESTING ↓ ANALOG INPUTS SIMULATION

■ ANALOG INPUT SIMULATION [▷]		SIMULATION: OFF	Range: Off, On
	MESSAGE	SIMULATION ENABLED FOR: 15 min	Range: 5 to 300 min. in steps of 5 or UNLIMITED
	MESSAGE	ANALOG INPUT: OFF mA	Range: 4.0 to 20.0 mA in steps of 0.1

- **SIMULATION:** Enter "On" to switch from an actual analog input to the programmed simulated value. Set this setpoint "Off" after simulation is complete.
- **SIMULATION ENABLED FOR:** Select the desired length of time to run simulation. When the programmed time has elapsed, analog input simulation will end. If "Unlimited" is selected, the simulated analog input will be used until simulation is turned off via the **SIMULATION** setpoint or via the serial port or until control power is removed from the PQMII.
- **ANALOG INPUT:** Enter an analog input current in the range of 4 to 20 mA to be simulated.

Switch Inputs

PATH: SETPOINTS ⇒ ↓ S5 TESTING ⇒ ↓ SWITCH INPUTS SIMULATION

■ SWITCH INPUTS SIMULATION [▷]		SIMULATION: Off	Range: Off, On
	MESSAGE	SIMULATION ENABLED FOR: 15 min.	Range: 5 to 300 min. in steps of 5 or UNLIMITED
	MESSAGE	SWITCH INPUT A: Open	Range: Open, Closed
	MESSAGE	SWITCH INPUT B: Open	Range: Open, Closed
	MESSAGE	SWITCH INPUT C: Open	Range: Open, Closed
	MESSAGE	SWITCH INPUT D: Open	Range: Open, Closed

- **SIMULATION:** Enter "On" to switch from actual switch inputs to the programmed simulated switches. Set this setpoint "Off" after simulation is complete.
- **SIMULATION ENABLED FOR:** Select the desired length of time that simulation will be enabled. When the programmed time has elapsed, switch input simulation will turn off. If "Unlimited" is selected, the simulated switch inputs will be used until simulation is turned off via the **SIMULATION** setpoint or via the serial port or until control power is removed from the PQMII.
- **SWITCH INPUT A(D):** Enter the switch input status (open or closed) to be simulated.

Factory Use Only

PATH: SETPOINTS ⇨ ⚡ S5 TESTING ⇨ ⚡ FACTORY USE ONLY

■ FACTORY USE ONLY	[▶]	◀ ▶	SERVICE PASSCODE : 0	Range: N/A
-------------------------------	-----	-----	--------------------------------	------------

These messages are for access by GE Multilin personnel only for testing and service.



PQMII Power Quality Meter

Chapter 6: Monitoring

Actual Values Viewing

Description

Any measured value can be displayed on demand using the MENU and MESSAGE keys. Press the MENU key to select the actual values, then the MESSAGE RIGHT key to select the beginning of a new page of monitored values. These are grouped as follows: A1 Metering, A2 Status, A3 Power Analysis, and A4 Product Info. Use the MESSAGE keys to move between actual value messages. A detailed description of each displayed message in these groups is given in the sections that follow.

Actual Values Menu

<div>■ ACTUAL VALUES [▷] A1 METERING</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div>	<div>◀▶</div> <div>◀▶</div> <div>◀▶</div> <div>◀▶</div> <div>◀▶</div> <div>◀▶</div> <div>◀▶</div> <div>◀▶</div>	<div>■ CURRENT [▷]</div>	See page 6-4.
		<div>■ VOLTAGE [▷]</div>	See page 6-6.
		<div>■ PHASORS [▷]</div>	See page 6-8.
		<div>■ POWER [▷]</div>	See page 6-8.
		<div>■ ENERGY [▷]</div>	See page 6-12.
		<div>■ DEMAND [▷]</div>	See page 6-14.
		<div>■ FREQUENCY [▷]</div>	See page 6-15.
		<div>■ PULSE INPUT COUNTERS [▷]</div>	See page 6-16.
<div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div>	<div>◀▶</div> <div>◀▶</div> <div>◀▶</div> <div>◀▶</div>	<div>■ ANALOG INPUT [▷]</div>	See page 6-17.
		<div>■ END OF PAGE A1 [▷]</div>	
<div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div>	<div>◀▶</div> <div>◀▶</div> <div>◀▶</div> <div>◀▶</div> <div>◀▶</div>	<div>■ ALARMS [▷]</div>	See page 6-18.
		<div>■ SWITCHES [▷]</div>	See page 6-20.
		<div>■ CLOCK [▷]</div>	See page 6-21.
		<div>■ PROGRAMMABLE MESSAGE [▷]</div>	See page 6-21.
		<div>■ END OF PAGE A2 [▷]</div>	
<div>MESSAGE</div> <div>MESSAGE</div> <div>MESSAGE</div>	<div>◀▶</div> <div>◀▶</div> <div>◀▶</div>	<div>■ POWER QUALITY VALUES [▷]</div>	See page 6-22.
		<div>■ TOTAL HARMONIC DISTORTION [▷]</div>	See page 6-22.
		<div>■ DATA LOGGER [▷]</div>	See page 6-24.




MESSAGE		■ EVENT RECORDER [▷]	See page 6-24.
MESSAGE		■ VOLTAGE DIST. RECORDER [▷]	See page 6-28.
MESSAGE		■ END OF PAGE A3 [▷]	
MESSAGE		■ ACTUAL VALUES A4 PRODUCT INFO [▷]	
		■ SOFTWARE VERSIONS [▷]	See page 6-30.
		■ MODEL INFORMATION [▷]	See page 6-30.
MESSAGE		■ END OF PAGE A4 [▷]	

A1 Metering

Current Metering

PATH: ACTUAL VALUES ⇒ A1 METERING ⇒ ↓ CURRENT

■ CURRENT [▷]		A = 100 B = 100 C = 100 AMPS
MESSAGE		Iavg = 100 AMPS Vavg = 120 V L-N
MESSAGE		NEUTRAL CURRENT = 0 AMPS
MESSAGE		CURRENT UNBALANCE = 0.0%
MESSAGE		Ia MIN = 100 AMPS 12:00:00am 01/01/95
MESSAGE		Ib MIN = 100 AMPS 12:00:00am 01/01/95
MESSAGE		Ic MIN = 100 AMPS 12:00:00am 01/01/95
MESSAGE		In MIN = 100 AMPS 12:00:00am 01/01/95
MESSAGE		I U/B MIN = 0.0% 12:00:00am 01/01/95
MESSAGE		Ia MAX = 100 AMPS 12:00:00am 01/01/95
MESSAGE		Ib MAX = 100 AMPS 12:00:00am 01/01/95

MESSAGE		I_c MAX = 100 AMPS 12:00:00am 01/01/95
MESSAGE		I_n MAX = 100 AMPS 12:00:00am 01/01/95
MESSAGE		I U/B MAX = 0.0% 12:00:00am 01/01/95

- **A, B, C CURRENT:** Displays the current in each phase corresponding to the A, B, and C phase inputs. Current will be measured correctly only if the **CT PRIMARY** is entered to match the installed CT primary and the CT secondary is wired to match the 1 or 5 A input. If the displayed current does not match the actual current, check this setpoint and wiring.
- **Iavg/Vavg:** Displays the average of the three phase currents and three voltages. This line is not visible if the **VT WIRING** setpoint is set to "Single Phase Direct". L-N is displayed when **VT WIRING** is set to "4 Wire Wye / 3 VTs", "4 Wire Wye Direct", "4 Wire Wye / 2 VTs", or "3 Wire Direct". L-L is displayed when **VT WIRING** is set to "3 Wire Delta / 2 VTs".
- **NEUTRAL CURRENT:** Neutral current can be determined by two methods. One method measures the current via the neutral CT input. The second calculates the neutral current based on the three phase currents; using the instantaneous samples, $I_a + I_b + I_c = I_n$. If the sum of the phase currents does not equal 0, the result is the neutral current. When using the CT input, the neutral current reading will be correct only if the CT is wired correctly and the correct neutral CT primary value is entered. Verify neutral current by connecting a clamp-on ammeter around all 3 phases. If the neutral current appears incorrect, check the settings in **S2 SYSTEM SETUP** ⇒ **CURRENT/VOLTAGE CONFIGURATION** and verify the CT wiring.
- **CURRENT UNBALANCE:** Displays the percentage of current unbalance. Current unbalance is calculated as:

$$\text{Current Unbalance} = \frac{|I_m - I_{av}|}{|I_{av}|} \times 100\% \quad (\text{EQ 0.1})$$

where: I_{av} = average phase current = $(I_a + I_b + I_c) / 3$

I_m = current in phase with maximum deviation from I_{av}

Even though it is possible to achieve unbalance greater than 100% with the above formula, the PQMII limits unbalance readings to 100%.

If the average current is below 10% of the **CT PRIMARY** setpoint, the unbalance reading is forced to 0%. This avoids nuisance alarms when the system is lightly loaded. If the simulation currents are being used, the unbalance is never forced to 0%.

- **I_a, I_b, I_c, I_n MIN:** Displays the minimum current magnitudes and the time and date of their occurrence. This information is stored in non-volatile memory and is retained during loss of control power. The **S1 PQMII SETUP** ⇒ **CLEAR DATA** ⇒ **CLEAR MIN/MAX CURRENT VALUES** setpoint clears these values.
- **I U/B MIN:** Displays the minimum current unbalance and the time and date of its measurement. This information is stored in non-volatile memory and is retained during loss of control power. The **S1 PQMII SETUP** ⇒ **CLEAR DATA** ⇒ **CLEAR MIN/MAX CURRENT VALUES** setpoint clears this value.
- **I_a, I_b, I_c, I_n MAX:** Displays the maximum current magnitudes and the time and date of their occurrence. This information is stored in non-volatile memory and is retained during loss of control power. The **S1 PQMII SETUP** ⇒ **CLEAR DATA** ⇒ **CLEAR MIN/MAX CURRENT VALUES** setpoint clears these values.
- **I U/B MAX:** Displays the maximum current unbalance and the time and date of its measurement. This information is stored in non-volatile memory and is retained

during loss of control power. The **S1 PQMII SETUP** ⇒ **↓ CLEAR DATA** ⇒ **↓ CLEAR MIN/MAX CURRENT VALUES** setpoint command clears this value.

Voltage Metering

PATH: ACTUAL VALUES ⇒ A1 METERING ⇒ **↓ VOLTAGE**

■ VOLTAGE [▷]			Van = 120 Vbn = 120 Vcn = 120 V
MESSAGE			Iavg = 100 AMPS Vavg = 120 V L-N
MESSAGE			Vab= 0 Vbc= 0 Vca= 0 V
MESSAGE			AVERAGE LINE VOLTAGE = 208 V
MESSAGE			VOLTAGE UNBALANCE = 0.0%
MESSAGE			Van MIN = 100 V 12:00:00am 01/01/95
MESSAGE			Vbn MIN = 100 V 12:00:00am 01/01/95
MESSAGE			Vcn MIN = 100 V 12:00:00am 01/01/95
MESSAGE			Vab MIN = 173 V 12:00:00am 01/01/95
MESSAGE			Vbc MIN = 173 V 12:00:00am 01/01/95
MESSAGE			Vca MIN = 173 V 12:00:00am 01/01/95
MESSAGE			V U/B MIN = 0.0% 12:00:00am 01/01/95
MESSAGE			Van MAX = 140 V 12:00:00am 01/01/95
MESSAGE			Vbn MAX = 140 V 12:00:00am 01/01/95
MESSAGE			Vcn MAX = 140 V 12:00:00am 01/01/95
MESSAGE			Vab MAX = 242 V 12:00:00am 01/01/95
MESSAGE			Vbc MAX = 242 V 12:00:00am 01/01/95
MESSAGE			Vca MAX = 242 V 12:00:00am 01/01/95

MESSAGE



V U/B MAX = 5.1% 12:00:00am 01/01/95

- **Van, Vbn, Vcn:** Displays phase voltages corresponding to the A, B, and C voltage inputs. This voltage will be measured correctly only if the **VT RATIO**, **VT NOMINAL SECONDARY**, and **VOLTAGE WIRING** setpoints match the installed VTs. If the displayed voltage does not match the actual voltage, check the setpoints and wiring. This message appears only if the **VT WIRING** is configured for a wye input.
- **Iavg/Vavg:** Displays the average of the three phase currents/voltages. This value is not visible if the **VT WIRING** setpoint is set to "Single Phase Direct". L-N is displayed when **VT WIRING** is set to "4 Wire Wye / 3 VTs", "4 Wire Wye Direct", "4 Wire Wye / 2 VTs", or "3 Wire Direct" and L-L is displayed when **VT WIRING** is set to "3 Wire Delta / 2 VTs".
- **Vab, Vbc, Vca:** Displays line voltages corresponding to the A, B, and C voltage inputs. The measured voltage is correct only if the **VT RATIO**, **VT NOMINAL SECONDARY**, and **VOLTAGE WIRING** setpoints match the installed VTs. If the displayed voltage does not match the actual voltage, check the setpoints and wiring.
- **AVERAGE LINE VOLTAGE:** Displays the average of the three line voltages. This value is not visible if the **VT WIRING** setpoint is set to "Single Phase Direct".
- **VOLTAGE UNBALANCE:** Displays the percentage voltage unbalance. Voltage unbalance is calculated as shown below. If the **VOLTAGE WIRING** is configured for a wye input, voltage unbalance is calculated using phase quantities. If the **VT WIRING** is configured as a delta input, voltage unbalance is calculated using line voltages.

$$\text{Voltage Unbalance} = \frac{|V_m - V_{avg}|}{V_{avg}} \times 100\% \quad (\text{EQ 0.2})$$

where:

- V_{avg} = average phase voltage = $(V_{an} + V_{bn} + V_{cn}) / 3$ for "Wye" and "3 Wire Direct" connections;
- = average line voltage = $(V_{ab} + V_{bc} + V_{ca}) / 3$ for "3 Wire Delta / 2 VTs" connection
- V_m = voltage in a phase (or line) with maximum deviation from V_{avg} .

Even though it is possible to achieve unbalance greater than 100% with the above formula, the PQMII will limit unbalance readings to 100%.

If the average voltage is below 10% of **VT RATIO** × **VT NOMINAL SECONDARY VOLTAGE** for "3 Wire Delta / 2 VTs", "4 Wire Wye / 3 VTs", and "4 Wire Wye / 2 VTs" connections, or below 10% of **VT RATIO** × **NOMINAL DIRECT INPUT VOLTAGE** for "4 Wire Wye/Direct" and "3 Wire Direct" connections, the unbalance reading is forced to 0%. This is implemented to avoid nuisance alarms when the system is lightly loaded. If the simulation voltages are being used, the unbalance is never forced to 0%.

- **Van, Vbn, Vcn MIN/MAX:** Displays the minimum/maximum phase voltage magnitudes and the time and date of their occurrence. This information is stored in non-volatile memory and is retained during loss of control power. The **S1 PQMII SETUP** ⇒ **CLEAR DATA** ⇒ **CLEAR MIN/MAX VOLTAGE VALUES** setpoint clears these values.
- **Vab, Vbc, Vca MIN/MAX:** Displays the minimum/maximum line voltage magnitudes and the time and date of their occurrence. This information is stored in non-volatile memory and is retained during loss of control power. The **S1 PQMII SETUP** ⇒ **CLEAR DATA** ⇒ **CLEAR MIN/MAX VOLTAGE VALUES** setpoint clears these values.
- **V U/B MIN/MAX:** Displays minimum/maximum voltage unbalance and the time and date of its measurement. This information is stored in non-volatile memory and is retained during loss of control power. This value is cleared with the **S1 PQMII SETUP** ⇒ **CLEAR DATA** ⇒ **CLEAR MIN/MAX VOLTAGE VALUES** setpoint.

Phasors

PATH: ACTUAL VALUES \Rightarrow AI METERING \Rightarrow PHASORS






















■ PHASORS [▷]		Va PHASOR: 0V at 0° Lag
MESSAGE		Vb PHASOR: 0V at 0° Lag
MESSAGE		Vc PHASOR: 0V at 0° Lag
MESSAGE		Ia PHASOR: 0A at 0° Lag
MESSAGE		Ib PHASOR: 0A at 0° Lag
MESSAGE		Ic PHASOR: 0A at 0° Lag





















- **Va PHASOR:** Displays a phasor representation for the magnitude and angle of Va. Va is used as a reference for all other phasor angles. If there is no voltage present at the PQMII voltage inputs, then Ia will be used as the reference for all other angles. Va is also used as the reference when in Simulation Mode.
- **Vb/Vc PHASOR:** Displays a phasor representation for the magnitude and angle of Vb/Vc. Both **VB** and **VC PHASOR** values use the angle of **VA PHASOR** as a reference point. If there is no voltage at the PQMII voltage inputs, **IA PHASOR** is used as the reference. These setpoints are not displayed when the PQMII is configured for the “3 Wire Delta/2 VTs”, “4 Wire Wye/2 VTs”, or “Single Phase Direct” connections.
- **Ia PHASOR:** A phasor representation for the magnitude and angle of Ia is displayed here. Ia is used as a reference for all other Phasor angles only when there is no voltage present at the PQMII voltage inputs, otherwise, Va is used as the reference.
- **Ib/Ic PHASOR:** A phasor representation for the magnitude and angle of Ib/Ic is displayed here. The Ib and Ic currents use the angle of Va as a reference point. If there is no voltage at the PQMII voltage inputs, Ia is used as the reference. These setpoints are not displayed when the PQMII is configured for “Single Phase Direct” connection.






Power Metering

PATH: ACTUAL VALUES \Rightarrow AI METERING \Rightarrow POWER

■ POWER [▷]		THREE PHASE REAL POWER = 1000 kW
MESSAGE		THREE PHASE REACTIVE POWER = 120 kvar
MESSAGE		THREE PHASE APPARENT POWER = 1007 kVA
MESSAGE		THREE PHASE POWER FACTOR = 0.99 Lag
MESSAGE		PHASE A REAL POWER = 1000 kW

MESSAGE		PHASE A REACTIVE POWER = 120 kvar
MESSAGE		PHASE A APPARENT POWER = 1007 kVA
MESSAGE		PHASE A POWER FACTOR = 0.99 Lag
MESSAGE		PHASE B REAL POWER = 1000 kW
MESSAGE		PHASE B REACTIVE POWER = 120 kvar
MESSAGE		PHASE B APPARENT POWER = 1007 kVA
MESSAGE		PHASE B POWER FACTOR = 0.99 Lag
MESSAGE		PHASE C REAL POWER = 1000 kW
MESSAGE		PHASE C REACTIVE POWER = 120 kvar
MESSAGE		PHASE C APPARENT POWER = 1007 kVA
MESSAGE		PHASE C POWER FACTOR = 0.99 Lag
MESSAGE		THREE PHASE REAL POWER = 10.00 MW
MESSAGE		THREE PHASE REACTIVE POWER = 1.20 Mvar
MESSAGE		THREE PHASE APPARENT POWER = 10.07 MVA
MESSAGE		3Φ kW MIN = 1000 12:00:00am 01/01/95
MESSAGE		3Φ kvar MIN = 120 12:00:00am 01/01/95
MESSAGE		3Φ kVA MIN = 1007 12:00:00am 01/01/95
MESSAGE		3Φ PF MIN = 0.99 Lag 12:00:00am 01/01/95
MESSAGE		3Φ kW MAX = 1000 12:00:00am 01/01/95
MESSAGE		3Φ kvar MAX = 120 12:00:00am 01/01/95
MESSAGE		3Φ kVA MAX = 1007 12:00:00am 01/01/95

MESSAGE		3Φ PF MAX = 0.99 Lag 12:00:00am 01/01/95
MESSAGE		AΦ kW MIN = 1000 12:00:00am 01/01/95
MESSAGE		AΦ kvar MIN = 120 12:00:00am 01/01/95
MESSAGE		AΦ kVA MIN = 1007 12:00:00am 01/01/95
MESSAGE		AΦ PF MIN = 0.99 Lag 12:00:00am 01/01/95
MESSAGE		AΦ kW MAX = 1000 12:00:00am 01/01/95
MESSAGE		AΦ kvar MAX = 120 12:00:00am 01/01/95
MESSAGE		AΦ kVA MAX = 1007 12:00:00am 01/01/95
MESSAGE		AΦ PF MAX = 0.99 Lag 12:00:00am 01/01/95
MESSAGE		BΦ kW MIN = 1000 12:00:00am 01/01/95
MESSAGE		BΦ kvar MIN = 120 12:00:00am 01/01/95
MESSAGE		BΦ kVA MIN = 1007 12:00:00am 01/01/95
MESSAGE		BΦ PF MIN = 0.99 Lag 12:00:00am 01/01/95
MESSAGE		BΦ kW MAX = 1000 12:00:00am 01/01/95
MESSAGE		BΦ kvar MAX = 120 12:00:00am 01/01/95
MESSAGE		BΦ kVA MAX = 1007 12:00:00am 01/01/95
MESSAGE		BΦ PF MAX = 0.99 Lag 12:00:00am 01/01/95
MESSAGE		CΦ kW MIN = 1000 12:00:00am 01/01/95
MESSAGE		CΦ kvar MIN = 120 12:00:00am 01/01/95
MESSAGE		CΦ kVA MIN = 1007 12:00:00am 01/01/95

MESSAGE		CΦ PF MIN = 0.99 Lag 12:00:00am 01/01/95
MESSAGE		CΦ kW MAX = 1000 12:00:00am 01/01/95
MESSAGE		CΦ kvar MAX = 120 12:00:00am 01/01/95
MESSAGE		CΦ kVA MAX = 1007 12:00:00am 01/01/95
MESSAGE		CΦ PF MAX = 0.99 Lag 12:00:00am 01/01/95

Power metering actual values are displayed in this page. The [S1 PQMII SETUP](#) ⇌ [CLEAR DATA](#) ⇌ [CLEAR MIN/MAX POWER VALUES](#) setpoint can be used to clear the minimum and maximum values. *FIGURE 6-1: Power Measurement Conventions* for the convention used to describe power direction.

- **THREE PHASE/A/B/C REAL POWER:** The total RMS three phase real power as well as individual phase A/B/C real power is displayed. The phase A/B/C real power messages are displayed only for a “Wye” or “3 Wire Direct” connections. The PQMII shows direction of flow by displaying the signed value of kW.
- **THREE PHASE/A/B/C REACTIVE POWER:** The total RMS three phase reactive power as well as the individual phase A/B/C reactive power is displayed. The phase A/B/C reactive power messages will be displayed only for a “Wye” or “3 Wire Direct” connected system. The PQMII shows direction of flow by displaying the signed value of kvar.
- **THREE PHASE/A/B/C APPARENT POWER:** The total RMS three phase apparent power as well as the individual phase A/B/C apparent power is displayed. The phase A/B/C apparent power messages will be displayed only for a “Wye” or “3 Wire Direct” connected system.
- **THREE PHASE/A/B/C POWER FACTOR:** The three phase true power factor as well as the individual phase A/B/C true power factors is displayed in these messages. The phase A/B/C true power factor messages will be displayed only for a “Wye” or “3 Wire Direct” connected system.
- **3Φ/AΦ/BΦ/CΦ kW MIN/MAX:** The minimum/maximum three phase real power as well as the minimum/maximum individual phase A/B/C real power is displayed, along with the time and date of their measurement. This information is stored in non-volatile memory and will be retained during a loss of control power. The phase A/B/C minimum/maximum real power messages will be displayed only for a “Wye” connected system.
- **3Φ/AΦ/BΦ/CΦ kvar MIN/MAX:** The minimum/maximum three phase reactive power as well as the minimum/maximum individual phase A/B/C reactive power is displayed, along with the time and date of their measurement. This information is stored in non-volatile memory and will be retained during a loss of control power. The phase A/B/C minimum/maximum reactive power messages will be displayed only for a “Wye” connected system.
- **3Φ/AΦ/BΦ/CΦ kVA MIN/MAX:** The minimum/maximum three phase apparent power as well as the minimum/maximum individual phase A/B/C apparent power is displayed, along with the time and date of their measurement. This information is stored in non-volatile memory and will be retained during a loss of control power. The phase A/B/C minimum/maximum apparent power messages will be displayed only for a “Wye” connected system.

- 3Φ/AΦ/BΦ/CΦ PF MIN/MAX:** The minimum/maximum three phase lead or lag power factor as well as the minimum/maximum lead or lag individual phase A/B/C power factor is displayed, along with the time and date of their measurement. This information is stored in non-volatile memory and will be retained during a loss of control power. The phase A/B/C minimum/maximum lead or lag power factor messages will be displayed only for a “Wye” connected system.












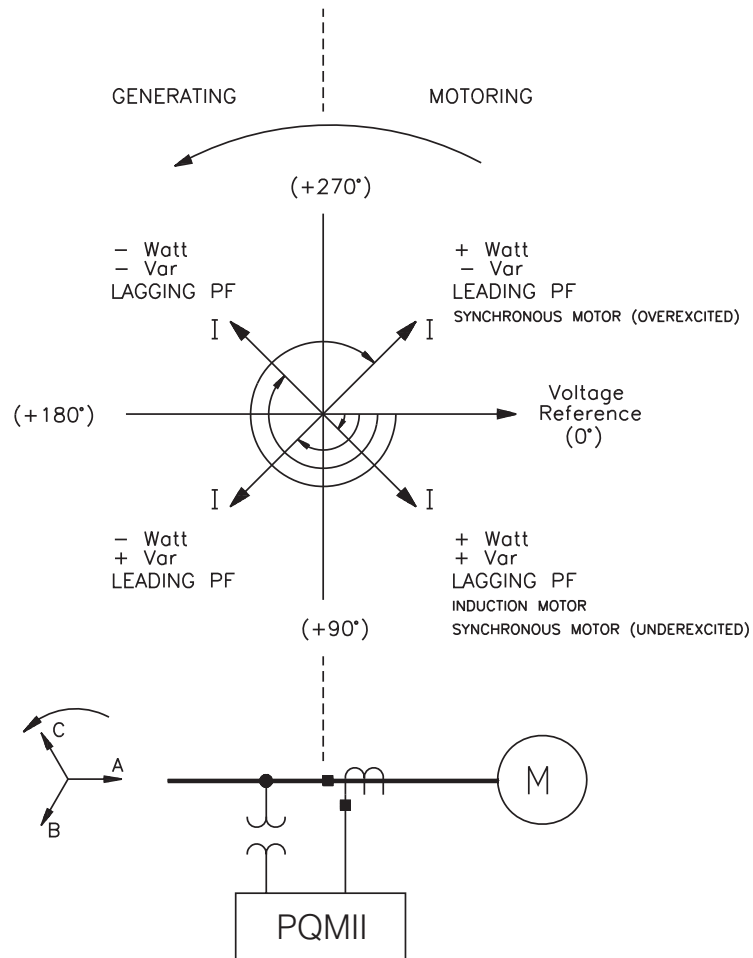


FIGURE 6-1: Power Measurement Conventions

Energy Metering

PATH: ACTUAL VALUES ⇒ AI METERING ⇒ ENERGY

<div>■ ENERGY</div> <div>[>]</div>		<div>3Φ POS REAL ENERGY</div> <div>= 32745 kWh</div>
<div>MESSAGE</div>		<div>3Φ NEG REAL ENERGY</div> <div>= 32745 kWh</div>
<div>MESSAGE</div>		<div>3Φ POS REACT ENERGY</div> <div>= 32745 kvarh</div>
<div>MESSAGE</div>		<div>3Φ NEG REACT ENERGY</div> <div>= 32745 kvarh</div>

MESSAGE		3Φ APPARENT ENERGY = 32745 kVAh
MESSAGE		REAL ENERGY LAST 24h = 1245 kWh
MESSAGE		REAL ENERGY COST = \$12575.34
MESSAGE		REAL ENERGY COST = \$125.01 / DAY
MESSAGE		TARIFF PERIOD 1 COST \$0.00
MESSAGE		TARIFF PERIOD 2 COST \$0.00
MESSAGE		TARIFF PERIOD 3 COST \$0.00
MESSAGE		TARIFF PERIOD 1 NET ENERGY: 0 kWh
MESSAGE		TARIFF PERIOD 2 NET ENERGY: 0 kWh
MESSAGE		TARIFF PERIOD 3 NET ENERGY: 0 kWh
MESSAGE		TIME OF LAST RESET: 12:00:00am 01/01/95

Energy metering actual values are displayed here. The **S1 PQMII SETUP** ⇨ ⇩ **CLEAR DATA** ⇨ ⇩ **CLEAR ENERGY VALUES** setpoint clears these values. The displayed energy values roll over to “0” once the value “4294967295” (FFFFFFFFh) has been reached.

- **3Φ POS/NEG REAL ENERGY:** These messages display the positive/negative watthours (in kWh) since the **TIME OF LAST RESET** date. Real power in the positive direction add to the **3Φ POS REAL ENERGY** value, whereas real power in the negative direction adds to the **3Φ NEG REAL ENERGY** value.
- **3Φ POS/NEG REACT ENERGY:** These messages display the positive/negative varhours (in kvarh) since the **TIME OF LAST RESET** date. Reactive power in the positive direction add to the **3Φ POS REACT ENERGY** value, whereas reactive power in the negative direction adds to the **3Φ NEG REACT ENERGY** value.
- **3Φ APPARENT ENERGY:** This message displays the accumulated VAhours (in kVAh) since the **TIME OF LAST RESET** date.
- **REAL ENERGY LAST 24h:** This message displays the accumulated real energy (in kWh) over the last 24-hour period. The 24-hour period used by the PQMII is started when control power is applied. The PQMII updates this value every hour based on the previous 24-hour period. This information will be lost if control power to the PQMII is removed.
- **REAL ENERGY COST:** This message displays the total cost for the real energy accumulated since the **TIME OF LAST RESET** date.
- **REAL ENERGY COST PER DAY:** Displays the average cost of real energy per day from time of last reset to the present. The cost per kWh is entered in the **S1 PQMII SETUP** ⇨ ⇩ **CALCULATION PARAMETERS** ⇨ ⇩ **ENERGY COST PER KWH** setpoint.

- **TARIFF PERIOD 1(3) COST:** These messages display the cost accrued for the three user-definable tariff periods. The start time and cost per kWh for these tariff periods are entered with the **S1 PQMII SETUP** ⇒ **↓** **CALCULATION PARAMETERS** ⇒ **↓** **TARIFF PERIOD 1(3) START TIME** and the **S1 PQMII SETUP** ⇒ **↓** **CALCULATION PARAMETERS** ⇒ **↓** **TARIFF PERIOD 1(3) COST PER KWH** setpoints, respectively.
- **TARIFF PERIOD 1(3) NET ENERGY:** These messages display the net energy for the three user-definable tariff periods. The start time and cost per kWh for these tariff periods are entered with the **S1 PQMII SETUP** ⇒ **↓** **CALCULATION PARAMETERS** ⇒ **↓** **TARIFF PERIOD 1(3) START TIME** and the **S1 PQMII SETUP** ⇒ **↓** **CALCULATION PARAMETERS** ⇒ **↓** **TARIFF PERIOD 1(3) COST PER KWH** setpoints, respectively.
- **TIME OF LAST RESET:** This message displays the time and date when the energy parameters were last cleared through the **S1 PQMII SETUP** ⇒ **↓** **CLEAR DATA** ⇒ **↓** **CLEAR ENERGY VALUES** setpoint.

Demand Metering

PATH: ACTUAL VALUES ⇒ A1 METERING ⇒ **↓** DEMAND




■ DEMAND [▷]		PHASE A CURRENT DEMAND = 125 A
MESSAGE		PHASE B CURRENT DEMAND = 125 A
MESSAGE		PHASE C CURRENT DEMAND = 125 A
MESSAGE		NEUTRAL CURRENT DEMAND = 125 A
MESSAGE		3Φ REAL POWER DEMAND = 1000 kW
MESSAGE		3Φ REACTIVE POWER DEMAND = 25 kvar
MESSAGE		3Φ APPARENT POWER DEMAND = 1007 kVA
MESSAGE		Ia MAX DMD = 560 A 12:00:00am 01/01/95
MESSAGE		Ib MAX DMD = 560 A 12:00:00am 01/01/95
MESSAGE		Ic MAX DMD = 560 A 12:00:00am 01/01/95
MESSAGE		In MAX DMD = 560 A 12:00:00am 01/01/95
MESSAGE		3Φ kW MAX = 1000 12:00:00am 01/01/95
MESSAGE		3Φ kvar MAX = 25 12:00:00am 01/01/95
MESSAGE		3Φ kVA MAX = 1200 12:00:00am 01/01/95

Demand metering actual values are displayed in this page. The [S1 PQMII SETUP](#) ⇒ [CLEAR DATA](#) ⇒ [CLEAR MAX DEMAND VALUES](#) setpoint can be used to clear the maximum demand values shown here.

- **PHASE A/B/C/NEUTRAL DEMAND:** This message displays the phase A/B/C/N current demand (in amps) over the most recent time interval.
- **3Φ REAL POWER DEMAND:** This message displays the 3 phase real power demand (in kW) over the most recent time interval.
- **3Φ REACTIVE POWER DEMAND:** This message displays the 3 phase reactive power demand (in kvar) over the most recent time interval.
- **3Φ APPARENT POWER DEMAND:** This message displays the 3 phase apparent power demand (in kVA) over the most recent time interval.
- **Ia/Ib/Ic/In MAX DMD:** These messages display the maximum phase A/B/C/N current demand (in amps) and the time and date when this occurred.
- **3Φ kW MAX:** This message displays the maximum three-phase real power demand (in kW) and the time and date when this occurred.
- **3Φ kvar MAX:** This message displays the maximum three-phase reactive power demand (in kvar) and the time and date when this occurred.
- **3Φ kVA MAX:** This message displays the maximum three-phase apparent power demand (in kVA) and the time and date when this occurred.

Frequency Metering

PATH: ACTUAL VALUES ⇒ AI METERING ⇒ [FREQUENCY](#)

■ FREQUENCY [▷]		FREQUENCY = 60.00 Hz
MESSAGE		FREQ MIN = 59.98 Hz 12:00:00am 01/01/95
MESSAGE		FREQ MAX = 59.98 Hz 12:00:00am 01/01/95

Frequency metering actual values are displayed in this page. The [S1 PQMII SETUP](#) ⇒ [CLEAR DATA](#) ⇒ [CLEAR MIN/MAX FREQUENCY VALUES](#) setpoint can be used to clear the minimum and maximum frequency values shown here.

- **FREQUENCY:** This message displays the frequency (in Hz). Frequency is calculated from the phase A-N voltage (when setpoint [S2 SYSTEM SETUP](#) ⇒ [CURRENT/VOLTAGE CONFIGURATION](#) ⇒ [VT WIRING](#) is "Wye") or from phase A-B voltage (when setpoint [VT WIRING](#) is "Delta"). A value of "0.00" is shown if there is insufficient voltage applied to the PQMII's terminals (less than 30 V on phase A).
- **FREQ MIN:** This message displays the minimum frequency measured as well as the time and date at which the minimum frequency occurred.
- **FREQ MAX:** This message displays the maximum frequency measured as well as the time and date at which the maximum frequency occurred.

Pulse Input Counters

PATH: ACTUAL VALUES ⇒ AI METERING ⇒ ↓ PULSE INPUT COUNTERS

<div>■ PULSE INPUT COUNTERS</div> <div>[▷]</div>		PULSE INPUT 1 = 0 Units
MESSAGE		PULSE INPUT 2 = 0 Units
MESSAGE		PULSE INPUT 3 = 0 Units
MESSAGE		PULSE INPUT 4 = 0 Units
MESSAGE		PULSE INPUT 1+2+3+4 = 0 Units
MESSAGE		TIME OF LAST RESET: 12:00:00am 01/01/95

- PULSE INPUT 1(4):** These messages display the accumulated value based on total number of pulses counted since the last reset. One switch input pulse is equal to the value assigned in the [S2 SYSTEM SETUP](#) ⇒ ↓ [PULSE INPUT](#) ⇒ ↓ [PULSE INPUT 1\(4\) VALUE](#) setpoint. The units shown after the value are as defined in the [PULSE INPUT UNITS](#) setpoint in the same menu. The displayed value rolls over to “0” once the value “4294967295” (FFFFFFFFh) has been reached. To use this feature, the “C” (control) option must be installed and one of the PQMII switch inputs must be assigned to “Pulse Input 1(4)” function. The switch input will then count the number of closures or openings depending upon how the switch is configured; see *Switch Inputs* on page 5–21 for details. The minimum timing requirements are shown in *FIGURE 6–2: Pulse Input Timing*.
- PULSE IN 1+2+3+4:** The totalized pulse input value is displayed here. The pulse inputs totalized is based on the [S2 SYSTEM SETUP](#) ⇒ ↓ [PULSE INPUT](#) ⇒ ↓ [PULSE INPUT TOTAL](#) setpoint.
- TIME OF LAST RESET:** This message displays the time and date when the pulse input values were last cleared. The [S1 PQMII SETUP](#) ⇒ ↓ [CLEAR DATA](#) ⇒ ↓ [CLEAR PULSE INPUT VALUES](#) setpoint clears the pulse input values.

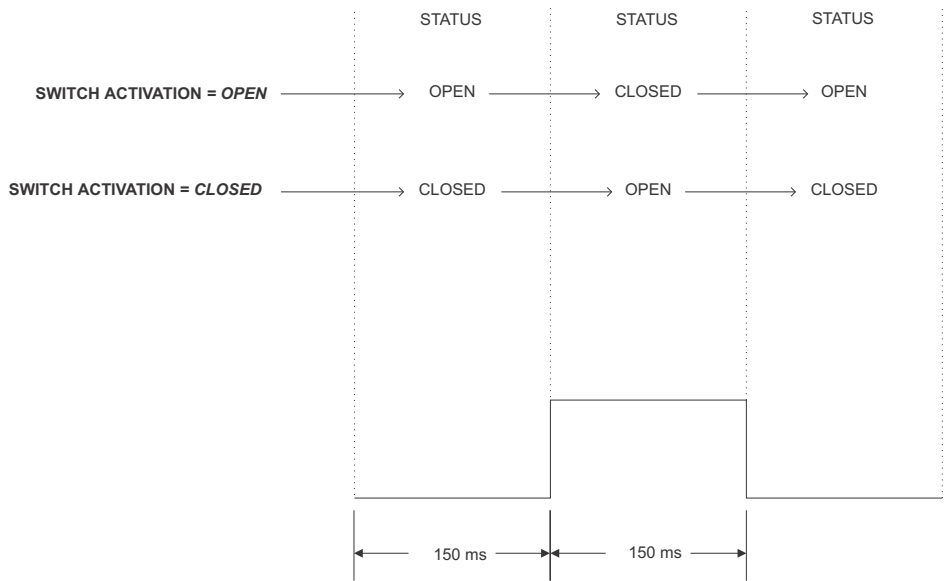


FIGURE 6-2: Pulse Input Timing

Analog Input

PATH: ACTUAL VALUES ⇌ AI METERING ⇌ ANALOG INPUT

■ ANALOG INPUT

[▷]

↔

MAIN/ALT ANALOG INPUT

20.1 mA




















This message displays the measured 4 to 20 mA analog input scaled to the user defined name and units. The analog input can be configured via a switch input and output relay to multiplex two analog input signals. The displayed user defined name and units will change to the corresponding values depending upon which analog input is connected. Refer to 5.3.3 *Analog Input* for information regarding user defined names and units as well as analog input multiplexing.












A2 Status

Alarms

PATH: ACTUAL VALUES ⇒ A2 STATUS ⇒ ⬇ ALARMS

■ ALARMS [▷]		PHASE UNDERCURRENT ALARM
MESSAGE		PHASE OVERCURRENT ALARM
MESSAGE		NEUTRAL OVERCURRENT ALARM
MESSAGE		UNDERVOLTAGE ALARM
MESSAGE		OVERVOLTAGE ALARM
MESSAGE		VOLTAGE UNBALANCE ALARM
MESSAGE		CURRENT UNBALANCE ALARM
MESSAGE		PHASE REVERSAL ALARM
MESSAGE		POWER FACTOR LEAD 1 ALARM
MESSAGE		POWER FACTOR LEAD 2 ALARM
MESSAGE		POWER FACTOR LAG 1 ALARM
MESSAGE		POWER FACTOR LAG 2 ALARM
MESSAGE		POSITIVE REAL POWER ALARM
MESSAGE		NEGATIVE REAL POWER ALARM
MESSAGE		POSITIVE REACTIVE POWER ALARM
MESSAGE		NEGATIVE REACTIVE POWER ALARM
MESSAGE		UNDERFREQUENCY ALARM
MESSAGE		OVERFREQUENCY ALARM

MESSAGE		PHASE A CURRENT DEMAND ALARM
MESSAGE		PHASE B CURRENT DEMAND ALARM
MESSAGE		PHASE C CURRENT DEMAND ALARM
MESSAGE		DATA LOG 1 ALARM
MESSAGE		DATA LOG 2 ALARM
MESSAGE		NEUTRAL CURRENT DEMAND ALARM
MESSAGE		POSITIVE REAL POWER DEMAND ALARM
MESSAGE		NEGATIVE REAL POWER DEMAND ALARM
MESSAGE		POSITIVE REACTIVE POWER DEMAND ALARM
MESSAGE		NEGATIVE REACTIVE POWER DEMAND ALARM
MESSAGE		APPARENT POWER DEMAND ALARM
MESSAGE		SWITCH INPUT A ALARM
MESSAGE		SWITCH INPUT B ALARM
MESSAGE		SWITCH INPUT C ALARM
MESSAGE		SWITCH INPUT D ALARM
MESSAGE		SELF-TEST FAILURE ALARM
MESSAGE		SERIAL COM1 FAILURE ALARM
MESSAGE		SERIAL COM2 FAILURE ALARM
MESSAGE		CLOCK NOT SET ALARM





MESSAGE		MAIN ANALOG INPUT ALARM
MESSAGE		ALT ANALOG INPUT ALARM
MESSAGE		CRITICAL SETPOINTS NOT STORED
MESSAGE		CURRENT THD ALARM
MESSAGE		VOLTAGE THD ALARM
MESSAGE		PULSE INPUT 1 ALARM
MESSAGE		PULSE INPUT 2 ALARM
MESSAGE		PULSE INPUT 3 ALARM
MESSAGE		PULSE INPUT 4 ALARM
MESSAGE		TOTALIZED PULSES ALARM
MESSAGE		TIME ALARM

The alarm messages appear only when the alarm threshold has been exceeded for the programmed time. When an alarm is assigned to an output relay, the relay can be set to be unlatched or latched. When the alarm is set as unlatched, it automatically resets when the alarm condition no longer exists. If the alarm is set as latched, a keypad reset or a serial port reset is required.

The **SELF TEST ALARM** occurs if a fault in the PQMII hardware is detected. This alarm is permanently assigned to the alarm output relay and is not user configurable. If this alarm is present, contact the GE Multilin Service Department.

Switch Status

PATH: ACTUAL VALUES ⇒ A2 STATUS ⇒ ⌵ SWITCHES

■ SWITCHES	[▷]		SWITCH INPUT A STATE: Closed
MESSAGE			SWITCH INPUT B STATE: Closed
MESSAGE			SWITCH INPUT C STATE: Closed
MESSAGE			SWITCH INPUT D STATE: Closed

To assist in troubleshooting, the state of each switch can be verified using these messages. A separate message displays the status of each input identified by the corresponding name as shown in the wiring diagrams in chapter 2. For a dry contact closure across the corresponding switch terminals the message will read “Closed”.

Clock

PATH: ACTUAL VALUES ⇒ A2 STATUS ⇒ ⬇ CLOCK

■ CLOCK

[▷]

⬅

➡

TIME: 12:00:00am

DATE: Nov 21 2003

The current time and date is displayed in this message. The PQMII uses an internally generated software clock which runs for approximately thirty days after the control power has been removed. For instructions on setting the clock, see 5.2.6 Clock. The [S4 ALARMS/CONTROL](#) ⇒ ⬇ MISCELLANEOUS ⇒ ⬇ CLOCK NOT SET ALARM alarm occurs if power has been removed for longer than thirty days and the clock value has been lost.

Programmable Message

PATH: ACTUAL VALUES ⇒ A2 STATUS ⇒ ⬇ PROGRAMMABLE MESSAGE

■ PROGRAMMABLE MESSAGE

[▷]

⬅

➡

PHONE: 905-294-6222

www.GEmultilin.com

A 40-character user defined message is displayed. The message is programmed using the keypad or via the serial port using the EnerVista PQMII Setup Software. See 6.3.4 Programmable Message for programming details.

A3 Power Analysis

Power Quality

PATH: ACTUAL VALUES ⇒ A3 POWER ANALYSIS ⇒ ⬇ POWER QUALITY VALUES

■ POWER QUALITY VALUES

[▷]

⬅

➡

Ia CREST FACTOR = 1.233

Ib CREST FACTOR = 1.008

Ic CREST FACTOR = 1.000

Ia THDF = 0.944

Ib THDF = 0.999

Ic THDF = 0.988

MESSAGE

⬅

➡

MESSAGE

⬅

➡

MESSAGE

⬅

➡

MESSAGE

⬅

➡

MESSAGE

⬅

➡













- **Ia/Ib/Ic CREST FACTOR:** The crest factor describes how much the load current can vary from a pure sine wave while maintaining the system's full rating. A completely linear load (pure sine wave) has a crest factor of $\sqrt{2}$ (1 / 0.707), which is the ratio of the peak value of sine wave to its RMS value. Typically, the crest factor can range from $\sqrt{2}$ to 2.5.
- **Ia/Ib/Ic THDF:** The Transformer Harmonic Derating Factor (THDF), also known as CBEMA factor, is defined as the crest factor of a pure sine wave ($\sqrt{2}$) divided by the measured crest factor. This method is useful in cases where lower order harmonics are dominant. In a case where higher order harmonics are present, it may be necessary to use a more precise method (K-factor) of calculating the derating factor. This method also does not take into consideration the losses associated with rated eddy current in the transformer. The EnerVista PQMII Setup Software provides the K-factor method of calculating the derating factor, which is defined on a per unit basis as follows:







$$K = \sum_{h=1}^{h_{max}} I_h^2 \times h^2 \quad (\text{EQ 6.3})$$

where: I_h = RMS current at harmonic h , in per unit of rated RMS load current

THD

PATH: ACTUAL VALUES \Rightarrow A3 POWER ANALYSIS \Rightarrow TOTAL HARMONIC DISTORTION



■ TOTAL HARMONIC DISTORTION [▷]			PHASE A CURRENT THD= 5.3%
MESSAGE		PHASE B CURRENT THD= 7.8%	
MESSAGE		PHASE C CURRENT THD= 4.5%	
MESSAGE		NEUTRAL CURRENT THD= 15.4%	
MESSAGE		VOLTAGE Van THD= 1.2%	
MESSAGE		VOLTAGE Vbn THD= 2.0%	
MESSAGE		VOLTAGE Vcn THD= 2.0%	
MESSAGE		VOLTAGE Vab THD= 2.0%	
MESSAGE		VOLTAGE Vbc THD= 1.1%	
MESSAGE		Ia MAX THD = 5.9% 12:00:00am 01/01/95	
MESSAGE		Ib MAX THD = 7.8% 12:00:00am 01/01/95	
MESSAGE		Ic MAX THD = 4.5% 12:00:00am 01/01/95	

MESSAGE		In MAX THD = 15.4% 12:00:00am 01/01/95
MESSAGE		Van MAX THD = 1.2% 12:00:00am 01/01/95
MESSAGE		Vbn MAX THD = 2.0% 12:00:00am 01/01/95
MESSAGE		Vcn MAX THD = 2.0% 12:00:00am 01/01/95
MESSAGE		Vab MAX THD = 2.0% 12:00:00am 01/01/95
MESSAGE		Vbc MAX THD = 1.1% 12:00:00am 01/01/9

- **PHASE A/B/C/N CURRENT THD:** These messages display the calculated total harmonic distortion for each current input.
- **VOLTAGE Van/Vbn/Vcn/Vab/Vbc THD:** These messages display the calculated total harmonic distortion for each voltage input. Phase-to-neutral voltages will appear when the setpoint **S2 SYSTEM SETUP** ⇒ **CURRENT/VOLTAGE CONFIGURATION** ⇒ **VT WIRING** is set as "Wye". Line-to-line voltages will appear when **VT WIRING** is set as "Delta".
- **Ia/Ib/Ic/In MAX THD:** The maximum total harmonic value for each current input and the time and date which the maximum value occurred are displayed. The **S1 PQMII SETUP** \ **CLEAR DATA** \ **CLEAR MAX THD VALUES** setpoint clears this value.
- **Van/Vbn/Vcn/Vab/Vbc MAX THD:** These messages display the maximum total harmonic value for each voltage input and the time and date of its occurrence. The setpoint **S1 PQMII SETUP** ⇒ **CLEAR DATA** \ ⇒ **CLEAR MAX THD VALUES** is used to clear this value. Phase to neutral voltages will appear when the setpoint **S2 SYSTEM SETUP** ⇒ **CURRENT/VOLTAGE CONFIGURATION** ⇒ **VT WIRING** is set to "Wye". Line to line voltages will appear when **VT WIRING** is set to "Delta".

Data Logger

PATH: ACTUAL VALUES ⇒ A3 POWER ANALYSIS ⇒ DATA LOGGER




■ DATA LOGGER [▶]		DATA LOG 1: STOPPED: 0% FULL
MESSAGE		DATA LOG 2: STOPPED: 0% FULL

These message display the current status of Data Loggers 1 and 2. The Data Logger can be set up and run only from the EnerVista PQMII Setup Software. See 4.5.4 *Data Logger* and 7.6 *Data Logger Implementation* for additional details on the Data Logger feature.

It is possible to stop the data loggers from the PQMII front panel using the **S2 SYSTEM SETUP** ⇒ **DATA LOGGER** ⇒ **STOP DATA LOGGER 1(2)** setpoint.

Event Recorder

PATH: ACTUAL VALUES ⇒ A3 POWER ANALYSIS ⇒ ⬇ EVENT RECORDER

■ EVENT RECORDER [▷]	 <div> 3: POWER ON 12:00:00am 01/01/03 </div>
MESSAGE 	<div> 2: POWER OFF 12:00:00am 01/01/03 </div>
MESSAGE 	<div> 1: CLEAR RECORDS 12:00:00am 01/01/03 </div>

The PQMII Event Recorder runs continuously and records the number, cause, time, date, and metering quantities present at the occurrence of each event. This data is stored in non-volatile memory and is not lost when power to the PQMII is removed. The Event Recorder must be enabled in [S1 PQMII SETUP](#) ⇒ ⬇ [EVENT RECORDER](#) ⇒ ⬇ [EVENT RECORDER OPERATION](#). The Event Recorder can be cleared in [S1 PQMII SETUP](#) ⇒ ⬇ [CLEAR DATA](#) ⇒ ⬇ [CLEAR EVENT RECORD](#). Data for the 150 most recent events is stored. Event data for older events is lost. Note that the event number, cause, time, and date is available in the messages as shown in the following table, but the associated metering data is available only via serial communications.

The event data stored for POWER OFF events does not reflect values at the time of power-off.

These messages display the 150 most recent events recorded by the event recorder. The list of possible events and their display on the PQMII is shown below.

Table 1: List of Possible Events (Sheet 1 of 4)

Displayed Event Name	Event Description
3Φ +kvar DMD ↑	Positive Reactive Power Demand Alarm/Control Pickup
3Φ +kvar DMD ↓	Positive Reactive Power Demand Alarm/Control Dropout
3Φ +kW DMD ↑	Positive Real Power Demand Alarm/Control Pickup
3Φ +kW DMD ↓	Positive Real Power Demand Alarm/Control Dropout
3Φ kVA DEMAND ↑	Apparent Power Demand Alarm/Control Pickup
3Φ kVA DEMAND ↓	Apparent Power Demand Alarm/Control Dropout
3Φ -kvar DMD ↑	Negative Reactive Power Demand Alarm/Control Pickup
3Φ -kvar DMD ↓	Negative Reactive Power Demand Alarm/Control Dropout
3Φ -kW DMD ↑	Negative Real Power Demand Alarm/Control Pickup
3Φ -kW DMD ↓	Negative Real Power Demand Alarm/Control Dropout
ALARM RESET	Latched Alarm/Auxiliary Reset
AN INPUT ALT ↑	Alternate Analog Input Alarm/Control Pickup

Table 1: List of Possible Events (Sheet 2 of 4)

Displayed Event Name	Event Description
AN INPUT ALT ↓	Alternate Analog Input Alarm/Control Dropout
AN INPUT MAIN ↑	Main Analog Input Alarm/Control Pickup
AN INPUT MAIN ↓	Main Analog Input Alarm/Control Dropout
CLOCK NOT SET ↑	Clock Not Set Alarm Pickup
CLOCK NOT SET ↓	Clock Not Set Alarm Dropout
COM1 FAILURE ↑	COM1 Failure Alarm Pickup
COM1 FAILURE ↓	COM1 Failure Alarm Dropout
COM2 FAILURE ↑	COM2 Failure Alarm Pickup
COM2 FAILURE ↓	COM2 Failure Alarm Dropout
CURRENT THD ↑	Current THD Alarm/Control Pickup
CURRENT THD ↓	Current THD Alarm/Control Dropout
CURRENT U/B ↑	Current Unbalance Alarm/Control Pickup
CURRENT U/B ↓	Current Unbalance Alarm/Control Dropout
DATA LOG 1 ↑	Data Log 1 Alarm Pickup
DATA LOG 1 ↓	Data Log 1 Alarm Dropout
DATA LOG 2 ↑	Data Log 2 Alarm Pickup
DATA LOG 2 ↓	Data Log 2 Alarm Dropout
Ia DEMAND ↑	Phase A Current Demand Alarm/Control Pickup
Ia DEMAND ↓	Phase A Current Demand Alarm/Control Dropout
Ib DEMAND ↑	Phase B Current Demand Alarm/Control Pickup
Ib DEMAND ↓	Phase B Current Demand Alarm/Control Dropout
Ic DEMAND ↑	Phase C Current Demand Alarm/Control Pickup
Ic DEMAND ↓	Phase C Current Demand Alarm/Control Dropout
In DEMAND ↑	Neutral Current Demand Alarm/Control Pickup
In DEMAND ↓	Neutral Current Demand Alarm/Control Dropout
NEG kvar ↑	Negative Reactive Power Alarm/Control Pickup
NEG kvar ↓	Negative Reactive Power Alarm/Control Dropout
NEG kW ↑	Negative Real Power Alarm/Control Pickup
NEG kW ↓	Negative Real Power Alarm/Control Dropout
NEUTRAL ↑	Neutral Overcurrent Alarm/Control Pickup
NEUTRAL ↓	Neutral Overcurrent Alarm/Control Dropout

Table 1: List of Possible Events (Sheet 3 of 4)

Displayed Event Name	Event Description
OVERCURRENT ↑	Overcurrent Alarm/Control Pickup
OVERCURRENT ↓	Overcurrent Alarm/Control Dropout
OVERFREQUENCY ↑	Overfrequency Alarm/Control Pickup
OVERFREQUENCY ↓	Overfrequency Alarm/Control Dropout
OVERVOLTAGE ↑	Overvoltage Alarm/Control Pickup
OVERVOLTAGE ↓	Overvoltage Alarm/Control Dropout
PARAM NOT SET ↑	Critical Setpoints Not Stored Alarm Pickup
PARAM NOT SET ↓	Critical Setpoints Not Stored Alarm Dropout
PF LAG 1 ↑	Power Factor Lag 1 Alarm/Control Pickup
PF LAG 1 ↓	Power Factor Lag 1 Alarm/Control Dropout
PF LAG 2 ↑	Power Factor Lag 2 Alarm/Control Pickup
PF LAG 2 ↓	Power Factor Lag 2 Alarm/Control Dropout
PF LEAD 1 ↑	Power Factor Lead 1 Alarm/Control Pickup
PF LEAD 1 ↓	Power Factor Lead 1 Alarm/Control Dropout
PF LEAD 2 ↑	Power Factor Lead 2 Alarm/Control Pickup
PF LEAD 2 ↓	Power Factor Lead 2 Alarm/Control Dropout
PHASE REVERSAL ↑	Phase Reversal Alarm/Control Pickup
PHASE REVERSAL ↓	Phase Reversal Alarm/Control Dropout
POS kvar ↑	Positive Reactive Power Alarm/Control Pickup
POS kvar ↓	Positive Reactive Power Alarm/Control Dropout
POS kW ↑	Positive Real Power Alarm/Control Pickup
POS kW ↓	Positive Real Power Alarm/Control Dropout
POWER OFF	Power Off
POWER ON	Power On
PROGRAM ENABLE	Setpoint Access On
PULSE IN 1 ↑	Pulse Input 1 Alarm/Control Pickup
PULSE IN 1 ↓	Pulse Input 1 Alarm/Control Dropout
PULSE IN 2 ↑	Pulse Input 2 Alarm/Control Pickup
PULSE IN 2 ↓	Pulse Input 2 Alarm/Control Dropout
PULSE IN 3 ↑	Pulse Input 3 Alarm/Control Pickup
PULSE IN 3 ↓	Pulse Input 3 Alarm/Control Dropout

Table 1: List of Possible Events (Sheet 4 of 4)

Displayed Event Name	Event Description
PULSE IN 4 ↑	Pulse Input 4 Alarm/Control Pickup
PULSE IN 4 ↓	Pulse Input 4 Alarm/Control Dropout
PULSE TOTAL ↑	Totalized Pulses Alarm/Control Pickup
PULSE TOTAL ↓	Totalized Pulses Alarm/Control Dropout
SELF TEST ↑	Self Test Failure Alarm Pickup
SELF TEST ↓	Self Test Failure Alarm Dropout
SW A ACTIVE ↑	Switch Input A Alarm/Control Pickup
SW A ACTIVE ↓	Switch Input A Alarm/Control Dropout
SW B ACTIVE ↑	Switch Input B Alarm/Control Pickup
SW B ACTIVE ↓	Switch Input B Alarm/Control Dropout
SW C ACTIVE ↑	Switch Input C Alarm/Control Pickup
SW C ACTIVE ↓	Switch Input C Alarm/Control Dropout
SW D ACTIVE ↑	Switch Input D Alarm/Control Pickup
SW D ACTIVE ↓	Switch Input D Alarm/Control Dropout
TIME ↑	Time Alarm/Control Pickup
TIME ↓	Time Alarm/Control Dropout
TRACE TRIG ↑	Trace Memory Triggered
UNDERCURRENT ↑	Undercurrent Alarm/Control Pickup
UNDERCURRENT ↓	Undercurrent Alarm/Control Dropout
UNDERVOLTAGE ↑	Undervoltage Alarm/Control Pickup
UNDERVOLTAGE ↓	Undervoltage Alarm/Control Dropout
UNDRFREQUENCY ↑	Underfrequency Alarm/Control Pickup
UNDRFREQUENCY ↓	Underfrequency Alarm/Control Dropout
VOLTAGE THD ↑	Voltage THD Alarm/Control Pickup
VOLTAGE THD ↓	Voltage THD Alarm/Control Dropout
VOLTAGE U/B ↑	Voltage Unbalance Alarm/Control Pickup
VOLTAGE U/B ↓	Voltage Unbalance Alarm/Control Dropout

Voltage Disturbance

Main Menu

PATH: ACTUAL VALUES ⇒ A3 POWER ANALYSIS ⇒ ⬇ VOLTAGE DIST. RECORDER

<div>■ VOLTAGE DIST. RECORDER [▷]</div> <div>MESSAGE</div> <div>MESSAGE</div>	<div>⏪ ⏩</div> <div>⏪ ⏩</div> <div>⏪ ⏩</div>	<div>3: Van SWELL</div> <div>12:00:05am 01/01/03</div>
		<div>2: Vbn SAG</div> <div>12:00:02am 01/01/03</div>
		<div>1: Vcn SAG</div> <div>12:00:00am 01/01/03</div>

The Voltage Disturbance Recorder runs continuously and records the source, level and duration of each voltage disturbance. Up to 500 disturbances are recorded in a circular buffer. When over 500 disturbances are recorded, data for older disturbances are lost as new disturbances are recorded. Additionally, since the events are stored within volatile memory, the voltage disturbance recorder will lose all events upon a power loss. The time and date of when the disturbance *ended* is recorded with the disturbance event. The following available is available for each disturbance:

- **Type:** Each disturbance is classified as a **SWELL** or **SAG**. The disturbance will be distinguished as a swell if the voltage increases above the swell level, for up to 1 minute. A sag disturbance is distinguished in the same manner except that it involves a voltage decrease below the sag level.
- **Source:** The source of the disturbance is the phase voltage that recorded the disturbance; either Van, Vbn, Vcn, Vab, or Vca. If the disturbance is found on two or more phases, multiple disturbances will be recorded.

The voltage disturbance recorder monitors only measured values. Therefore, when the Vbc (delta connection only) and Vbn (2 VT 4-Wire Wye only) phases are calculated quantities, they are not considered a source.

The duration and average level are recorded in sub-menus as shown below.

Sub-Menus

PATH: ACTUAL VALUES ⇒ A3 POWER ANALYSIS ⇒ ⬇ VOLTAGE DIST... ⇒ 1(500): <DIST_TYPE>

<div>1: Vcn SAG</div> <div>12:00:00am 01/01/03</div> <div>MESSAGE</div>	<div>⏪ ⏩</div> <div>⏪ ⏩</div>	<div>1 DURATION:</div> <div>65 cycles</div>
		<div>1 VOLTAGE LEVEL:</div> <div>4125 V</div>

The **DURATION** is the length of time of the disturbance. If the disturbance is either a sag or a swell the duration will be recorded in cycles with a maximum possible value of 1 minute (3600 cycles at 60Hz).

The **VOLTAGE LEVEL** represents the average level in volts for the disturbance.

The voltage disturbance recorder is independent from the event recorder. The alarm events will record normally as per the conditions set within the **S4 ALARMS** ⇒ **CONTROL** settings menu, regardless whether the voltage disturbance recorder is enabled or of the sag/swell level.

If an undervoltage/overvoltage alarm occurs, it is immediately recorded as an event (if enabled). On the other hand, the voltage disturbance is recorded, if enabled, once the voltage level returns to nominal and the condition is complete. As a result, the time recorded in the event recorder is the start time of the alarm condition, while the time recorded in the disturbance recorder is the end time of the condition.

A4 Product Info

Software Versions

PATH: ACTUAL VALUES ⇒ A4 PRODUCT INFO ⇒ SOFTWARE VERSIONS

<div>■ SOFTWARE VERSIONS</div> <div>[▷]</div>		<div>MAIN PROGRAM VER:</div> <div>2.22 MAY 09, 2006</div>
<div>MESSAGE</div>		<div>BOOT PROGRAM VER:</div> <div>3.00</div>

Product software revision information is contained in these messages.

- **MAIN PROGRAM VERSION:** When referring to documentation or requesting technical assistance from the factory, record the **MAIN PROGRAM VERSION**. This value identifies the firmware installed internally in the flash memory. The title page of this instruction manual states the main program revision code for which the manual is written. There may be differences in the product and manual if the revision codes do not match.
- **BOOT PROGRAM VERSION:** This identifies the firmware installed internally in the memory of the PQMII. This does not affect the functionality of the PQMII.

Model Information

PATH: ACTUAL VALUES ⇒ A4 PRODUCT INFO ⇒ MODEL INFORMATION

<div>■ MODEL INFORMATION</div> <div>[▷]</div>		<div>ORDER CODE:</div> <div>PQMII-T20-C-A</div>
<div>MESSAGE</div>		<div>CPU SPEED:</div> <div>25 MHz</div>
<div>MESSAGE</div>		<div>MOD NUMBER(S) :</div> <div>000</div>
<div>MESSAGE</div>		<div>SERIAL NUMBER:</div> <div>C7387777</div>
<div>MESSAGE</div>		<div>DATE OF MANUFACTURE:</div> <div>Aug 29 2003</div>
<div>MESSAGE</div>		<div>DATE OF CALIBRATION:</div> <div>Aug 29 2003</div>

Product identification information is contained in these messages.

- **ORDER CODE:** This indicates which features were ordered with this PQMII. T = Transducer option (T20 = 4-20 mA, T1 = 0-1 mA Analog Outputs), C = Control option, A = Power Analysis option.
- **CPU SPEED:** Newer hardware revisions support the 25 MHz CPU speed, while older revisions only support 16 MHz. Certain features are only available on the 25 MHz platform (such as the Voltage Disturbance Recorder).
- **MOD NUMBER(S):** If unique features have been installed for special customer orders, the **MOD NUMBER** will be used by factory personnel to identify the matching product records. If an exact replacement model is required, the **MAIN PROGRAM VERSION**, **MOD NUMBER(S)**, **ORDER CODE**, and **SERIAL NUMBER** should be specified with the order.
- **SERIAL NUMBER:** This is the serial number of the PQMII. This should match the number on the label located on the back of the PQMII.
- **DATE OF MANUFACTURE:** This is the date the PQMII was final tested at GE Multilin.
- **DATE OF CALIBRATION:** This is the date the PQMII was last calibrated.



PQMII Power Quality Meter

Chapter 7: Applications

Event Recorder

List of Events

The Event Recorder stores all online data in a section of non-volatile memory when triggered by an event. The PQMII defines any of the following situations as an event:

- Analog Input Alternate Alarm
- Analog Input Alternate Alarm Clear
- Analog Input Main Alarm
- Analog Input Main Alarm Clear
- Clear Event Record
- Clock Not Set Alarm
- Clock Not Set Alarm Clear
- COM1 Fail Alarm
- COM1 Fail Alarm Clear
- COM2 Fail Alarm
- COM2 Fail Alarm Clear
- Current THD Alarm
- Current THD Alarm Clear
- Current Unbalance Alarm
- Current Unbalance Alarm Clear
- Data Log 1 Alarm
- Data Log 1 Alarm Clear

Data Log 2 Alarm
Data Log 2 Alarm Clear
kVA Demand Alarm
kVA Demand Alarm Clear
Negative kvar Alarm
Negative kvar Alarm Clear
Negative kvar Demand Alarm
Negative kvar Demand Alarm Clear
Negative kW Alarm
Negative kW Alarm Clear
Negative kW Demand Alarm
Negative kW Demand Alarm Clear
Neutral Current Demand Alarm
Neutral Current Demand Alarm Clear
Neutral Overcurrent Alarm
Neutral Overcurrent Alarm Clear
Overcurrent Alarm
Overcurrent Alarm Clear
Overfrequency Alarm
Overfrequency Alarm Clear
Overvoltage Alarm
Overvoltage Alarm Clear
Parameters Not Set Alarm
Parameters Not Set Alarm Clear
Phase A Current Demand Alarm
Phase A Current Demand Alarm Clear
Phase B Current Demand Alarm
Phase B Current Demand Alarm Clear
Phase C Current Demand Alarm
Phase C Current Demand Alarm Clear
Phase Reversal Alarm
Phase Reversal Alarm Clear
Positive kvar Alarm
Positive kvar Alarm Clear
Positive kvar Demand Alarm
Positive kvar Demand Alarm Clear

Positive kW Alarm
Positive kW Alarm Clear
Positive kW Demand Alarm
Positive kW Demand Alarm Clear
Power Factor Lag 1 Alarm
Power Factor Lag 1 Alarm Clear
Power Factor Lag 2 Alarm
Power Factor Lag 2 Alarm Clear
Power Factor Lead 1 Alarm
Power Factor Lead 1 Alarm Clear
Power Factor Lead 2 Alarm
Power Factor Lead 2 Alarm Clear
Power Off
Power On
Pulse Count Total Alarm
Pulse Input 1 Alarm
Pulse Input 1 Alarm Clear
Pulse Input 2 Alarm
Pulse Input 2 Alarm Clear
Pulse Input 3 Alarm
Pulse Input 3 Alarm Clear
Pulse Input 4 Alarm
Pulse Input 4 Alarm Clear
Pulse Input Total Alarm Clear
Reset
Self Test Alarm
Self Test Alarm Clear
Setpoint Access Enabled
Switch A Alarm
Switch A Alarm Clear
Switch B Alarm
Switch B Alarm Clear
Switch C Alarm
Switch C Alarm Clear
Switch D Alarm
Switch D Alarm Clear

Time Alarm
 Time Alarm Clear
 Trace Memory Trigger
 Undercurrent Alarm
 Undercurrent Alarm Clear
 Underfrequency Alarm

Up to 150 events can be stored in non-volatile memory for retrieval and review. The Event Recorder can be enabled, disabled, or cleared via the keypad or serial port. The following data is saved when an event occurs:

Analog Input (high)
 Analog Input (low)
 Date - Month/Day
 Date - Year
 Event Cause
 Event Number
 Frequency
 I Unbalance
 Ia
 Ia Demand
 Ia THD
 Ib
 Ib Demand
 Ib THD
 Ic
 Ic Demand
 Ic THD
 In
 In Demand
 In THD
 Internal Fault Error Code
 kVAh (high)
 kVAh (low)
 Negative kvarh (high)
 Negative kvarh (low)
 Negative kWh (low)
 Negative kWh (high)
 P3 (high)

P3 (low)
P3 Demand (high)
P3 Demand (low)
Pa (high)
Pa (low)
Pb (high)
Pb (low)
Pc (high)
Pc (low)
PF3
PFa
PFb
PFC
Positive kvarh (high)
Positive kvarh (low)
Positive kWh (high)
Positive kWh (low)
Q3 (high)
Q3 (low)
Q3 Demand (high)
Q3 Demand (low)
Qa (high)
Qa (low)
Qb (high)
Qb (low)
Qc (high)
Qc (low)
S3 (high)
S3 (low)
S3 Demand (high)
S3 Demand (low)
Sa (low)
Sa (high)
Sb (high)
Sb (low)
Sc (high)

Sc (low)
Switches and Relays States
Time - Hours/Minutes
Time - Seconds
Trace Memory Trigger Cause
Underfrequency Alarm Clear
Undervoltage Alarm
Undervoltage Alarm Clear
V Unbalance
Vab (high)
Vab (low)
Vab THD
Van (high)
Van (low)
Van THD
Vbc (high)
Vbc (low)
Vbc THD
Vbn (high)
Vbn (low)
Vbn THD
Vca (high)
Vca (low)
Vcn (high)
Vcn (low)
Vcn THD
Voltage THD Alarm
Voltage THD Alarm Clear
Voltage Unbalance Alarm
Voltage Unbalance Alarm Clear

Access to Event Recorder Information

There are two ways to access Event Recorder Information:

- Access only the Records and data you wish to view
- Access the entire Event Record.

The Event Recorder is indexed by Event Number (1 to 150). To access a specific Event, the Event Number must be written to the PQMII memory map location 12C0h. The data specific to that Event can be read starting at memory map location 0AE0h. The specific Event Number must be known to read the Event Recorder in this fashion. However, this Event Number is usually not known and the entire Event Record must be read. The easiest way to do this is to read the PQMII Memory Map location 0AD0h (Total Number of Events Since Last Clear) and loop through each Event Number indicated by the value from 0AD0h, reading the associated data pertaining to each Event. This requires 1 to 150 serial reads of 170 bytes each. Once this data is obtained, it can be interpreted based upon the format of each value. It is important to note that some memory map parameters are 32 bits (4 bytes) long and require 2 registers to contain their value, one for the two high bytes and one for the two low bytes.

The operation of the Voltage Disturbance Recorder is similar to the Event Recorder. The differences between the two recorders are the Modbus addresses, the event data, and the number of events (150 compared to 500).

The PQMII uses two different group of samples. PQMII samples at the rate of 64 samples/cycle for metering calculations and uses the last 2 cycle data (128 samples) for calculating the RMS value. An RMS value based on separate group of samples (sample rate of 16 samples/cycle) is used for making faster decisions for pickup and dropout of monitoring elements.

The event time recorded in the event recorder for monitoring elements is based on the RMS value from 16 samples but the metered RMS values is based on the previous 128 samples (2 cycle data) at the time of the trigger. Since the event recorder metered data and trigger data are based on independent and different periods of sample sizes, the metered data in the event recorder may be different from the RMS value at the time of the trigger. The accuracy specifications should not be applied for the data in event recorder.

Interfacing Using Hyperterminal

Upgrading Firmware

When upgrading firmware, the PQMII may appear to lockup if there is an interruption on the communication port during the upload process. If the PQMII does not receive the necessary control signals for configuration during firmware upload, it could remain in a halted situation until reinitialized. The steps used by the EnerVista PQMII Setup Software to upload firmware to the PQMII are as follows:

1. Prepare the PQMII for firmware upgrade by saving setpoints to a file.
2. Erase the flash memory and verify it to be blank.
3. Upload the new firmware.
4. Verify the CRC when upload is complete.
5. Run the new code.

If the PQMII is interrupted prior to erasing the flash memory, it could be halted in a mode where the display will read **PQMII FLASH LOADER ENTER TEXT "LOAD"**.

If the computer being used to upload firmware has a screen saver enabled, and the screen saver operates during the upload process, the communication port will be interrupted during the launch of the screen saver. It is recommended to disable any screen saver prior to firmware upload.

There are two ways to alleviate this condition: one is to cycle power to the PQMII; the second is to interface with the PQMII using a terminal program, such as Hyperterminal, and perform the upload process manually.

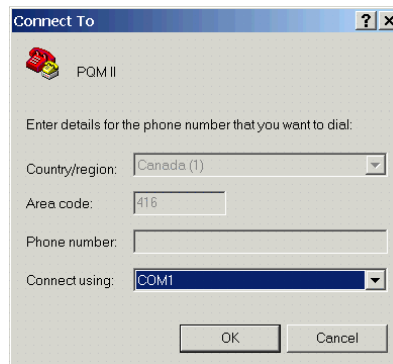
Cycling Power

Remove and then re-apply control power to the PQMII. The PQMII should then run the existing firmware in its flash memory. If the PQMII does not run the firmware in flash memory, attempt the second method using Hyperterminal.


Hyperterminal

Hyperterminal is a terminal interface program supplied with Microsoft Windows. The following procedure describes how to setup Hyperterminal.


- ▷ Run the program "hypertrm.exe" which is usually located in the Accessories folder of your PC.
- ▷ A Connection window will appear asking for a name. Use a name such as "PQMII" for the connection and click on **OK**. The following window appears.



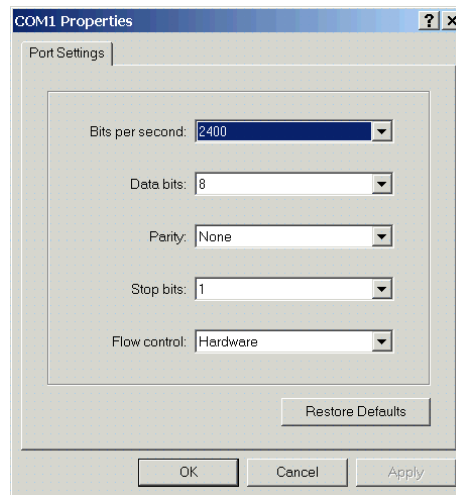- ▷ Select the communications port of your PC that is connected to the PQMII.
- ▷ Click on **OK**.
The following window will appear.



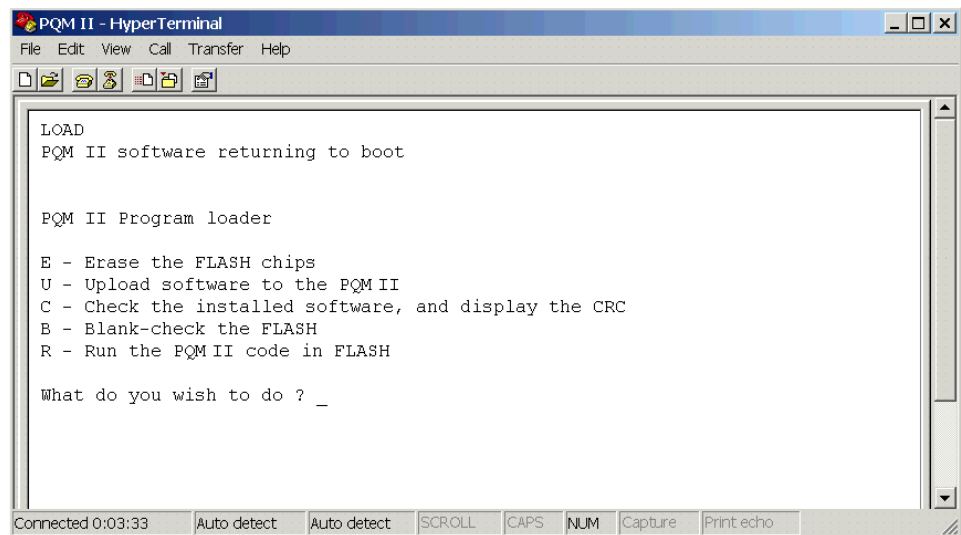- ▷ Change the settings in the Properties window to match those shown above.
- ▷ Click on **OK**.
You should now have a link to the PQMII.
- ▷ Enter the text **LOAD** in uppercase in the text window of Hyperterminal.
The PQMII Boot Menu should appear in the text window.



- ▷ Type “**E**” to Erase the PQMII flash memory.
Hyperterminal will ask you to verify that you wish to erase the flash memory; enter “**Y**” for yes. The Boot Menu appears again when complete.
- ▷ Now select “**B**” to blank check the flash memory.
The PQMII Boot Menu will appear again when complete.

- ▷ Type “U” to upload software to the PQMII.
The PQMII is now waiting for a firmware file.
- ▷ Select **Transfer** then **Send File** on the Hyperterminal task bar.
- ▷ Enter the location and the name of the firmware file you wish to send to the PQMII, and ensure the Protocol is **1KXmodem**.
- ▷ Click on **Send**.
The PQMII will now proceed to receive the firmware file, this usually takes 3 to 4 minutes. When complete the Boot Menu will again appear.
- ▷ Type “C” to check the installed firmware.
- ▷ Type “R” to run the flash.
- ▷ If the CRC check is bad, erase the flash and re-install the firmware.
If numerous bad CRC checks are encountered, it is likely that the file you are attempting to load is corrupted. Obtain a new file and try again.
If attempts to use Hyperterminal are unsuccessful, consult the factory.

Phasor Implementation

Theory of Phasor Implementation

The purpose of the function Calc_Phasors within the PQMII firmware is to take a digitally sampled periodic signal and generate the equivalent phasor representation of the signal. In the conventional sense, a phasor depicts a purely sinusoidal signal which is what we're interested in here; we wish to calculate the phasor for a given signal at the fundamental power system frequency. The following Discrete Fourier Series equations calculate the phasor in rectangular co-ordinates for an arbitrary digitally sampled signal. The justification for the equations is beyond the scope of this document but can be found in some form in any text on signal analysis.

$$\text{Re}(g) = \frac{2}{N} \sum_{n=0}^{N-1} g_n \cdot \cos(\omega_0 n T) ; \quad \text{Im}(g) = \frac{2}{N} \sum_{n=0}^{N-1} g_n \cdot \sin(\omega_0 n T) \quad (\text{EQ 0.1})$$

where: $\text{Re}(g)$ = real component of phasor
 $\text{Im}(g)$ = imaginary component of phasor
 g = set of N digital samples = $\{g_0, g_1, \dots, g_{N-1}\}$
 g_n = nth sample from g
 N = number of samples
 f_0 = fundamental frequency in Hertz
 $\omega_0 = 2\pi f_0$ = angular frequency in radians
 $T = 1 / (f_0 N)$ = time between samples

The PQMII Trace Memory feature is employed to calculate the phasors. The Trace Memory feature samples 16 times per cycle for two cycles for all current and voltage inputs. Substituting $N = 16$ (samples/cycle) into the equations yields the following for the real and imaginary components of the phasor:

$$\text{Re}(g) = \frac{1}{8} \left(g_0 \cos 0 + g_1 \cos \frac{\pi}{8} + g_2 \cos \frac{2\pi}{8} + \dots + g_{31} \cos \frac{31\pi}{8} \right) \quad (\text{EQ 0.2})$$

$$\text{Im}(g) = \frac{1}{8} \left(g_0 \sin 0 + g_1 \sin \frac{\pi}{8} + g_2 \sin \frac{2\pi}{8} + \dots + g_{31} \sin \frac{31\pi}{8} \right) \quad (\text{EQ 0.3})$$

The number of multiples in the above equation can be reduced by using the symmetry inherent in the sine and cosine functions which is illustrated as follows:

$$\begin{aligned} \cos \phi &= -\cos(\pi - \phi) = -\cos(\pi + \phi) = \cos(2\pi - \phi) \\ \sin \phi &= \sin(\pi - \phi) = -\sin(\pi + \phi) = -\sin(2\pi - \phi) \\ \cos \phi &= \sin\left(\frac{\pi}{2} - \phi\right) \end{aligned} \quad (\text{EQ 0.4})$$

Let $k_1 = \cos(\pi/8)$, $k_2 = \cos(\pi/4)$, $k_3 = \cos(3\pi/8)$; the equations for the real and imaginary components are reduced to:

$$\begin{aligned} \text{Re}(g) &= \frac{1}{8} (k_1(g_1 - g_7 - g_9 + g_{15} + g_{17} - g_{23} - g_{25} + g_{31}) \\ &\quad + k_2(g_2 - g_6 - g_{10} + g_{14} + g_{18} - g_{22} - g_{26} + g_{30}) \\ &\quad + k_3(g_3 - g_5 - g_{11} + g_{13} + g_{19} - g_{21} - g_{27} + g_{29}) + (g_0 - g_8 + g_{16} - g_{24})) \end{aligned} \quad (\text{EQ 0.5})$$

$$\begin{aligned} \text{Im}(g) &= \frac{1}{8} (k_1(g_3 + g_5 - g_{11} - g_{13} + g_{19} + g_{21} - g_{27} - g_{29}) \\ &\quad + k_2(g_2 + g_6 - g_{10} - g_{14} + g_{18} + g_{22} - g_{26} - g_{30}) \\ &\quad + k_3(g_1 + g_7 - g_9 - g_{15} + g_{17} + g_{23} - g_{25} - g_{31}) + (g_4 - g_{12} + g_{20} - g_{28})) \end{aligned} \quad (\text{EQ 0.6})$$

The number of subtractions can be reduced between the calculations of real and imaginary components by not repeating the same subtraction twice. The following subtractions are repeated:

$$\begin{aligned} \Delta_0 &= g_0 - g_8 & \Delta_1 &= g_1 - g_9 & \Delta_2 &= g_2 - g_{10} & \Delta_3 &= g_3 - g_{11} \\ \Delta_4 &= g_4 - g_{12} & \Delta_5 &= g_5 - g_{13} & \Delta_6 &= g_6 - g_{14} & \Delta_7 &= g_7 - g_{15} \\ \Delta_8 &= g_{16} - g_{24} & \Delta_9 &= g_{17} - g_{25} & \Delta_{10} &= g_{18} - g_{26} & \Delta_{11} &= g_{19} - g_{27} \\ \Delta_{12} &= g_{20} - g_{28} & \Delta_{13} &= g_{21} - g_{29} & \Delta_{14} &= g_{22} - g_{30} & \Delta_{15} &= g_{23} - g_{31} \end{aligned} \quad (\text{EQ 0.7})$$

Substituting in the above 'delta' values results in the form of the equations that will be used to calculate the phasors:

$$\begin{aligned} \text{Re}(g) &= \frac{1}{8} (\Delta_0 + \Delta_8 + k_1(\Delta_1 - \Delta_7 + \Delta_9 - \Delta_{15}) + k_3(\Delta_3 - \Delta_5 + \Delta_{11} - \Delta_{13})) \\ \text{Im}(g) &= \frac{1}{8} (\Delta_4 + \Delta_{12} + k_1(\Delta_3 + \Delta_5 + \Delta_{11} + \Delta_{13}) + k_2(\Delta_1 + \Delta_7 + \Delta_9 + \Delta_{15})) \end{aligned} \quad (\text{EQ 0.8})$$

Triggered Trace Memory

Description

The Triggered Trace Memory can be used to detect and record system disturbances. The PQMII uses a dedicated continuous sampling rate of 16 samples per cycle to record fluctuations in voltage or current as per user defined levels. The PQMII calculates the true

RMS value of one consecutive cycle, or 16 samples, and compares this value with the user-defined trigger levels to determine if it will record all sampled waveforms. The sampled waveforms include Ia, Ib, Ic, In, Va, Vb and Vc.

Since the PQMII requires a minimum 20 V for detection and has an upper voltage input limit of 600 V, the following limitation exists for the Trace Memory undervoltage and overvoltage trigger levels:

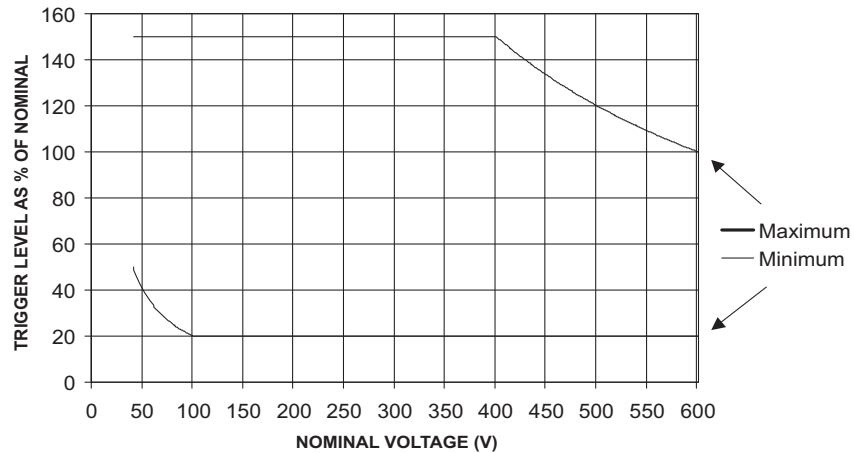


FIGURE 7-1: Trace Memory Phase Voltage Trigger Level Limits

Pulse Output

Pulse Output Considerations

Up to 4 SPDT Form C output relays are configurable as Pulse Initiators based on energy quantities calculated by the PQMII. Variables to consider when using the PQMII as a Pulse Initiator are:

- **PQMII Pulse Output Parameter:** The PQMII activates the assigned output relay based upon the energy quantity used as the base unit for pulse initiation. These energy quantities include \pm kWhr, \pm kVARh, and kVAh.
- **PQMII Pulse Output Interval:** The PQMII activates the assigned output relay at the accumulation of each Pulse Output Interval as defined by the user. This interval is based upon system parameters such that the PQMII pulse output activates at a rate not exceeding the Pulse Acceptance Capability of the end receiver.
- **PQMII Pulse Output Width:** This user defined parameter defines the duration of the pulse initiated by the PQMII when a quantity of energy equal to the Pulse Output Interval has accumulated. It is based upon system parameters such that the PQMII pulse output will activate for a duration that is within the operating parameters of the end receiver.
- **PQMII Output Relay Operation:** This user defined parameter defines the normal state of the PQMII output relay contacts, i.e. Fail-safe or Non-Failsafe.
- **Pulse Acceptance Capability of the End Receiver:** This parameter is normally expressed as any one of the following: (a) Pulses per Demand Interval; (b) Pulses per

second, minute or hour; (c) Minimum time between successive closures of the contacts.

- **Type of Pulse Receiver:** There are 4 basic types of Pulse receivers: a) Three-wire, every pulse counting; b) Three-wire, every other pulse counting; c) Two-wire, Form A normally open, counts only each contact closure; d) Two-wire, counts every state change, i.e. recognizes both contact closure and contact opening.
- **Maximum Energy Consumed over a Defined Interval:** This is based upon system parameters and defines the maximum amount of energy that may be accumulated over a specific time.

Connecting to an End Receiver Using KYZ Terminals

Typical end receivers require a contact closure between KY or KZ based upon the type of receiver. The PQMII Pulse Output feature can be used with either two- or three-wire connections. The PQMII activates the designated Output Relay at each accumulation of the defined Pulse Output Interval for the defined Pulse Output Width. Therefore, each PQMII contact operation represents one interval. For end receivers that count each closure and opening of the output contacts, the PQMII Pulse Output Interval should be adjusted to match the registration of the end receiver. For example, if the end receiver counts each closure as 100 kWh and each opening as 100 kWh, the PQMII Pulse Output Interval should be set to 200 kWh.

The PQMII Output Relays can be configured as Failsafe or Non-Failsafe to match the normally open/closed configuration of the KY and KZ connections at the end receiver. The K connection is always made to the COM connection of the designated PQMII output relay, and the Y and Z connections can be made to the N/O or N/C connections based upon the type of end receiver.

Data Logger Implementation

Data Logger Structure

The Data Logger allows various user defined parameters to be continually recorded at a user-defined rate. The Data Logger uses 64 samples/cycle data. The PQMII has allocated 196608 bytes of memory for Data Log storage. The memory structure is partitioned into 1536 blocks containing 64×2 byte registers as shown below:

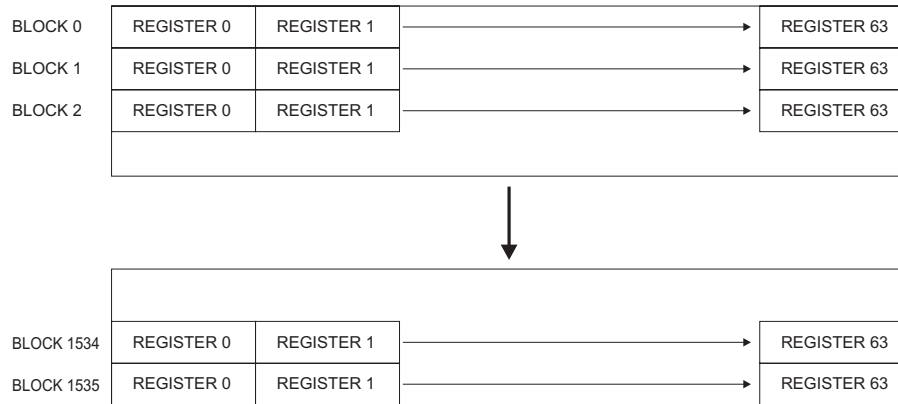


FIGURE 7-2: Data Logger Memory Structure

Each entry into the Data Log is called a Record. The Record can vary in size depending upon the parameters the user wishes to log. The memory structure can also be partitioned into 2 separate Data Logs. The size of the 2 logs is user-definable. The top of each Data Log contains what is called the Header. Each Data Log Header contains the following information:

- **Log Time Interval:** The user-defined interval that the data log stores entries.
- **Present Log Time and Date:** The time and date of the most recent Record.
- **Log Start Block #:** Block number containing the first byte of the logged data.
- **Log Start Register #:** The Register number containing the first two bytes of the logged data.
- **Log Record Size:** The size of each Record entry into the Data Log based upon the user-defined Data Log structure.
- **Log Total Records:** The total number of records available based upon the user defined Data Log parameter structure.
- **Block number of First Record:** A pointer to the block containing the first record in the Data Log.
- **Register number of First Record:** A pointer to the register containing the first record in the Data log.
- **Log Pointer to First Item of First Record:** A pointer to the first record in the Data Log.
- **Block number of Next Record to Write:** A pointer to the block containing the last record in the Data Log.
- **Register number of Next Record to Write:** A pointer to the register containing the last record in the Data Log.
- **Log Pointer to First Item of Record After Last:** A pointer to the next record to be written into the Data Log.
- **Log Status:** The current status of the Data Log; i.e.: Running or Stopped.
- **Log Records Used:** The number of records written into the Data Log.
- **Log Time Remaining Until Next Reading:** A counter showing how much time remains until the next record is to be written into the Data Log.

Modes of Operation

The Data Logger has 2 modes of operation, Run to Fill and Circulate. In the Run to Fill mode, the Data Log will stop writing records into the memory structure when there is not enough memory to add another record. Depending on the size of each record, the Data Log may not necessarily use the entire 196,608 bytes of storage available. In the Circulate mode, the Data Log will continue to write new Records into the Log beyond the last available Record space. The Log will overwrite the first Record after the Header and continue to overwrite the Records to follow until the user wishes to stop logging data. The Log will act as a rolling window of data in time, going back in time as far as the amount of records times the Log Time Interval will allow in the total space of memory available.

Accessing Data Log Information

The Data Log can be accessed using the EnerVista PQMII Setup Software or manually via the serial port. Access via the EnerVista PQMII Setup Software is described in *Data Logger* on page 4–12. Access manually via the serial port as follows:

1. Set the Block of data you wish to access at 1268h in the PQMII Memory Map.
2. Read the required amount of data from the 64 Registers in the Block.

Accessing the Data Log in this manner assumes that the user knows which Block they wish to access, and knows the size of each Record based upon the parameters they have selected to log.

The easiest way to access the data in the Data Log is to read the entire log and export this data into a spreadsheet for analysis. This requires defining the Block to be read, starting at Block 0, and reading all 128 bytes of data in each of the 64 Registers within the Block. You would then define Blocks 1, 2, 3, etc., and repeat the reading of the 64 Registers for each block, until Block 1535. This requires 1536 reads of 128 bytes each. The data can then be interpreted based upon the parameter configuration.

Interpreting Data Log Information

Using two (2) Data Logs in the “Run to Fill” mode, the Data Log is configured as shown below.

Blocks 0 and 1 are reserved for Data Logger Data Interval information. Block 2 contains header information for both Data Logs. The first 32 registers of Block 2 are reserved for Data Log 1 header information, and the remaining 32 registers are reserved for Data Log 2 header information. The first register of Data Log information resides at Register 0 of Block 3. This leaves 196224 bytes of data storage.

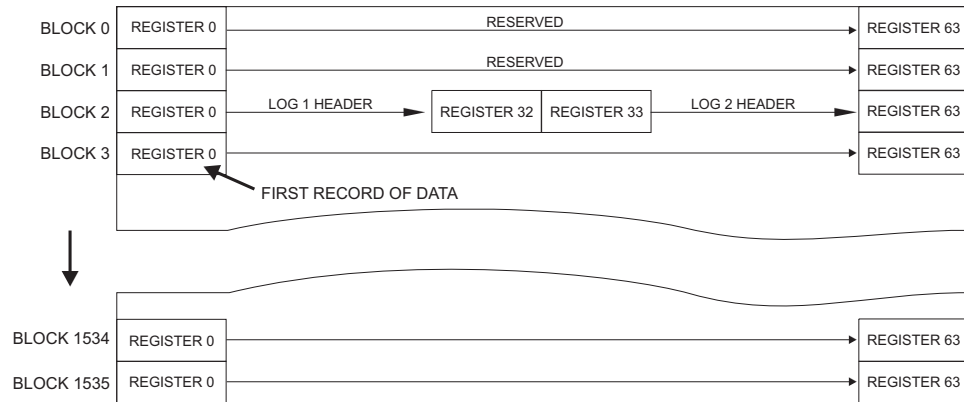


FIGURE 7-3: Data Log Configuration

The location of the first Record in Log 2 will depend upon the Log configuration. Its location is determined by reading the Log 2 Header value for Log Start Address at location 0AB2 and 0AB3 in the memory map. The Log Start Address consists of the block number (0AB2) and the register number (0AB3) which represents the location of the first record within the Data Log memory structure. This location will always be the starting address for Data Log 2 for the given configuration. Adding or deleting parameters to the configuration will change the Log 2 Starting Address.

The log pointers contain a value from 0 to 196607 representing a byte within the data Log memory structure. Add 1 to this number and then divide this number by 64 (number of registers in a Block). Then divide this number by 2 (number of bytes in a register), and truncate the remainder of the division to determine the Block number. Multiplying the remainder of the division by 64 will determine the Register number. For example, if the Log pointer: "Log 2 Pointer to First Item of First Record" was 34235, then the Block and Register numbers containing the first record of Log 2 are:

$$\text{Block Number} = (34235 + 1) / 64 / 2 = 267.46875$$

Therefore, Block Number 267 contains the starting record.

$$\text{Record Number} = 0.46875 \times 64 = 30$$

Therefore, Register Number 30 contains the first byte of Log 2 data. These calculations can be avoided by using the pre-calculated values for Block Number and Record number located just prior to the pointer (0AB7 and 0AB8).

The Data Logs will use the maximum amount of memory available, minus a 1 record buffer, based upon the user configuration. For Example, if the Record Size for a given configuration was 26 bytes, and there were 28 bytes of memory left in the memory structure, the Data Logger will not use those last 28 bytes, regardless of the mode of operation. The Data Logger uses the following formula to determine the total record space available:

$$\text{Total Space} = (196224 / \text{Record Size}) - 1$$

As in the example, the total space calculated would be $196224 / 26 - 1 = 7546.07$. This equates to 7546 records with 28 bytes of unused memory at the end of Block 1536. The total amount of space used in the structure can also be found in the Log Header in the Log Total Records field.

Address 1270h in the PQMII Memory Map is the Holding Register for the first available parameter for use by the Data Logs. The Data Logs will place the user-selected parameters into their respective Record structures based upon their respective order in the PQMII Memory Map.

For example, if Positive kWh, Frequency and Current Unbalance were selected as measured parameters, they would be placed into the Record structure in the following order: Unbalance (2 bytes, 16-bit value), Frequency (2 bytes, 16-bit value), and Positive kWh (4 bytes, 32-bit value). The Data Log Parameters table on the following page illustrates the order of parameters and their size.

Therefore, the Record size would be 8 bytes. To put a time value associated with each Record, you must read the Log Time and Date from the Header. This is the time of the most recent Record in the Log. To time stamp the first Record used, multiply the Log Time Interval by the Log Records Used and subtract this number from the time associated with the last Record. To determine the time associated with any Record, add the Log Time Interval times the Record to be read to the time associated with the first Record in the Log.

For example:

```
Log Time Interval:3600
Log Time, Hours/Minutes:02 30
Log Time, Seconds:30300
Log Date, Month:06 15
Log Date, Year:1997
Log Records Used:1600
```

The last Record entry time is interpreted as 2:30 AM, 30.300 seconds, June 15, 1997. The Log Time Interval is 3600 seconds, or 1 hour. Taking the Log Records Used (1600) and multiplying this by the Log Time Interval (3600) gives 5760000 seconds. This translates into 66 days and 16 hours. Subtracting backwards on a calendar from the time for the last Record gives a time and date of 10:30:30.000 AM, April 9, 1997. This is the time stamp for the first Record. In the PQMII, the sampling time (log time interval) accuracy for the data logger is 0.15%. This could result in a different time stamp for the first record if the data logger is retrieved at a different time with a different number of records in the data logger. Time stamping the remaining Records requires adding 3600 seconds for each Record starting from the time associated with the first Record. It is important to note that when in the Circulate mode, and the Data Log fills the available memory, the Log wraps around the first available Register of the memory structure and the Log Pointer to First Item of First Record will float along in time with each additional entry into the Log. For example, if the Data Log has wrapped around the available memory more than once, the Log Pointer to First Item of First Record will always be preceded in memory by the Log Pointer to First Item of Record After Last. As each new entry is written into the Log, these two pointers move down to the next record space in memory, overwriting the first entry into the log as of the Present Log Time and Date.

Data Log Parameters

Listed below are the parameters available for capturing data via the Data Logger. Note that these parameters will be placed within the Record structure of the Data Log in the order and size that they appear in this table.

Table 1: Data Log Parameters


DATA LOG PARAMETER	SIZE (bytes)	DATA LOG PARAMETER	SIZE (bytes)	DATA LOG PARAMETER	SIZE (bytes)
Ia	2	PFa	2	kVAh	4
Ib	2	Pb	4	Ia Demand	2
Ic	2	Qb	4	Ib Demand	2
Iavg	2	Sb	4	Ic Demand	2
In	2	PFb	2	In Demand	2
I Unbalance	2	Pc	4	P3 Demand	4
Van	4	Qc	4	Q3 Demand	4
Vbn	4	Sc	4	S3 Demand	4
Vcn	4	PFc	2	Ia THD	2
Vpavg	4	P3	4	Ib THD	2
Vab	4	Q3	4	Ic THD	2
Vbc	4	S3	4	In THD	2
Vca	4	PF3	2	Van THD	2
Vlavg	4	Frequency	2	Vbn THD	2
V Unbalance	2	Positive kWh	4	Vcn THD	2
Pa	4	Negative kWh	4	Vab THD	2
Qa	4	Positive kvarh	4	Vbc THD	2
Sa	4	Negative kvarh	4	Analog Input	4

where: I = current; V = Voltage; P = Real Power; Q = Reactive Power; S = Apparent Power;
PF = Power Factor; THD = Total Harmonic Distortion

Reading Long Integers from the Memory Map

Description

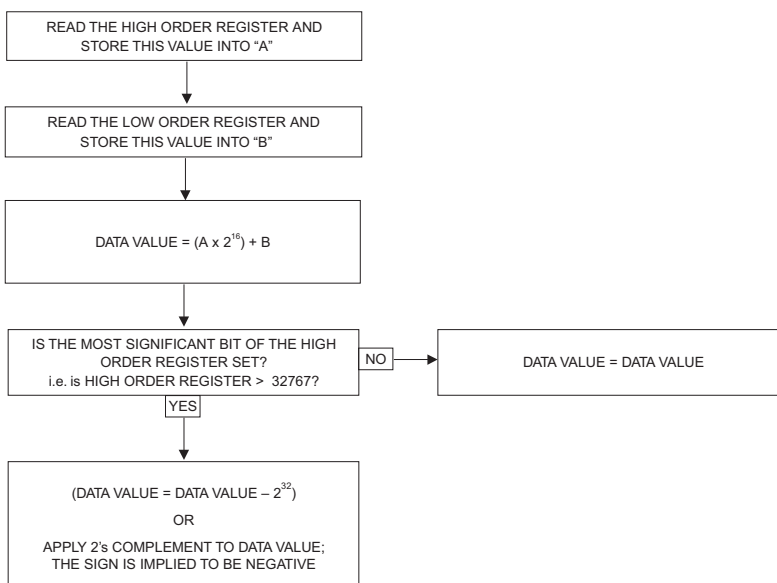The PQMII memory map contains data formatted as a long integer type, or 32 bits. Because the Modbus protocol maximum register size is 16 bits, the PQMII stores long integers in 2 consecutive register locations, 2 high order bytes, and 2 low order bytes. The data can be retrieved by the following logic:



Example

Reading a positive 3 Phase Real Power actual value from the PQMII:

Register	Actual Value	Description	Units & Scale	Format
02F0	004Fh	3 Phase Real Power (high)	0.01 × kW	F4
02F1	35D1h	3 Phase Real Power (low)	0.01 × kW	F4

Following the method described above, we have:

$$\begin{aligned}
 \text{DATA VALUE} &= (004F \times 2^{16}) + 35D1 && \text{hexadecimal} \\
 &= 5177344 + 13777 && \text{converted to decimal} \\
 &= 5191121 && \text{decimal}
 \end{aligned}$$

The most significant bit of the High Order register is not set, therefore the Data Value is as calculated. Applying the Units and Scale parameters to the Data Value, we multiply the Data Value by 0.01 kW. Therefore the resultant value of 3 Phase Real Power as read from the memory map is 51911.21 kW.

Reading a negative 3 Phase Real Power actual value from the PQMII:

Register	Actual Value	Description	Units & Scale	Format
02F0	FF3Ah	3 Phase Real Power (high)	0.01 × kW	F4
02F1	EA7Bh	3 Phase Real Power (low)	0.01 × kW	F4

Following the method described above:

DATA VALUE	= (FF3A × 2 ¹⁶) + EA7B	hexadecimal
	= (65338 × 2 ¹⁶) + 60027	converted to decimal
	= 4282051195	decimal

The most significant bit of the High Order register is set, therefore the Data Value is:

$$\text{DATA VALUE} = \text{DATA VALUE} - 2^{32} = 4282051195 - 4294967296 = -12916101$$

Multiply the Data Value by 0.01 kW according to the Units and Scale parameter. The resultant 3 Phase Real Power value read from the memory map is -129161.01 kW.

Pulse Input Application

Description

The PQMII has up to 4 Logical Switch Inputs that can be configured as Pulse Input Counters. Variables to consider when using the PQMII as a Pulse Input Counter are:

- **PQMII Switch Input A(D) Function:** Defines the functionality to be provided by the PQMII Switch Input. For use as a Pulse Input Counter, the PQMII Switch Input to be used must be assigned as either Pulse Input 1, 2, 3, or 4.
- **PQMII Switch Input A(D) Activation:** Set to Open or Closed. The PQMII will see the operation of the Switch Input in the state as defined by this parameter.
- **PQMII Switch Input A(D) Name:** Defines the name given to each of the Switch Inputs used. It is used as a label only and has no bearing on the operation of the Switch Input.
- **PQMII Pulse Input (Units):** Represents the name given to the base units that the PQMII Pulse Input(s) will be counting. It is used as a label only and has no bearing on the operation of the Pulse Input.
- **PQMII Pulse Input 1(4) Value:** This value is assigned to each counting operation as determined by the Switch Input.
- **PQMII Totalized Pulse Input:** Creates a summing register of the various Pulse Inputs configured. It can be configured for any combination of the PQMII Switch Inputs used as Pulse Inputs.

PQMII Pulse Input(s) with a Pulse Initiator using KYZ Terminals

Typical end receivers require a contact closure between KY or KZ based upon the type of receiver. Because of the multi-functional parameters of the PQMII Switch Inputs, the PQMII Switch Inputs are not labeled with KYZ markings as a dedicated pulse input device. However, the PQMII can still be used as a pulse counter. The PQMII Switch Inputs require a signal from the PQMII Switch Common terminal to be activated. The PQMII configured as a Pulse Counter can be used with Two-Wire Pulse Initiators. The Pulse Initiator must provide a dry contact operation. The Switch Common terminal of the PQMII is connected to the K terminal of the Pulse Initiator. The PQMII Switch Input assigned to count pulses can be connected to the Y or the Z terminal of the Pulse Initiator, depending on the operation of the Pulse Initiator, i.e. Open or Closed. The PQMII Pulse Input (value) must be assigned to match the pulse value of the Pulse Initiator, i.e. if the Pulse Initiator delivers a dry contact closure for every 100kWh, the PQMII Pulse Input (value) must also be set to 100.

Various operating parameters must be taken into account. The PQMII Switch Inputs require a minimum 100ms operation time to be detected. The duration of the contact operation can be indefinite. The internal Switch Input circuit of the PQMII is itself switched on and off at the times when the PQMII is reading the status of the Switch Inputs. Monitoring the input to one of the PQMII Switch Inputs will reveal a pulsed 24VDC waveform, not a constant signal. Standard wiring practice should be adhered to when making connections to the PQMII Switch Inputs, i.e. avoiding long runs of cable along current carrying conductors or any other source of EMI. An induced voltage on the Switch Input can cause malfunction of the Switch Input.

Pulse Totalizer Application

Description

The PQMII has up to 4 Logical Switch Inputs that can be configured as Pulse Input Counters. One common application of these Pulse Inputs is their use as an energy totalizer for more than one circuit. One PQMII can totalize input from up to 4 different sources and sum these results into a single register. Variables to consider when using the PQMII as a Pulse Input Counter are:

- **PQMII Switch Input A(D) Function:** Defines the functionality to be provided by the PQMII Switch Input. For use as a Pulse Input Counter, the PQMII Switch Input to be used must be assigned as either Pulse Input 1, 2, 3, or 4.
- **PQMII Switch Input A(D) Activation:** Set to Open or Closed. The PQMII will see the operation of the Switch Input in the state as defined by this parameter.
- **PQMII Switch Input A(D) Name:** Defines the name given to each of the Switch Inputs used. It is used as a label only and has no bearing on the operation of the Switch Input.
- **PQMII Pulse Input (Units):** Represents the name given to the base units that the PQMII Pulse Input(s) will be counting. It is used as a label only and has no bearing on the operation of the Pulse Input.
- **PQMII Pulse Input 1(4) Value:** This value is assigned to each counting operation as determined by the Switch Input.
- **PQMII Totalized Pulse Input:** This parameter creates a summing register of the various Pulse Inputs configured. It can be configured for any combination of the PQMII Switch Inputs used as Pulse Inputs.

Totalizing Energy from Multiple Metering Locations

The diagram below shows an example of a PQMII being used to totalize the energy from 4 other PQMIIs. PQMIIs 1 through 4 have each of their respective Aux1 relays configured for Pulse Output functionality (refer to 7.5: *Pulse Output* for details). The Switch Common output from PQMII#4 is fed to the common contact of the Aux1 relays on PQMIIs 1 through 4. The N/O contact of Aux1 for PQMIIs 1 through 4 will operate based upon the setup as described in the Pulse Output functionality section of the PQMII manual. The Totalized Pulse Input register of PQMII#4 can be set to sum the counts from Switch Inputs 1 through 4, thus giving a total energy representation for the 4 metering locations. The count value

for each Pulse Input on PQMII#4 can be set to match the Pulse Output Interval as programmed on each PQMII. For example, if PQMII#1 had a Pulse Output Interval = 100 kWhr, and PQMII#2 had a Pulse Output Interval = 10 kWhr, then Pulse Input 1 on PQMII#4 would have the Pulse Input Value set for 100 and Pulse Input 2 on PQMII#4 would have the Pulse Input Value set for 10.

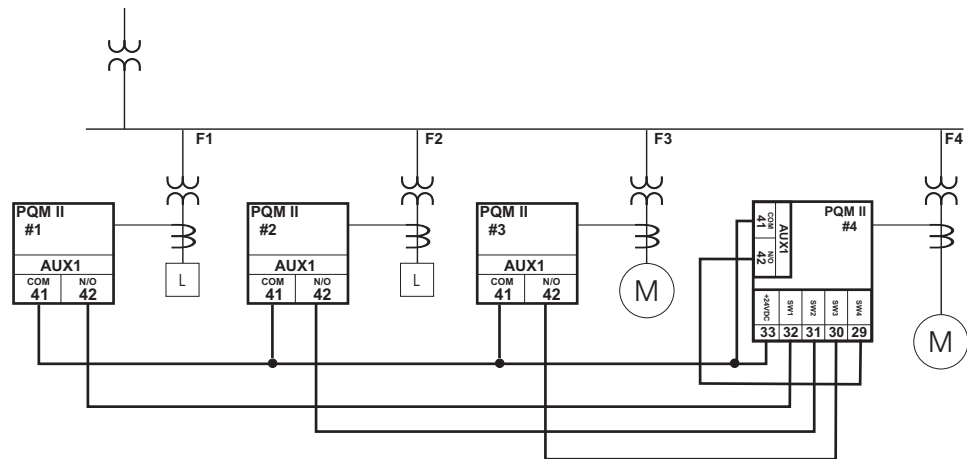


FIGURE 7-4: Multiple Metering Locations

Various operating parameters must be taken into account. The PQMII Switch Inputs require a minimum 100 ms operation time to be detected. Therefore the Pulse Output Width should be equal to or greater than 100 ms. The duration of the contact operation can be indefinite. The internal Switch Input circuit of the PQMII is switched on and off at the times when the PQMII is reading the Switch Inputs status. Monitoring the input to one of the PQMII Switch Inputs will reveal a pulsed 24 V DC waveform, not a constant signal. Standard wiring practice should be adhered to when making connections to the PQMII Switch Inputs, i.e. avoiding long runs of cable along current carrying conductors or any other source of EMI. An induced voltage on the Switch Input can cause malfunction of the Switch Input.



PQMII Power Quality Meter Chapter 8: Warranty

GE Multilin Device Warranty

Warranty Statement

General Electric Multilin (GE Multilin) warrants each device it manufactures to be free from defects in material and workmanship under normal use and service for a period of 24 months from date of shipment from factory.

In the event of a failure covered by warranty, GE Multilin will undertake to repair or replace the device providing the warrantor determined that it is defective and it is returned with all transportation charges prepaid to an authorized service centre or the factory. Repairs or replacement under warranty will be made without charge.

Warranty shall not apply to any device which has been subject to misuse, negligence, accident, incorrect installation or use not in accordance with instructions nor any unit that has been altered outside a GE Multilin authorized factory outlet.

GE Multilin is not liable for special, indirect or consequential damages or for loss of profit or for expenses sustained as a result of a device malfunction, incorrect application or adjustment.

For complete text of Warranty (including limitations and disclaimers), refer to GE Multilin Standard Conditions of Sale.



PQMII Power Quality Meter Chapter A: Appendix A

Mod 506: Capacitor Bank Switching

Description


















The standard PQM software has been altered to allow the four output relays to be used for 4 step capacitor bank switching.

Setpoints

The following messages have been added to the PQMII setpoint structure to accommodate this modification. The messages are located in setpoints page **S4 ALARMS** ⇒ **CONTROL** ⇒ **MOD 506 SETPOINTS** (after the **MISCELLANEOUS** heading).

PATH: SETPOINTS ⇒ **S4 ALARMS/CONTROL** ⇒ **MOD 506 SETPOINTS**

<div>■ MOD 506 [▷] SETPOINTS</div>		STEP 1 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
	MESSAGE	STEP 1 PICKUP ≥ +600 kvar	Range: 0.1 to 6500.0 kvar in steps of 0.1
	MESSAGE	STEP 1 DROPOUT ≤ 0.0 kvar	Range: -3250.0 to 3250.0 kvar in steps of 0.1
	MESSAGE	STEP 1 PICKUP DELAY: 1.0 min	Range: 0.1 to 60.0 min in steps of 0.1
	MESSAGE	STEP 1 DISABLE TIME: 5.0 min	Range: 0.1 to 60.0 min in steps of 0.1
	MESSAGE	STEP 2 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
	MESSAGE	STEP 2 PICKUP ≥ +600 kvar	Range: 0.1 to 6500.0 kvar in steps of 0.1

MESSAGE		STEP 2 DROPOUT ≤ 0.0 kvar	Range: -3250.0 to 3250.0 kvar in steps of 0.1
MESSAGE		STEP 2 PICKUP DELAY: 1.0 min	Range: 0.1 to 60.0 min in steps of 0.1
MESSAGE		STEP 2 DISABLE TIME: 5.0 min	Range: 0.1 to 60.0 min in steps of 0.1
MESSAGE		STEP 3 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		STEP 3 PICKUP ≥ +600 kvar	Range: 0.1 to 6500.0 kvar in steps of 0.1
MESSAGE		STEP 3 DROPOUT ≤ 0.0 kvar	Range: -3250.0 to 3250.0 kvar in steps of 0.1
MESSAGE		STEP 3 PICKUP DELAY: 1.0 min	Range: 0.1 to 60.0 min in steps of 0.1
MESSAGE		STEP 3 DISABLE TIME: 5.0 min	Range: 0.1 to 60.0 min in steps of 0.1
MESSAGE		STEP 4 RELAY: OFF	Range: Alarm, Aux1, Aux2, Aux3, Off
MESSAGE		STEP 4 PICKUP ≥ +600 kvar	Range: 0.1 to 6500.0 kvar in steps of 0.1
MESSAGE		STEP 4 DROPOUT ≤ 0.0 kvar	Range: -3250.0 to 3250.0 kvar in steps of 0.1
MESSAGE		STEP 4 PICKUP DELAY: 1.0 min	Range: 0.1 to 60.0 min in steps of 0.1
MESSAGE		STEP 4 DISABLE TIME: 5.0 min	Range: 0.1 to 60.0 min in steps of 0.1
MESSAGE		SYSTEM STABILIZATION TIME: 5.0 min	Range: 0.1 to 60.0 min in steps of 0.1
MESSAGE		LOW VOLTAGE LEVEL: 100 V	Range: 30 to 65000 V in steps of 10 or OFF
MESSAGE		LOW VOLTAGE DETECT DELAY: 1.0 s	Range: 0.5 to 600.0 s in steps of 0.5
MESSAGE		STEP PRIORITY: 1, 2, 3, 4	Range: 24 combinations

- **STEP 1(4) RELAY:** The state of the output relay assigned in this message will be controlled by the STEP it is assigned to. Once a relay has been assigned to a particular step, it will not activate upon any other PQMII conditions (i.e. pulse output, alarm, etc.). If a particular relay has not been assigned to any STEP, it will function as per standard PQMII implementation.
- **STEP 1(4) PICKUP:** When the three-phase kvar value is positive and it becomes equal to or exceeds the value set in this setpoint the output relay assigned to the STEP will energize providing the conditions in all other setpoints are met.

- **STEP 1(4) DROPOUT:** When the three-phase kvar value becomes less than or equal to the value set in this setpoint the output relay assigned to the STEP will de-energize. Since over compensation is possible, the dropout value can be set to negative vars.
- **STEP 1(4) PICKUP DELAY:** The STEP will turn on after the delay set in this setpoint has elapsed assuming all other conditions have been met.

This delay setting will start counting down once the **SYSTEM STABILIZATION TIME** setting has elapsed.

STEP 1(4) DISABLE TIME: When STEP turns off, it is not allowed to turn back on until the time set in this setpoint has elapsed. This allows the capacitors to discharge before being re-energized again.

- **SYSTEM STABILIZATION TIME:** When any action is performed (turning STEPS on/off or low voltage is detected), the system must be allowed to stabilize for the time set in this setpoint before any further actions can be performed. This time is necessary to allow the system to stabilize without the capacitors trying to recharge
- **LOW VOLTAGE LEVEL:** When the system voltage (average three-phase voltage) becomes equal to or less than this setpoint, all STEPS are turned off. Upon recovery (three-phase voltage is greater than this setpoint) the time set in the **SYSTEM STABILIZATION TIME** setpoint must have elapsed before any actions will be performed. If this feature is not required, set it to "Off".
- **LOW VOLTAGE DETECT DELAY:** In some cases where noise or spikes are present on the line it may not be desirable to detect low voltage right away, therefore, this setpoint can be used to delay the detection until voltage is definitely low.
- **STEP PRIORITY:** The **STEP PRIORITY** setpoint determines the sequence the STEPS are allowed to turn on in a case where the condition may be satisfied by more than one STEP. Therefore, the STEP with the highest priority will be energized first. If the STEP with highest priority is already energized, the STEP with second highest priority will be used, and so forth. The STEP priority is set from highest to lowest (left to right) when viewing this setpoint. For example, "1,2,3,4" signifies that STEP 1 has the highest priority and STEP 4 has the lowest priority. Note that only one STEP is allowed to turn on or off at a time.

Enervista PQMII setup software does not support any MODs. The settings and metering values under this MOD can be accessed using the unit front panel or the Modbus analyzer tools.

Actual Values

The following messages have been added to the PQMII actual values structure to accommodate this modification. The messages are located in actual values page **A2 STATUS ⇒ MOD 506 ACTUAL VALUES**.

PATH: ACTUAL VALUES ⇒ A2 STATUS ⇒ MOD 506 ACTUAL VALUES

<div>■ MOD 506 [▷]</div> <div>ACTUAL VALUES</div>	<div><div></div><div></div></div> <div><div>PICKUP TIMERS (min)</div><div>0.00.00.00.0</div></div>
<div>MESSAGE</div>	<div><div></div><div></div></div> <div><div>DISABLE TIMERS (min)</div><div>0.00.00.00.0</div></div>
<div>MESSAGE</div>	<div><div></div><div></div></div> <div><div>SYSTEM STABILIZATION</div><div>TIMER: 5.0 min</div></div>
<div>MESSAGE</div>	<div><div></div><div></div></div> <div><div>LOW VOLTAGE DETECT</div><div>TIMER: 0.0 s</div></div>

- **PICKUP TIMERS:** These timers are loaded with the [STEP 1\(4\) PICKUP DELAY](#) setpoint settings when the required conditions are met. The timers are displayed beginning with STEP 1 on the left and ending with STEP 4 on the right.
- **DISABLE TIMERS:** These timers are loaded with the [STEP 1\(4\) DISABLE TIME](#) setpoint settings when the required conditions are met. The timers are displayed beginning with STEP 1 on the left and ending with STEP 4 on the right.
- **SYSTEM STABILIZATION TIMER:** This timer is continuously loaded with the [SYSTEM STABILIZATION TIME](#) setpoint setting and will only start to count down to 0 when the system becomes stable.
- **LOW VOLTAGE DETECT TIMER:** This timer is loaded with the [LOW VOLTAGE DETECT DELAY](#) setpoint setting when low voltage is detected and will start to count down to 0.

If the power to the PQMII is removed all timers are cleared to 0.

Conditions Required to Energize a STEP

The following conditions are required to energize STEP 1. The same conditions apply to STEPS 2 through 4.

- Three-phase voltage is greater than the [LOW VOLTAGE LEVEL](#) setting.
- The system kvars are equal to or have exceeded the setting in [STEP 1 PICKUP](#) setpoint.
- The programmed [SYSTEM STABILIZATION TIME](#) has elapsed.
- The programmed [STEP 1 PICKUP DELAY](#) has elapsed.
- STEP 1 has the highest priority as set in the [STEP PRIORITY](#) setpoint or all other STEPS do not meet all of the above conditions.

Additions to Modbus Memory Map

The following two sections are added to the Modbus Memory Map for Mod 506..

GROUP	ADDR (HEX)	DESCRIPTION	RANGE	STEP VALUE	UNITS and SCALE	FOR-MAT	FACTORY DEFAULT
MOD 506 ACTUAL VALUES	0E10	Step 1 Pickup Timer	---	---	0.1 x	F1	---
	0E11	Step 2 Pickup Timer	---	---	0.1 x	F1	---
	0E12	Step 3 Pickup Timer	---	---	0.1 x	F1	---
	0E13	Step 4 Pickup Timer	---	---	0.1 x	F1	---
	0E14	Step 1 Disable Timer	---	---	0.1 x	F1	---
	0E15	Step 2 Disable Timer	---	---	0.1 x	F1	---
	0E16	Step 3 Disable Timer	---	---	0.1 x	F1	---
	0E17	Step 4 Disable Timer	---	---	0.1 x	F1	---
	0E18	System Stabilization	---	---	0.1 x	F1	---
	0E19	Low Voltage Detect	---	---	0.1 x	F1	---
MOD 506 SETPOINTS	1300	Step 1 Relay	0 to 4	1	---	F1	0 = OFF
	1301	Step 1 Pickup Level	1 to 65000	1	kvar	F1	6000=600.0 kvar
	1302	Step 1 Dropout Level	-32000 to 32000	1	kvar	F2	0=0.0 kvar
	1303	Step 1 Pickup Delay	1 to 600	1	min	F1	10=1.0 min
	1304	Step 1 Disable Time	1 to 600	1	min	F1	50=5.0 min
	1305	Step 2 Relay	0 to 4	1	---	F1	0 = OFF
	1306	Step 2 Pickup Level	1 to 65000	1	kvar	F1	6000=600.0 kvar
	1307	Step 2 Dropout Level	-32000 to 32000	1	kvar	F2	0=0.0 kvar
	1308	Step 2 Pickup Delay	1 to 600	1	min	F1	10=1.0 min
	1309	Step 2 Disable Time	1 to 600	1	min	F1	50=5.0 min
	130A	Step 3 Relay	0 to 4	1	---	F1	0 = OFF
	130B	Step 3 Pickup Level	1 to 65000	1	kvar	F1	6000=600.0 kvar
	130C	Step 3 Dropout Level	-32000 to 32000	1	kvar	F2	0=0.0 kvar
	130D	Step 3 Pickup Delay	1 to 600	1	min	F1	10=1.0 min
	130E	Step 3 Disable Time	1 to 600	1	min	F1	50=5.0 min
	130F	Step 4 Relay	0 to 4	1	---	F1	0 = OFF
	1310	Step 4 Pickup Level	1 to 65000	1	kvar	F1	6000=600.0 kvar
	1311	Step 4 Dropout Level	-32000 to 32000	1	kvar	F2	0=0.0 kvar
	1312	Step 4 Pickup Delay	1 to 600	1	min	F1	10=1.0 min
	1313	Step 4 Disable Time	1 to 600	1	min	F1	50=5.0 min
	1314	System Stabilization	1 to 600	1	min	F1	50=5.0 min
	1315	Low Voltage Detect Level	30 to 65000	1	V	F1	100 V
	1316	Low Voltage Detect Delay	5 to 6000	1	s	F1	10=1.0 s
	1317	Step Sequence	0 to 23	1	---	F42	0="1,2,3,4"

The following memory map format has also been added:

CODE	DESCRIPTION	BITMASK
F42	Step Sequence Priority	FFFF
	0 = "1, 2, 3, 4"	---
	1 = "1, 2, 4, 3"	---
	2 = "1, 3, 2, 4"	---
	3 = "1, 3, 4, 2"	---

CODE	DESCRIPTION	BITMASK
	4 = "1, 4, 2, 3"	---
	5 = "1, 4, 3, 2"	---
	6 = "2, 1, 3, 4"	---
	7 = "2, 1, 4, 3"	---
	8 = "2, 3, 1, 4"	---
	9 = "2, 3, 4, 1"	---
	10 = "2, 4, 1, 3"	---
	11 = "2, 4, 3, 1"	---
	12 = "3, 1, 2, 4"	---
	13 = "3, 1, 4, 2"	---
	14 = "3, 2, 1, 4"	---
	15 = "3, 2, 4, 1"	---
	16 = "3, 4, 1, 2"	---
	17 = "3, 4, 2, 1"	---
	18 = "4, 1, 2, 3"	---
	19 = "4, 1, 3, 2"	---
	20 = "4, 2, 1, 3"	---
	21 = "4, 2, 3, 1"	---
	22 = "4, 3, 1, 2"	---
	23 = "4, 3, 2, 1"	---

Revision History

Release Dates

Table 1: Release Dates

MANUAL	GE PART NO.	PQMII REVISION	RELEASE DATE
GEK-106435	1601-0118-A1	1.0x	17 September 2003
GEK-106435A	1601-0118-A2	1.0x	06 November 2003
GEK-106435B	1601-0118-A3	2.0x	01 December 2003
GEK-106435C	1601-0118-A4	2.0x	02 December 2003
GEK-106435D	1601-0118-A5	2.1x	18 June 2004
GEK-106435E	1601-0118-A6	2.2x	Not released
GEK-106435F	1601-0118-A7	2.2x	15 May 2006

Table 1: Release Dates

MANUAL	GE PART NO.	PQMII REVISION	RELEASE DATE
GEK-106435G	1601-0118-A8	2.2x	22 February 2007
GEK-106435H	1601-0118-A9	2.2x	1 October 2007
GEK-106435J	1601-0118-AA	2.2x	4 March 2008
GEK-106435K	1601-0118-AB	2.2x	25 November 2008
GEK-106435L	1601-0118-AC	2.2x	1 April 2009
GEK-106435M (GEK-106475D)	1601-0118-AD (1601-0130-A5)	2.2x	21 May 2010
GEK-106435N (GEK-106475E)	1601-0118-AE (1601-0130-A6)	2.2x	16 March 2012
GEK-106435P	1601-0118-AF	2.2x	15 January 2013

Release Notes

Table 2: Major Updates for GEK-106435P

PAGE (AF)	DESCRIPTION
Cover	Change address, ISO logo, and inside cover template
5.20	Updated S2 System Setup—VT Wiring

Table 3: Major Updates for GEK-106435N (GEK-106475E)

SECT (AD)	SECT (AE)	CHANGE	DESCRIPTION
Title	Title	Update	Manual part number to 1601-0120-AE (1601-0130-A6)
1.5.2	1.5.2	Added	MOD 525 addition
1.5.3	1.5.3	Update	RS485 Accessory update

Table 4: Major Updates for GEK-106435M (GEK-106475D)

SECT (AC)	SECT (AD)	CHANGE	DESCRIPTION
Title	Title	Update	Manual part number to 1601-0120-AD (1601-0130-A5)
1.5.2	1.5.2	Update	MOD 506 update
A.1.2	A.1.2	Added	Note added

Table 5: Major Updates for GEK-106435L

SECT (AB)	SECT (AC)	CHANGE	DESCRIPTION
Title	Title	Update	Manual part number to 1601-0120-AC
---	---	Update	New Communications Guide (formerly Ch.7)
1.6.1	1.6.1	Update	Revised Current Inputs section
5.5.1	5.5.1	Added	Note added
6.4.5	6.4.5	Update	SAG Voltage references

Table 6: Major Updates for GEK-106435J

SECT (A9)	SECT (AA)	CHANGE	DESCRIPTION
Title	Title	Update	Manual part number to 1601-0120-AA
All	All	Update	Re-establish all cross-references

Table 7: Major Updates for GEK-106435H

SECT (A8)	SECT (A9)	CHANGE	DESCRIPTION
Title	Title	Update	Manual part number to 1601-0120-A9
8.6.4	8.6.4	Update	(p.19) Time Stamping - sampling time accuracy

Table 8: Major Updates for GEK-106435G

PAGE (A7)	SECT (A8)	CHANGE	DESCRIPTION
Title	Title	Update	Manual part number to 1601-0120-A8
	1.6.1	Update	Voltage Input Specification change
	5.2.6	Text Addn.	Modbus time and date setting
	2.2.8	Text Change	Switch Input

Table 9: Major Updates for GEK-106435F

PAGE (A5)	PAGE (A7)	CHANGE	DESCRIPTION
Title	Title	Update	Manual part number to 1601-0120-A7
7-9	7-9	Update	Updated Modbus Memory Map
7-58	7-58	Update	Updated Default Variations section
7-59	7-59	Update	Updated Binary Input/ Binary Input Change section
7-62	7-62	Update	Updated Analog Input/Output Change section

Index

A

ACCESSORIES	1-13
ACTUAL VALUES	
main menu	6-1
viewing with EnerVista PQMII setup software	4-12
ALARM LED	3-2
ALARM RELAY	
description	2-14
LED indicator	3-3
setpoints	5-32
ALARMS	
actual values	6-18
introduction	1-5
setpoints	5-34
ANALOG INPUT	
actual values	6-17
description	2-17
multiplexing	2-16
setpoints	5-25
simulation	5-53
ANALOG OUTPUTS	
connection	2-17
description	2-16
parameters	5-23
setpoints	5-21
simulation	5-52
specifications	1-15
APPLICATION NOTES	7-1
APPLICATIONS OF THE PQMII	1-2
AUXILIARY RELAYS	
description	2-14
LED indicators	3-3
setpoints	5-32

B

BAUD RATE	5-8
-----------------	-----

C

CALCULATION PARAMETERS	5-10
CAPACITOR BANK SWITCHING	5-44, A-1
CHANGES TO MANUAL	A-8, A-9
CLEAR DATA	5-12
CLOCK	
actual values	6-21
clock not set alarm	5-50
specifications	1-19
COMMUNICATIONS	
description	2-17, 2-18, 2-19
failure alarm	5-50
introduction	1-5, 1-7
LEDs	3-2

options	1-7
RS232	2-19, 4-2, 4-7
RS485	1-7, 2-17, 2-18, 4-3, 4-7
setpoints	5-8
specifications	1-19
wiring	4-2, 4-3
CONTROL POWER	2-13
description	2-2
on label	1-14
options	1-19
specifications	5-11
COST	6-30
CPU SPEED	6-22
CREST FACTOR	
CTs	2-13
description	5-19
setpoints	1-15
specifications	
CURRENT ALARMS	5-34
CURRENT INPUTS	2-13
description	5-19
setpoints	1-15
specifications	
CURRENT METERING	6-4
actual values	5-12
clearing values	
CURRENT TRANSFORMERS	
see entry for CTs	5-37, 6-5
CURRENT UNBALANCE	7-8
CYCLING POWER	

D

DATA LOGGER	7-17
accessing	6-24
actual values	7-16
implementation	7-17
interpreting	5-50
memory full alarm	7-20
parameters	5-30
setpoints	4-16
with software	5-9
DATE	
DEFAULT MESSAGES	3-8
adding	5-5
default message time	3-8
deleting	3-8
description	5-13
DEFAULT SETPOINTS	
DEMAND	6-14
actual values	5-10
calculation methods	5-12
clearing	5-46
setpoints	1-18
specifications	
DIELECTRIC STRENGTH TESTING	2-19
DISPLAY	3-1
DISPLAY FILTERING	5-5
DNP COMMUNICATIONS	

setpoints	5-8
-----------------	-----

E

ENERGY	
actual values	6-12
clearing	5-12
cost	5-11
ENERVISTA PQMII SETUP SOFTWARE	
see entry for SOFTWARE	
ENERVISTA VIEWPOINT WITH THE PQMII	4-21
ENTER KEY	3-4
ESCAPE KEY	3-4
EVENT RECORDER	7-1
accessing	7-6
actual values	6-24
applications	7-1
clearing	5-13
list of events	6-25, 7-1
setpoints	5-13
EXPANSION	1-5
EXTERNAL CONNECTIONS	2-3
EXTRACT FUNDAMENTAL	5-10

F

FACTORY MODIFICATIONS	1-13
FEATURES	1-2, 1-4, 1-5
FIRMWARE	
upgrading via EnerVista PQMII setup software	4-8
upgrading via HyperTerminal	7-8
FREQUENCY METERING	
actual values	6-15
clearing values	5-13
FREQUENCY RELAYS	
setpoints	5-40
FRONT PANEL	3-1

H

HARMONICS	
introduction	1-9
specifications	1-16
viewing with software	4-13
HI-POT TESTING	2-19
HYPERTERMINAL	7-8
communications	7-10
interfacing with the PQMII	7-8

I

IED SETUP	4-4
INTRODUCTION	1-1

K

KEYPAD	3-4, 3-6
--------------	----------

L

LABEL	2-2
LED INDICATORS	3-2

M

MENU KEY	3-4
MESSAGE KEYS	3-5
METERING	
introduction	1-5
specifications	1-17
MISCELLANEOUS ALARMS	5-50
MOD 506	A-1
MODBUS COMMUNICATIONS	
address	5-8
reading long integers	7-21
MODEL INFORMATION	6-30
MODEL NUMBER (ON LABEL)	2-2
MODIFICATIONS	1-13, 6-30
MOUNTING	2-1

O

OPTIONS	5-18
ORDER CODES	1-13, 6-30
OUTPUT RELAYS	
alarm relay	2-14, 5-32
auxiliary relays	2-14
description	2-14
introduction	1-7
setpoints	5-32
specifications	1-16
OVERCURRENT	5-36
OVERFREQUENCY	
setpoints	5-40
specifications	1-18
OVERVOLTAGE	
setpoints	5-37
specifications	1-18

P

PACKAGING	1-21
PARITY	5-8
PHASE CTs	
see entry for CTs	
PHASE OVERCURRENT	5-36
PHASE REVERSAL	5-38
PHASE UNDERCURRENT	5-35
PHASORS	
actual values	6-8
applications	7-11
PHYSICAL DIMENSIONS	2-1
POWER ALARMS	
setpoints	5-41
POWER ANALYSIS	
introduction	1-8

with EnerVista PQMII setup software	4-13
POWER FACTOR	
setpoints	5-43
specifications	1-18
POWER METERING	
actual values	6-8
clearing values	5-13
conventions	6-12
POWER QUALITY	6-22
PRODUCT LABEL	2-2
PRODUCT OPTIONS	5-18
PROGRAM LED	3-2
PROGRAMMABLE MESSAGE	
actual values	6-21
setpoints	5-17
PULSE COUNTER	6-16
PULSE INPUT	
actual values	6-16
applications	7-23
clearing values	5-13
setpoints	5-48
specifications	1-16
PULSE OUTPUT	
applications	7-14
setpoints	5-28
specifications	1-15
PULSE TOTALIZER APPLICATION	7-24

R

RESET KEY	3-4, 3-5
REVISION HISTORY	2-2
RS232 COMMUNICATIONS	
configuring with EnerVista PQMII setup	4-7
connections	2-19, 4-2
setpoints	5-8
RS485 COMMUNICATIONS	
configuring with EnerVista PQMII setup	4-7
connections	2-17, 2-18, 4-3
introduction	1-7
setpoints	5-7
RX1 LED	3-2
RX2 LED	3-3

S

SECURITY	3-7
SELF-TEST LED	3-2
SERIAL NUMBER	2-2, 6-31
SERVICE PASSCODE	5-54
SETPOINT ACCESS	
security	3-7
through switch inputs	2-15
SETPOINTS	
entering with EnerVista PQMII setup software	4-11
entry methods	5-1
loading factory default	5-13
loading from a file	4-10
main menu	5-2
saving to a file	4-8
setpoint access	5-6
SIMULATION	

current	5-51
voltage	5-51
SIMULATION LED	3-2
SINGLE LINE DIAGRAM	1-3
SOFTWARE	
actual values	4-12
description	1-12
entering setpoints	4-11
hardware requirements	4-2
installation	4-3
loading setpoints	4-10
overview	4-1
saving setpoints	4-8
serial communications	4-7
SPECIFICATIONS	1-15
STATUS INDICATORS	3-2
SWITCH INPUTS	
actual values	6-20
description	2-14
introduction	1-7
setpoints	5-27
simulation	5-53
specifications	1-15
wiring	2-15
SWITCH STATUS	6-20

T

TARIFF PERIOD	5-11
TEST LEDs	5-51
TEST RELAYS	5-51
THD	
actual values	6-22
clearing values	5-13
setpoints	5-39
THDF	6-22
TIME	5-9
TIME RELAY	5-49
TOTAL HARMONIC DISTORTION	
see entry for THD	
TRACE MEMORY	
introduction	1-10
setpoints	5-14
specifications	1-16
triggered trace memory resolution	7-13
with software	4-14
TRANSDUCER I/O	
see entries for ANALOG INPUT and ANALOG OUTPUT	
TRANSFORMER HARMONIC DERATING FACTOR	6-22
TX1 LED	3-2
TX2 LED	3-3

U

UNDERCURRENT	5-35
UNDERFREQUENCY	
setpoints	5-40
specifications	1-18
UNDERVOLTAGE	
setpoints	5-36
specifications	1-17

UPGRADING FIRMWARE	4-8
--------------------------	-----

V

VALUE KEYS	3-6
VERSIONS	6-30
VOLTAGE ALARMS	
setpoints	5-34
VOLTAGE DISTURBANCE RECORDER	
actual values	6-28
clearing	5-13
settings	5-30
specifications	1-16, 1-18
VOLTAGE INPUTS	
description	2-13
setpoints	5-19
specifications	1-15
VOLTAGE METERING	
actual values	6-6
clearing values	5-12
VOLTAGE TRANSFORMERS	
see entry for VTs	
VOLTAGE UNBALANCE	5-37, 6-7
VT RATIO	5-19
VT WIRING	5-19
VTs	
description	2-13
setpoints	5-19
specifications	1-15

W

WARRANTY	8-1
WAVEFORM CAPTURE	
introduction	1-9
with software	4-13
WIRING	2-5, 2-6, 2-8, 2-9, 2-10, 2-11

